

SPARES LIST No. CCE 900J
(Includes CCE 903J)



LUCAS

C.A.V.

Quality

EQUIPMENT

&

SPARE PARTS



B.M.C. — 1960

CARS AND COMMERCIAL VEHICLES

AUSTIN • AUSTIN-HEALEY • M.G.
MORRIS • PRINCESS • RILEY
WOLSELEY

B.M.C. — 1960

VEHICLE SUMMARY

CARS AND COMMERCIAL VEHICLES

Austin	Page	Austin	Page
'Seven 850'	4	A55 Half Ton Van and Pick-up Truck ...	12
A35 Van and 'Countryman'	4	'101' Van	13
A40 Saloon and 'Countryman'	4	10/15 cwt. 152 'Omnivan', 'Omnitruck' and 'Omnicoach'	13-14
A55 'Cambridge' Mk. II	5	'Gipsy'	12
'Metropolitan'	5	1 ton LD1A (Petrol) and LDO1A (Diesel)	14
A99 'Westminster'	5	1½ ton LD2A (Petrol) and LDO2A (Diesel)	14
Hire Car and Taxi	6	'301' Range	14
Austin-Healey		Series IV FG Trucks (200, 304 and 404 Models)	15
'Sprite'	6	Series III Trucks (303, 403 and 503 Models)	15
'3000'	6	Series III Prime Mover, Tipper and Petrol Tanker	15
M.G.		Series IV FF '504' 5 ton and '702' 7 ton Trucks	16
MGA 1600 and Twin Cam	7	Series IV FF Petrol Tanker, Coach and Prime Mover	16
'Midget' Mk. III	7	B.M.C.	
Morris		Ambulance and Hearse Chassis	11
'Mini-minor 850'	4	Morris	
'Minor 1000'	7-8	Quarter Ton Van and Pick-up	12
'Oxford' Series V	8	Quarter Ton G.P.O. Van	13
'Oxford Traveller' and 'Hindustan' ...	8	Half Ton Van and Pick-up	13
'Princess'		'JB' Van	13
3 litre	10-11	10/15 cwt. J2 Light Van, Pick-up Truck and 'Minibus'	13-14
4 litre Saloon and Limousine	11	1 ton LD1 (Petrol) and LDO1 (Diesel) ...	14
Riley		1½ ton LD2 (Petrol) and LDO2 (Diesel) ...	14
'One-Point-Five'	8-9	LC5 (Petrol) and LCO5 (Diesel)	14
'Four Sixty-Eight'	9	Series IV FG 1½, 2, 3 and 4 ton Trucks ...	15
Wolseley		Series III 3, 4 and 5 ton Trucks	15
'Fifteen Hundred'	9	Series III Prime Mover, Tipper and Petrol Tanker	15
'Fifteen Sixty'	10	Series IV FF 5 and 7 ton Trucks	16
'Six Ninety-Nine'	10	Series IV FF Petrol Tanker, Coach and Prime Mover	16

LUCAS



INDEX

Equipment and Spare Part Details for

B. M. C.

1960 CARS & COMMERCIAL VEHICLES

	Page	LAMPS—continued	Page
AMMETERS	17	RADIATOR BADGE	34
BULB HOLDERS, PANEL LIGHT	40	REVERSE	34
COILS, IGNITION	19	ROOF	34
CONTROL BOXES	20-21	SIDE	32-34
DISTRIBUTORS	18-19	SIDE FLASHER	32-33
EQUIPMENT SPECIFICATIONS	4-16	STEP	34
FLASHER UNITS	17	STOP TAIL	35
FUSE BOXES (LUCAS)	17	STOP TAIL AND FLASHER	35-38
GENERATORS	20-21	STOP TAIL AND NUMBER PLATE	37
HORNS	25	TAXI SIGN	34
HORN PUSH AND DIPPER SWITCHES	17	MIRRORS	25
JUNCTION BOXES	17	OVERDRIVE EQUIPMENT	41
LAMPS		REFLEX REFLECTORS	40
BOOT	34	RELAYS	25
BULBS	49	SCREENJET	39
DASH	34	STARTING MOTORS (LUCAS)	22-24
DRIVING	39	STEERING COLUMN CONTROLS	26-27
FLASHER	31	SUPPRESSOR	19
FOG	39	SWITCHES (LUCAS)	46-48
GEAR INDICATOR	40	SWITCH KNOBS	49
HEAD (PF700 AND S700)	30	TERMINAL BLOCK	17
HEAD (F700 AND P700)	28-29	TRAFFICATORS	39
INTERIOR	34	WARNING LIGHTS	40
MAP READING	34	WINDSHIELD WIPERS	42-45
NUMBER PLATE	38		

C.A.V. — FUEL INJECTION AND ELECTRICAL EQUIPMENT

	Page		Page
FILTER	54	NOZZLE HOLDERS	54
FUSE BOX	50	STARTING MOTORS	50
GOVERNORS	52-53	SWITCHES	50 & 55
INJECTION PUMPS	51	VENTURI UNITS	52

This publication incorporates NVS 1634, NVS 1636, NVS 1642, NVS 1648, NVS 1653, NVS 1656, NVS 1664 and NVS 1668, which should be destroyed.



JOSEPH LUCAS (SALES & SERVICE) LTD · BIRMINGHAM 18 · ENGLAND

June 1960

Printed in England



EQUIPMENT SPECIFICATIONS

Austin 'Seven 850' (A2S7) Morris 'Mini-minor 850'

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	GLT7A	—	Lamps, Head—continued			Switches—continued		
Battery (later fitment)	BLT7A	—	Export Sweden	F700	58456A/B	Heater	3R	78339A
Bulb holder, panel light and parcel shelf	—	554734	Export U.S.A.	F700	*58497A	Knob	—	54331278
Bulb	—	987			(58493)	Ignition	S45	31899A
Coil, ignition	LA12	*45113D (45111)	Number plate	467-2	53101H/J	Lighting	S7SA	31788B
Control box	RB106-2	37290D	'Mini-minor 850' (later)	467	53837A/B	Starting motor	ST18	76438B
Distributor	DM2P4	40648D/H	De Luxe	467-2	53093H/J	Stop lamp	HL2	31802D
Distributor (low grade fuel, special orders)	DM2P4	40707A/D	'Mini-minor 850' De Luxe (later)	467	53836A/B	Windshield wiper	57SA	31780D
Flasher unit	FL5	35020A	Side and flasher (Export)	594	52338A	Warning lights:		
Fuse box	4F1	033283	Stop tail and flasher			Bulb holder, ignition and oil pressure	—	863511
Generator	C40	22704A	Left hand	647	53797A/B	Bulb	—	987
Generator (alternative)	C40-I	22700D	Right hand	647	53798A/B	Bulb holder, main beam	—	554734
Horn	HF1849	70141B	Left hand (North America)	647	53799A/B	Bulb	—	987
			Right hand (North America)	647	53800A/B	Windshield wipers:		
			Sleeve, Lucas connector			Motor	DR2	75385B
			14 amp.	—	54190042	Wheelbox	—	72728A
			35 amp.	—	54190043	Crosshead and rack (cut to 23 3/4")	—	743209
			14 amp. twin	—	54190119	Outer casing, motor to wheelbox	—	54711059
			Starting motor	M35G-I	*25075A (25071)	Outer casing, wheelbox to wheelbox	—	54711060
			Starting motor (alternative)	M35H	25071A/B	Outer casing, short, wheelbox	—	54711555
			Steering column control (Austin)	CC5	†33543A	Arm, right hand drive	—	54711556
			Slip ring	—	‡38269A	Arm, left hand drive	—	738734
			Switches:			Blade	—	54711614
			Dipper	21SA	31800A	Blade (later)	—	
			Flasher	37SA	31945B			

Austin A35 Van (AV5) and 'Countryman' (AP5)

Battery	BT7A	—	Lamps, Head—continued			Switches—continued		
Bulb holder, courtesy light	—	863511	Export Sweden	F700	58456A/B	Windshield wiper	PS6	*31345B (31356)
Bulb	—	987	Export U.S.A.	F700	*58497A (58493)	Knob, choke	—	325882
Bulb holder, panel light	—	554734			(58493)	Knob, starter	—	325883
Bulb	—	987	Number plate	467-2	53101H/J	Trafficator	SP80	54045E
Coil, ignition	LA12	*45053M (45074)	Side	516	*52182E (52436)	Warning lights:		
Control box	RB106-2	37183K/L	Stop tail	488	53178H	Bulb holder, ignition	—	863511
Distributor (high compression)	DM2P4	*40561H/L (40675)	Reflex reflector	RER25	57120A	Bulb	—	987
Distributor (low compression)	DM2P4	*40569F/K (40674)	Starting motor	M35G-I	25022Q	Bulb holder, main beam	—	554734
Fuse box	SF6	033240	Steering column control	CC5	†32915B	Bulb	—	987
Generator	C40	22704A	Switches:			Bulb holder, oil pressure	—	863511
Generator (alternative)	C40-I	22700D	Heater (optional)	CHR1	78260A	Bulb	—	987
Horn	WT618	69046F	Knob	—	768473	Windshield wipers:		
			Heater (optional, later)	3R	78356A	Motor	4W	75332A
			Knob	—	54332086	Wheelbox	—	72592K
			Ignition	S45	31403H	Crosshead and rack	—	744833
			Lighting and dipper	CRS3	34092D	Outer casing, motor to wheelbox	—	744838
			Panel	PS6	*31342B (31356)	Outer casing, wheelbox to wheelbox	—	739937
			Starting motor	ST19-2	76423A	Outer casing, short, wheelbox	—	740031
			Coupling	—	764428	Arm, left hand drive	—	737763
			Stop lamp	HL2	31440F	Arm, right hand drive	—	737762
			Trafficator	SD84	*31367B/D (31311)	Blade	—	727803

Austin A40 Saloon (A2S6) and 'Countryman' (AAW6)

Battery	BT7A	—	Lamps—continued			Warning lights:		
Bulb holder, courtesy light	—	863511	Number plate	534	53705A	Bulb holder, ignition and oil pressure	—	863511
Bulb	—	987	Number plate (later)	649	53893A/B	Bulb	—	987
Bulb holder, panel light	—	554734	Side and flasher	619	52407A	Bulb holder, flasher and main beam	—	554734
Bulb	—	987	N. America and Switzerland	619	52408A	Bulb	—	987
Coil, ignition	LA12	*45053M (45074)	Stop tail, flasher and reflex	616	53703D			
Control box	RB106-2	37183K/L	North America	616	53704D			
Distributor (high compression)	DM2P4	40675A/B	Starting motor	M35G-I	25022Q	Windshield wipers:		
Distributor (low compression)	DM2P4	40674A/B	Steering column control	CC5	†33516B	Motor	DR2	75380A
Flasher unit	FL5	35020A	Sleeve, Lucas connector			Wheelbox	—	72713B
Fuse box	SF6	033239	14 amp.	—	54190042	Crosshead and rack (cut to 41 3/4")	—	743225
Generator	C40	22704A	35 amp.	—	54190043	Outer casing, motor to wheelbox	—	748867
Generator (alternative)	C40-I	22700D	Switches:			Outer casing, wheelbox to wheelbox	—	748868
Horn	WT618	69046F	Flasher	TPS1	319048	Outer casing, short, wheelbox	—	740746
			Knob	—	54331875	Grommet	—	740811
			Ignition and starter	47SA	31973B	Arm, left hand drive	—	54711450
			Lighting and dipper	CRS3	34103D	Arm, left hand drive (later)	—	‡54711433
			Panel	57SA	31780D	Arm, right hand drive	—	‡54711451
			Solenoid, starting motor	ST950	76465A	Arm, right hand drive (later)	—	‡54711434
			Solenoid, starting motor (later)	2ST	76464A	Blade	—	737897
			Rubber boot	—	858266	Blade (later)	—	‡54711282
			Stop lamp	HL2	31802D			
			Windshield wiper	57SA	31780D			

* When ordering, quote part number shown in brackets † Complete control or horn push serviced by Vehicle Manufacturer ‡ Serviced by Vehicle Manufacturer
|| Fitted from Saloon Car No. 86350 (Body 60541) and 'Countryman' Car No. 86430 (Body 2385) Later type blades can only be used with later type arms



EQUIPMENT SPECIFICATIONS

Austin A55 'Cambridge' Mk. II

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	BT7A	—	Lamps—continued			Windshield wipers—continued		
Battery (special orders) ...	BT9A	—	Side and flasher			Outer casing, motor to wheel-		
Coil, ignition	LA12	*45113D	‡Left hand	630	52423E/F	box	—	54710207
Control box	RB106-2	37290D	‡Right hand	630	52428E/F	Outer casing, wheelbox to		
Distributor (low compression) ..	DM2P4	40624D/H	Stop tail, flasher and reflex ...	621	53712D	wheelbox	—	54710208
Distributor (high compression)	DM2P4	40643D/H	North America	621	53713D	Outer casing, short, wheelbox		
Flasher unit	FL5	35020A	Starting motor	M35G-I	25022Q	Ferrule, outer casing retaining		740715
Fuse box	4FJ	033285	Steering column control ...	CC5	+32993D	Grommet	—	740811
Generator	C40	22704A	Suppressor (when fitted) ...	WS5	78106A	Arm, left hand drive ...	—	54711539
Generator (alternative)	C40-1	22700D				Arm, right hand drive ...	—	54711538
Horn—Low note	WT618	69046F	Switches:			Blade	—	54711283
High note (De Luxe and optional extra) ...	WT618	69047F	Dipper	21SA	31800A			
Lamps:			Flasher	37SA	31885A	From Body 61724 onwards—		
Head			Heater	65SA	*31851A	Windshield wipers:		
Right hand drive, dip left ...	F700	58251F	Ignition and starter	47SA	31973B	Motor, left hand drive ...	DR3	75357A
Left hand drive, dip right ...	F700	58252F	Lighting	57SA	31850B	Motor, right hand drive ...	DR3	75358A
Export Europe (except France and Sweden) ...	F700	58253E	Panel	65SA	*31851A	Wheelbox, passenger side ...	—	72713B
Export France	F700	58254A	Solenoid, starting motor ...	ST950	76465A	Wheelbox, driver side ...	—	72707A
Export Sweden	F700	58545A/B	Solenoid, starting motor (later)	25T	76464A	Crosshead and rack ...	—	744254
Export U.S.A.	F700	*58488A/B	Stop lamp	HL2	31882B	Outer casing, motor to wheel-		
			Windshield wiper	57SA	31780D	box	—	54710207
Number plate	534	53763A	Windshield wipers:			Outer casing, wheelbox to		
Number plate (later)	649	53814A	Motor, left hand drive ...	DR3	75358A	wheelbox	—	54710208
Side and flasher			Motor, right hand drive ...	DR3	75357A	Outer casing, short, wheelbox		740746
Left hand	630	52422E/F	Wheelbox, passenger side ...	—	72707A	Ferrule, outer casing retaining		740715
Right hand	630	52427E/F	Wheelbox, driver side ...	—	72713B	Grommet	—	740811
			Crosshead and rack ...	—	744254	Arm, right hand drive ...	—	54711538
						Arm, left hand drive ...	—	54711539
						Blade	—	54711283

Austin 'Metropolitan' 1500 (AHP7 and AHJ7)

Battery	BT9A	—	Lamps—continued			Switches—continued		
Bulb, courtesy light	—	222	Number plate	524	53502D	Windshield wiper	PS7	31479A
Bulb holder, panel light	—	554734	Side and flasher	48B	52240B	Knob	—	318350
Bulb	—	987	Stop tail	523	53280L			
Coil, ignition	LA12	*45053M	Gasket	—	574073	Warning lights:		
Control box	RB106-2	37183K/L	Reflex reflector (Home Models)	RER25	57120A	Flasher	WL11	38067A
Distributor (low compression) ...	DM2P4	*40499D/H	Starting motor	M35G-I	25022Q	Bulb holder, ignition and oil		
Distributor (high compression)	DM2P4	(40624)	Steering column control ...	CCU3	132897D	pressure	—	863511
Flasher unit	FL5	35010A	Stator tube	—	133105A	Bulb	—	987
Fuse box	SF6	033239	Suppressor (when fitted) ...	WS5	78106A	Bulb holder, main beam ...	—	554734
Generator	C40	22704A	Sleeve, Lucas connector			Bulb	—	987
Generator (alternative)	C40-1	22700D	14 amp.	—	54190042	Windshield wipers:		
Horn—High note	WT618	69047F	35 amp.	—	54190043	Motor	CRT14	75145B
Low note	WT618	69046F	Switches:			Wheelbox	—	*72548K
Lamps:			Courtesy	10	31140B			(72662)
Head			Dipper	F522-1	31284D	Crosshead and rack ...	—	736364
Right hand drive, dip left ...	F700	58083D	Heater, left hand drive ...	2R	78305E	Outer casing, motor to wheel-		
Left hand drive, dip right ...	F700	58086A/B	Heater, right hand drive ...	2R	78328A/B	box	—	739844
Export Europe (except France and Sweden) ...	F700	58288A	Lighting and ignition, L.H.D.	PRS3	31416E	Outer casing, wheelbox to		
Export France	F700	58289A	Lighting and ignition, R.H.D.	PRS3	*31691E	wheelbox	—	739937
Export Sweden	F700	58458A	Knob	—	31270	Outer casing, short, wheelbox		740031
			Starting motor	ST19-2	76423A	Ferrule, outer casing retaining		738410
			Coupling	—	76442B	Arm, left hand drive ...	—	742282
			Stop lamp	HL2	31082J	Arm, right hand drive ...	—	742349
						Blade	—	741543

Austin A99 'Westminster'

Battery	BT9A	—	Reflex reflector (later) ...	RER27	57136A	Windshield wipers:		
Battery (special orders) ...	BT11A	—	Relay, horn	6RA	33214A	Motor, right hand drive ...	DR3	75365A
Bulb holder, panel light	—	554734	Sleeve, Lucas connector			Motor, left hand drive ...	DR3	75366A
Bulb	—	987	14 amp.	—	54190042	Wheelbox	—	72724A
Coil, ignition	HA12	45102E	35 amp.	—	54190043	Crosshead and rack, right hand		
Control box	RB106-2	37290D	Starting motor	M418G	25521D	drive (cut to 33 3/8")	—	744254
Distributor	DM6	40661D	Steering column control ...	CC2	133532A	Crosshead and rack, left hand		
Flasher unit	FL5	35020A	Stator tube	—	134300200	drive (cut to 39 3/8")	—	744256
Fuse box	4FJ	033285	Switches:			Outer casing, motor to wheel-		
Generator	C45PV-6	22530A	Brake booster warning light. .	S60	31921A/B	box, right hand drive ...	—	54710837
Horn—High note	WT618	69047F	Dipper	21SA	31800A	Outer casing, motor to wheel-		
Low note	WT618	69046F	Heater	65SA	*31851A	box, left hand drive ...	—	54710838
Lamps:			Ignition and starter	47SA	31973B	Outer casing, wheelbox to		
Gear indicator			Lighting	57SA	31850B	wheelbox	—	54710839
(automatic transmission)			Panel light	65SA	*31851A	Outer casing, short, wheelbox		740746
Right hand drive	4WL	38202D	Safety switch, starter circuit	SS10	*31824A	Ferrule, outer casing retaining		740715
Left hand drive	4WL	38205B	(automatic transmission) ...		(31849)	Grommet	—	740811
Head			Solenoid, starting motor ...	25T	76464A	Arm, right hand drive ...	—	54711545
Right hand drive, dip left ...	F700	58465B/D	Solenoid, starting motor	25T	76469A	Arm, left hand drive ...	—	54711544
Left hand drive, dip right ...	F700	58466B/D	(automatic transmission) ...	ST950	76466A	Blade	—	54711283
Export Europe (except France and Sweden) ...	F700	58467B/D	Later	25T	76469A	BORG WARNER OVERDRIVE		
Export France	F700	58468B/D	Stop lamp	HL2	31882A	EQUIPMENT		
Export Sweden	F700	58469B/D	Windshield wiper	PR57	31975A	Kick-down switch	34SA	31597B
Export U.S.A.	F700	*58494B	Knob	—	312644	Kick-down switch (later)	34SA	*54033079
Number plate	534	53822A	Warning lights:			Relay	2RA	33177A
Number plate (later)	649	53814A	Bulb holder, ignition ...	—	863511	Relay (later)	2RA	33217A
Side and flasher	625	52416A/B	Bulb	—	987	Centrifugal switch	OCS1	76112D
North America	625	52429A/B	Bulb holder, main beam and	—	554734	Centrifugal switch (later)	OCS1	76122A
Stop tail and flasher	640	53774A/B	vacuum	—	987	Solenoid	5S	76508A
North America	640	53775A/B	Bulb	—	987	Solenoid (later)	5S	76529A
Reflex reflector	RER27	57115A						

L.H.D. ... Left hand drive

R.H.D. ... Right hand drive

* When ordering, quote part number shown in brackets

‡ North America, Italy, Mexico and Manila

† Complete control serviced by Vehicle Manufacturer

‡ Serviced by Vehicle Manufacturer



EQUIPMENT SPECIFICATIONS

Austin Hire Car (FL2D) and Taxi (FX4D) — 2.2 litre Diesel

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Ammeter ...	CZU34	36245A/D	Lamps, Head—continued			Windshield wipers:		
Battery (2 off) ...	MT19E	—	Export Sweden ...	F700	*58525A	Motor ...	DR2	75367A
Bulb holder, gear indicator ...	3WL	54360248	Export U.S.A. ...	F700	(58456)	Wheelbox ...	—	72727A
Control box ...	RB310	37304B			*58526A	Crosshead and rack (cut to 32 $\frac{3}{4}$ ") ...	—	743221
Flasher unit ...	FL5	35024A	Number plate (Hire Car) ...	467-2	53093H/J	Outer casing, motor to wheelbox ...	—	54710619
Flasher unit (Export U.S.A.) ...	FL5	35020A	Number plate (Taxi) ...	467-2	53101H/J	Outer casing, wheelbox to wheelbox ...	—	54710620
Fuse box ...	SF4	*37137A (37110)	Side ...	516	52348D	Outer casing, short, wheelbox	—	740746
Fuse box ...	SF4	37287A	Stop tail, left hand ...	549	53838A	Arm, left hand ...	—	741836
Generator ...	C45PV-6	22530A	Stop tail, right hand ...	549	53839A	Arm, right hand ...	—	741837
Horn (Hire Car)—Low note ...	WT618	69046F	Taxi sign, lamp holder	513	52447A	Blade ...	—	737886
Horn (Hire Car)—High note ...	WT618	69047F	Starting motor ...	M45G	26153D/H			
Horn (Taxi) ...	WT618	69054E	Steering column control	CC5	†33537A			
Lamps:			Switches:					
Flasher ...	559	53807A	Dipper ...	21SA	31800A	‡ Fuel Injection Equipment (C.A.V.)		
Flasher, front (Export U.S.A.)	594	52345A	Flasher ...	TPS1-1	31904B			
Flasher, rear (Export U.S.A.)	594	53600D	Knob ...	—	54331875	Despatch No. 4415202		
Fog ...	SFT576	55165D	Fog lamp ...	575A	31780D	Comprising:		
Interior ...	562	56061B	Heater ...	575A	31780D	Injection pump ...	BPE4A65U210S635SEL	
Gasket ...	—	535380	Interior light ...	575A	31780D	Governor ...	BEPBMZ80A131	
Head			Interior light (passenger)	PS9	31120B	Despatch No. 6231900		
Right hand drive, dip left ...	F700	*58521A/B (51336)	Lighting ...	575A	31788B	Venturi ...	BEP/K42/42/111S	
Left hand drive, dip right ...	F700	*58522A/B (51509)	Panel ...	575A	31780D	Despatch No. 5324001		
Export Europe (except France and Sweden) ...	F700	*58523A/B (58230)	Starter/Heater ...	705A	31829B	Comprising:		
Export France ...	F700	*58524A/B (58231)	Stop lamp ...	HL2	31882A	Nozzle holder ...	BK355668	
			Windshield wiper ...	575A	31780D	Nozzle ...	BDN12SP6A	
			Warning lights:			Despatch No. 5830122		
			Door ...	3WL	38196A	Filter ...	F2B9	
			Flasher ...	WL13	—			
			Cover and window ...	—	319107			
			Shade ...	—	319222			

Austin-Healey 'Sprite' (AN5)

Battery ...	BT7A	—	Lamps, Head—continued			Switches—continued		
Bulb holder, panel light ...	—	39007A	Export U.S.A. ...	F700	*58474A/B (58563)	Starting motor ...	ST19-2	76423A
Bulb holder, panel light ...	—	554734	Export Europe (except France and Sweden) ...	F700	58286A	Coupling ...	—	764428
Bulb holder, tachometer (when fitted) ...	—	554734	Export France ...	F700	58287A	Boot ...	—	860556
Bulb ...	—	987	Export Sweden ...	F700	58459A	Stop lamp ...	HL2	31082J
Coil, ignition ...	LA12	*45053M (45074)	Number plate ...	467-2	53093H/J	Windshield wiper	PS7	*31498A (31434)
Control box ...	RB106-2	37182J/K	Number plate (later) ...	467	53836A/B	Knob ...	—	312872
Distributor ...	DM2P4	*40561H/L (40675)	Side and flasher ...	594	52338A	Warning lights:		
Distributor (high compression, special orders) ...	DM2P4	40656A/F	Stop tail ...	549	53330D	Flasher ...	WL13	38177A
Flasher unit ...	FL5	35010A	Relay, horn (when twin horns fitted) ...	6RA	33188A	Main beam ...	WL13	38135B
Fuse box ...	SF6	033239	Sleeve, Lucas connector	—	54190042	Bulb holder, ignition ...	—	863511
Generator ...	C39PV-2	22265E	14 amp. ...	—	54190043	Bulb ...	—	987
Horn ...	HF1849	70141B	35 amp. ...	—	25022Q	Windshield wipers:		
Horn—High note (optional) ...	WT618	69047F	Starting motor ...	M35G-1	333361	Motor ...	DR2	75213F
Low note (optional) ...	WT618	69046F	Steering column control	CC5	†33315A	Crosshead and rack (cut to 32 $\frac{3}{4}$ ") ...	—	743221
Lamps:			Slip ring, right hand drive ...	—	†333361	Wheelbox ...	—	72744A
Flasher, rear ...	594	52337A	Slip ring, left hand drive ...	—	†333432	Outer casing, motor to wheelbox ...	—	74879A
Flasher, rear (North America and Switzerland) ...	594	53600D	Suppressor (when fitted) ...	WSS	78106A	Outer casing, wheelbox to wheelbox ...	—	748795
Head			Switches:			Outer casing, short, wheelbox	—	740746
Right hand drive, dip left ...	F700	*51780D (51344)	Dipper ...	FS22-1	31284D	Ferrule, outer casing retaining	—	740715
Left hand drive, dip right ...	F700	*51781A/B (51533)	Flasher ...	575A	31743D	Grommet ...	—	740811
			Lighting and ignition ...	PR53	31270F	Arm, right hand drive ...	—	745077
			Knob ...	—	316285	Arm, left hand drive ...	—	745076
			Panel light ...	10	31140B	Blade ...	—	737910

Austin-Healey '3000' (BN7, 2-seater) and (BT7, 4-seater)

Battery (4-seater) ...	BT9A	—	Lamps—continued			Warning lights:		
Battery (2-seater, 2 off) ...	SLG11E	—	Stop tail and flasher ...	594	53564A/B	Flasher ...	WL11	38067A
Bulb holder, panel light ...	—	554734	Reflex reflector ...	RER7	57072B	Bulb holder, ignition ...	—	863511
Bulb holder, panel light ...	—	39007A	Reflex reflector (later) ...	RER25	57125A	Bulb ...	—	987
Bulb ...	—	987	Sleeve, Lucas connector	—	54190042	Bulb holder, main beam	—	554734
Coil, ignition ...	HA12	45102E	14 amp. ...	—	54190043	Bulb ...	—	987
Control box ...	RB106-2	37183K/L	35 amp. ...	—	25521D	Windshield wipers:		
Distributor ...	DM6	40662B/D	Starting motor ...	M418G	33517E	Motor ...	DR2	75297E
Flasher unit ...	FL5	35010A	Steering column control	CC1	†32984B	Wheelbox ...	—	72674B
Flasher relay ...	DB10	33117D	Steering column control (adjustable, alternative)	CC1	†331058	Wheelbox (later) ...	—	72744A
Fuse box ...	SF6	033240	Stator tube ...	—	—	Crosshead and rack (cut to 31 $\frac{3}{4}$ ") ...	—	743221
Generator ...	C45PV-6	22530A	Switches:			Outer casing, motor to wheelbox ...	—	743880
Horn—High note ...	HF1748	*70071F (069474)	Battery master ...	ST330	76604B	Outer casing, wheelbox to wheelbox ...	—	743881
Low note ...	HF1748	*70063F (069448)	Dipper ...	FS22-1	31284D	Outer casing, short, wheelbox	—	740746
Lamps:			Ignition ...	S45	31403H	Arm, right hand drive ...	—	745082
Head			Lighting ...	PPG1	316129	Arm, left hand drive ...	—	745083
Right hand drive, dip left ...	F700	51956D/E	Knob ...	—	31140B	Blade ...	—	738724
Left hand drive, dip right ...	F700	*51966D/E (51957)	Panel ...	10A	31318A	LAYCOCK DE NORMANVILLE OVERDRIVE		
Export Europe (except France and Sweden) ...	F700	58290A	Solenoid operating ...	SS5	(31363)	Interrupter switch ...	SS10	31849A
Export France ...	F700	58291A/B	Solenoid, starting motor	ST950	*76411E (76465)	Rotary throttle switch ...	RTS1	31402B
Export Sweden ...	F700	58463A	Stop lamp ...	HL2	31082J	Transmission gear solenoid	IIS	76525A
Export U.S.A. ...	F700	*58496A (58569)	Windshield wiper ...	PS7	*31431A (31434)	Overdrive relay ...	SB40-1	33157D
Number plate ...	467-2	53093H/J	Knob ...	—	317530			
Side and flasher ...	594	52338A						

* When ordering, quote part number shown in brackets † Complete control serviced by Vehicle Manufacturer ‡ Serviced by C.A.V. || Serviced by Vehicle Manufacturer



EQUIPMENT SPECIFICATIONS

M.G. MGA 1600 and Twin Cam

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	SG9E	—	Lamps, Head—continued			Switches—continued		
Battery (dry charged) ...	STGZ9E	—	Export Europe (except	F700	58272A	Lighting	PPGI	*31251D
Bulb holder, panel illumination	—	554734	France and Sweden) ...	F700	58273A	Knob	—	(31126)
and map light	—	987	Export France	F700	58451B	Map light	PS7	*31515A
Bulb	HA12	*45054M	Export Sweden	—	574825	Knob	—	(31610)
Coil, ignition	—	(45075)	Map light cover	—	573915	Panel	3R	78346A
Control box	RB106-2	37183K/L	Map light glass	—	573916	Knob	—	768945
Control box (Twin Cam) ...	RB106-2	37182J/K	Number plate	467-2	53093H/J	Starting motor ...	ST19-2	76423A
Control box (Police Models)	RB310	37297A/B	Number plate (later) ...	467	53836A/B	Coupling	—	764428
Distributor	DM2P4	40510D/H	Side and flasher	632	52425D	Stop lamp	HL2	*31082J
Distributor (Twin Cam) ...	23D4	40718A	North America, Italy and	632	52430E	Windshield wiper ...	PS7	*31515A
Flasher unit	FL5	35010A	Switzerland	549	53330D	Knob	—	(31434)
Fuse box	SF6	033239	Stop tail and reflex ...	—	—	Warning lights:	—	312865
Generator	C40	22704A	Reflex reflector	RER14	57083A	Flasher	WL13	38132A
Generator (alternative) ...	C40-1	22700D	Export Switzerland ...	—	—	Bulb holder, ignition ...	—	863511
Generator (Twin Cam) ...	C39PV-2	22295A	Relay, headlamp flasher ...	SB40-1	*33135B	Bulb holder, main beam	—	554734
Generator (Police Models)	C45PV-6	22489B	Relay, foglamp (optional)	SB40-1	33169B	Bulbs	—	987
Horn—Low note	WT618	69046F	Sleeve, Lucas connector	—	—	Windshield wipers:	—	—
High note (optional)	WT618	69047F	14 amp.	—	54190042	Motor	DR2	75297E
Grommet	—	690936	35 amp.	—	54190043	Wheelbox	—	72674B
Horn push	HPI9	76205D	Starting motor	M35G-1	25022Q	Wheelbox (later) ...	—	72744A
Lamps:			Switches:			Crosshead and rack ...	—	743221
Flasher, rear	594	52337A	Dipper	FS22-1	31284D	Outer casing, motor to wheel-	—	743664
Flasher, rear (U.S.A.) ...	594	53600D	Flasher	TPS1-1	31250H	box	—	—
Fog	SFT576	55128E	Knob	—	311097	Outer casing, wheelbox to	—	743665
Bracket	—	056117	Headlamp flasher	23SA	*31898A	wheelbox	—	740746
Head			Foglamp	PS7	*31515A	Outer casing, short, wheelbox	—	740715
Right hand drive, dip left ...	F700	51344E	Ignition	S45	*312866	Ferrule, outer casing retaining	—	740811
Export U.S.A.	F700	*58499A				Grommet	—	745082
Export North America		(58570)				Arm, right hand drive ...	—	745083
(except U.S.A.)	F700	51533E				Arm, left hand drive ...	—	737910
						Blade	—	—

M.G. 'Magnette' Mk. III

Ammeter	CZU34	36247A	Lamps—continued			Windshield wipers:		
Battery	BT9A	—	Stop tail and flasher			Motor, right hand drive ...	DR3	75357A
Bulb holder, panel light (3 off) ...	—	554734	Left hand	646	53792D	Motor, left hand drive ...	DR3	75358A
Bulb (3 off)	—	987	Right hand	646	53793D	Wheelbox, passenger side ...	—	72707A
Bulb (1 off)	—	989	Left hand (North America)	646	53794D	Wheelbox, driver side ...	—	72713B
Coil, ignition	LA12	*45113D	Right hand (North America)	646	53795D	Crosshead and rack	—	744254
Control box	RB106-2	37290D	Reflex reflector	RER26	57113A	Outer casing, motor to wheel-	—	54710207
Distributor	DM2P4	40644B/F	Relay, horn	6RA	33188A	box	—	—
Flasher unit	FL5	35020A	Sleeve, Lucas connector	—	—	Outer casing, wheelbox to	—	54710208
Fuse box	4FJ	033285	14 amp.	—	54190042	wheelbox	—	740746
Generator	C40	22704A	35 amp.	—	54190043	Outer casing, short, wheelbox	—	740811
Generator (alternative) ...	C40-1	22700D	Sleeve, Lucas, twin connector	—	—	Grommet	—	740715
Horn—High note	WT618	69047F	14 amp.	—	54190119	Ferrule, outer casing retaining	—	54711538
Low note	WT618	69046F	Starting motor	M35G-1	25022Q	Arm, right hand drive ...	—	54711539
Lamps:			Switches:			Arm, left hand drive ...	—	54711283
Head			Dipper	21SA	31800A	Blade	—	—
Right hand drive, dip left ...	F700	58251F	Flasher	37SA	31885A	From Chassis 11012 onwards—		
Left hand drive, dip right ...	F700	58252F	Heater	65SA	31828A	Windshield wipers:		
Export Europe (except			Ignition and starter ...	47SA	31973B	Motor, right hand drive ...	DR3	75358A
France and Sweden) ...	F700	58253E	Lighting	57SA	31841A/B	Motor, left hand drive ...	DR3	75357A
Export France	F700	58254E	Panel light	57SA	31840A/B	Wheelbox, passenger side ...	—	72713B
Export Sweden	F700	58454A/B	Reverse lamp	SS10	31849A	Wheelbox, driver side ...	—	72707A
Export U.S.A.	F700	*58488A/B	Solenoid, starting motor ...	ST950	76465A	Crosshead and rack	—	744254
		(58566)	Solenoid, starting motor (later)	2ST	76464A	Outer casing, motor to wheel-	—	54710207
Number plate	534	53763A	Stop lamp	HL2	31882A	box	—	—
Number plate (later)	649	53814A	Windshield wiper	57SA	31839D	Outer casing, wheelbox to	—	54710208
Reverse	644	53787D				wheelbox	—	740746
Side and flasher			Warning lights:			Outer casing, short, wheelbox	—	740811
Left hand	634	52432D/E	Bulb holder, ignition ...	—	863511	Grommet	—	740715
Right hand	634	52433D/E	Bulb	—	987	Ferrule, outer casing retaining	—	54711539
Left hand (North America)	634	52434D/E	Bulb holder, main beam ...	—	554734	Arm, right hand drive ...	—	54711538
Right hand (North America)	634	52435D/E	Bulb	—	987	Arm, left hand drive ...	—	54711283

Morris 'Mini-minor 850' — For details see page 4

Morris 'Minor 1000' 2-door Saloon and Tourer, 4-door Saloon and 'Minor 1000 Traveller'

Battery	BT7A	—	Lamps:			Lamps—continued		
Bulb holder, panel light ...	—	554734	Head			Side	489-1	52139E
Bulb	—	987	Right hand drive, dip left ...	F700	51736D	Side/Flasher, left hand drive ...	488	52240B
Coil, ignition	LA12	*45053M	(Later)	F700	51336H/J	Side/Flasher		
Control box	RB106-2	(45074)	Left hand drive, dip right ...	F700	51737B	(Export Switzerland) ...	594	52338A
Distributor (high compression)	DM2P4	37183K/L	(Later)	F700	*51337J/K	Stop tail ('Traveller') ...	488	53178H
		(40675)			(51509)	Stop tail and reflex, right hand	549	53576A
Distributor (low compression) ...	DM2P4	*40561H/L	Export Europe (except			Stop tail and reflex, left hand	549	53577A
		(40674)	France and Sweden) ...	F700	58270A	Reflex reflector		
Flasher unit, left hand drive ...	FL5	35010A	(Later)	F700	58230D	'Traveller' only	RER25	57124A
Flasher relay, left hand drive ...	DB10	33117D	Export France	F700	58271A	Export Switzerland (all models)	RER22	57098A
Fuse box	SF6	033239	Export France (later) ...	F700	58231A/B	Sleeve, Lucas connector		
Generator	C40	22704A	Export Sweden	F700	58450A	14 amp.	—	54190042
Generator (alternative) ...	C40-1	22700D	Export Sweden (later) ...	F700	58456A/B	35 amp.	—	54190043
Horn—High note (North America			Export U.S.A.	F700	*58497A	Starting motor	M35G-1	25022Q
and optional extra other						Suppressor (when fitted)	WS5	78106A
destinations)	WT618	69047F	Number plate	467-2	53101H/J	Switches:		
Horn—Low note	WT618	69046F	Export Denmark	467	53836A/B	Dipper	FS22-1	31284D
			'Traveller' (Export Denmark)	467	53837A/B	Flasher (left hand drive)	37SA	31883A

* When ordering, quote part number shown in brackets

† Optional, North America

continued



EQUIPMENT SPECIFICATIONS

Morris 'Minor 1000' 2-door Saloon and Tourer, 4-door Saloon and 'Minor 1000 Traveller'—continued

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Switches—continued			Trafficators			Windshield wipers:		
Ignition	S45	31287F	2-door and Tourer, right hand			Motor	DR2	75295E
Lighting	PPG1	*31251D	drive	SF80	*54049E	Wheelbox	—	72693B
Knob	—	(31126)			(54045)	Crosshead and rack	—	743251
Panel	10	31140B	4-door and 'Traveller' right	SF80	54044E	Outer casing, motor to wheel-	—	744546
Starting motor	ST19-2	76423A	hand drive			box	—	744546
Coupling	—	764428				Outer casing, wheelbox to	—	744547
Boot	—	860556				wheelbox	—	740746
Stop lamp	HL2	31082J	Warning lights:			Outer casing, short, wheelbox	—	740811
Trafficator (right hand drive)	375A	31924A	Bulb holder, ignition and oil	—	863511	Ferrule, outer casing	—	745084
Windshield wiper	PS7	*31515A	pressure	—	987	Grommet	—	745075
Knob	—	(31434)	Bulb	—	554734	Arm, right hand	—	748734
		312865	Bulb holder, main beam	—	987	Blade	—	54711614
			Bulb	—		Blade (later)	—	

Morris 'Oxford' Series V

Battery	BT9A	—	Lamps—continued			Windshield wipers—continued		
Bulb holder, panel light	—	554734	Stop tail and flasher	629	53750B	Wheelbox, driver side	—	72713B
Bulb	—	987	North America	629	53751B	Crosshead and rack	—	744254
Coil, ignition	LA12	*45113D	Relay, horn	6RA	33188A	Outer casing, motor to wheel-	—	54710207
Control box	RB106-2	37290D	Sleeve, Lucas connector	—	54190042	box	—	54710208
Distributor (low compression)	DM2P4	40624D/H	14 amp.	—	54190043	Outer casing, wheelbox to	—	740746
Distributor (high compression)	DM2P4	40643D/H	35 amp.	—	25022Q	wheelbox	—	740811
Flasher unit	FL5	35020A	Starting motor	M35G-I		Outer casing, short, wheelbox	—	740715
Fuse box	4FJ	033285				Grommet	—	54711538
Generator	C40	22704A	Switches:			Ferrule, outer casing retaining	—	54711539
Generator (alternative)	C40-I	22700D	Dipper	21SA	31800A	Arm, right hand drive	—	54711283
Horn—Low note	WT618	69046F	Flasher	375A	31885A	Arm, left hand drive	—	
High note (De Luxe and optional extra)	WT618	69047F	Heater	65SA	31828A	Blade	—	
Lamps:			Ignition and starter	475A	31973B			
Head			Lighting	575A	31837A/D	From Chassis 38193 onwards—		
Right hand drive, dip left	F700	58251F	Panel	65SA	31828A	Windshield wipers:		
Left hand drive, dip right	F700	58252F	Reverse light (optional)	SS10	31849A	Motor, right hand drive	DR3	75358A
Export Europe (except France and Sweden)	F700	58253E	Solenoid, starting motor	ST950	76465A	Motor, left hand drive	DR3	75357A
Export France	F700	58254E	Solenoid, starting motor (later)	2ST	76464A	Wheelbox, passenger side	—	72713B
Export Sweden	F700	58454A/B	Stop lamp	HL2	31882A	Wheelbox, driver side	—	72707A
Export U.S.A.	F700	*58488A/B	Windshield wiper	575A	31836B	Crosshead and rack	—	744254
		(58566)				Outer casing, motor to wheel-	—	54710207
Number plate	534	53763A	Warning lights:			box	—	54710208
Number plate (later)	649	53814A	Bulb holder, ignition	—	863511	Outer casing, wheelbox to	—	740746
Side and flasher			Bulb	—	987	Outer casing, short, wheelbox	—	740811
Left hand	630	52422E/F	Bulb holder, main beam	—	554734	Grommet	—	740715
Right hand	630	52427E/F	Bulb	—	987	Ferrule, outer casing retaining	—	54711539
North America, left hand	630	52423E/F				Arm, right hand drive	—	54711538
North America, right hand	630	52428E/F	Windshield wipers:			Arm, left hand drive	—	54711283
			Motor, right hand drive	DR3	75357A	Blade	—	
			Motor, left hand drive	DR3	75358A			
			Wheelbox, passenger side	—	72707A			

Morris 'Oxford Traveller' Series IV and 'Hindustan' Series III

Ammeter	CZU34	36234A	Lamps, Head—continued			Switches—continued		
Battery	BT9A	—	Export U.S.A. (indirect)	F700	58010B/D	Panel	3R	78346A
Coil, ignition	LA12	*45053M	Export Europe (except France and Sweden)	F700	58268A	Knob	—	768945
Control box ('Oxford' and later 'Hindustan')	RB106-2	37183K/L	Export France	F700	58269A	Starting motor	ST19-2	76423A
Control box ('Hindustan')	RB106-2	37182J/K	Export Sweden	F700	58008D	Coupling	—	764428
Distributor	DM2P4	*40499D/H	Number plate	467-2	53093H/J	Boot	—	860556
Distributor (high compression)	DM2P4	40570D/H	Number plate ('Traveller')	532	53630A	Stop lamp	HL2	31082J
Flasher unit, left hand drive and optional extra	FL5	35010A	Side	545	52215D	Windshield wiper	PS7	*31515A
Fuse box	SF6	033239	Side and flasher, left hand drive and optional extra	545	52216D	Knob	—	(31434)
Generator	C40	22704A	Stop tail and flasher	597	53588E/F	Trafficators, right hand drive	SF80	54044E
'Oxford' and later 'Hindustan' Alternative 'Oxford' and later 'Hindustan'	C40-I	22700D	U.S.A. only	597	53590H	Windshield wipers:		
'Hindustan'	C39PV-2	22258F/H	Stop tail (when trafficators are fitted)	597	53589E/F	Motor	DR2	75212F
Horn—High note	WT618	69047F	Mirror	594/114	59412A	Wheelbox	—	72680D
Low note	WT618	69046F	Relay, horn	SB40-I	*33116B	Crosshead and rack	—	743235
Lamps:			Starting motor	M35G-I	25022Q	Outer casing, motor to wheel-	—	745150
Head			Suppressor (when fitted)	WS5	78106A	box	—	745151
Right hand drive, dip left	F700	58006E	Switches:			Outer casing, wheelbox to	—	740746
Left hand drive, dip right	F700	58007B/D	Dipper	FS22-I	31284D	Outer casing, short, wheelbox	—	740715
Export U.S.A.	F700	58011B	Lighting and ignition	PRS3	31655E	Ferrule, outer casing retaining	—	54711572
			Knob	—	316449	Arm, right hand	—	54711571
						Arm, left hand	—	737897
						Blade	—	

Riley 'One-Point-Five'

Battery	BT9A	—	Lamps:			Lamps—continued		
Bulb holder, panel	—	554734	Front flasher (amber)	611	52392B	Number plate and reverse	469	*53159B
Bulb	—	987	Front flasher (white, U.S.A.)	611	52393B			(53161)
Coil, ignition	HA12	*45054M	Head			Side	539	*52394D
Control box	RB106-2	(45075)	Right hand drive, dip left					(52402)
Distributor	DM2P4	*40587D/H	Home	P700	58143D	Stop tail and flasher		
Flasher unit	FL5	35010A	Export	F700	58099E/F	Right hand	596	53663A
Fuse box	SF6	033239	Left hand drive, dip right			Left hand	596	53664A
Generator	C40	22704A	(except countries stated)	F700	58100B/E	Right hand (U.S.A.)	596	53665A
Generator (alternative)	C40-I	22700D	Export Europe (except France and Sweden)	F700	58276A	Left hand (U.S.A.)	596	53666A
Horn—High note	WT618	69047F	Export France	F700	58277A	Starting motor	M35G-I	25022Q
Low note	WT618	69046F	Export Sweden	F700	58453A	Suppressor (when fitted)	WS5	78106A
			Export U.S.A.	F700	58495A			

* When ordering, quote part number shown in brackets

continued



EQUIPMENT SPECIFICATIONS

Riley 'One-Point-Five'—continued

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Switches:			Switches—continued			Windshield wipers:		
Dipper ...	FS22-1	31284D	Solenoid operating ...	SS9	*31446D	Motor ...	DR2	75297E
Foglamp ...	PPGI	31183H			(31253)	Wheelbox ...	—	72673B
Knob ...	—	316134	Knob ...	—	317371	Crosshead and rack (cut to 35 $\frac{3}{8}$ ")	—	743221
Flasher ...	37SA	31760A	Stop lamp ...	HL2	31082J	Outer casing, motor to wheelbox ...	—	744463
Ignition ...	S55	*31484B (31497)	Windshield wiper ...	PS7	*31554A (31434)	Outer casing, wheelbox to wheelbox ...	—	744462
Lighting ...	PPGI	31183H	Knob ...	—	313690	Outer casing, short, wheelbox	—	740746
Knob ...	—	316133				Ferrule, outer casing retaining	—	740811
Panel ...	PS7	*31554A (31434)	Warning lights:			Grommet ...	—	745072
Knob ...	—	316135	Bulb holder, ignition ...	—	863511	Arm, left hand drive ...	—	745071
Reverse ...	SS10-1	*31077E (31542)	Bulb ...	—	987	Arm, right hand drive ...	—	737897
Solenoid, starting motor ...	ST950	*76411E (76465)	Bulb holder, main beam ...	—	554734	Blade ...	—	
			Bulb ...	—	987			

Riley 'Four Sixty-Eight'

Ammeter ...	BM4	36250D	Lamps—continued			Windshield wipers—continued		
Battery ...	BT9A	—	Stop tail and flasher			Wheelbox, passenger side ...	—	72707A
Bulb holder, panel light ...	—	554734	Left hand (North America)	646	53794D	Wheelbox, driver side ...	—	72713B
Bulb ...	—	987	Right hand (North America)	646	53795D	Crosshead and rack ...	—	744254
Coil, ignition ...	LA12	*45113D (45111)	Reflex reflector ...	RER26	57113A	Outer casing, motor to wheelbox ...	—	54710207
Control box ...	RB106-2	37290D	Relay, horn ...	6RA	33188A	Outer casing, wheelbox to wheelbox ...	—	54710208
Distributor ...	DM2P4	40644B/F	Starting motor ...	M35G-1	25022Q	Outer casing, short, wheelbox	—	740746
Flasher unit ...	FL5	35020A	Sleeve, Lucas connector	—	54190042	Grommet ...	—	740811
Fuse box ...	4F1	033285	14 amp. ...	—	54190043	Ferrule, outer casing retaining	—	740715
Generator ...	C40	22704A	35 amp. ...	—	54190119	Arm, right hand drive ...	—	54711538
Generator (alternative) ...	C40-1	22700D	Sleeve, twin Lucas connector ...	—	78106A	Arm, left hand drive ...	—	54711539
Horn—High note ...	WT618	69047F	Suppressor (when fitted) ...	WS5	—	Blade ...	—	54711283
Low note ...	WT618	69046F	Switches:					
Lamps:			Dipper ...	21SA	31800A	From Chassis 5789 onwards—		
Head			Flasher ...	37SA	31885A	Windshield wipers:		
Right hand drive, dip left ...	F700	58251F	Heater ...	65SA	31828A	Motor, right hand drive ...	DR3	75358A
Left hand drive, dip right ...	F700	58252F	Ignition and starter ...	47SA	31973B	Motor, left hand drive ...	DR3	75357A
Export Europe (except France and Sweden) ...	F700	58253E	Lighting ...	57SA	31841B/D	Wheelbox, passenger side ...	—	72713B
Export France ...	F700	58254E	Panel ...	57SA	31956A	Wheelbox, driver side ...	—	72707A
Export Sweden ...	F700	58454A/B	Reverse ...	SS10	31849A	Crosshead and rack ...	—	744254
Export U.S.A. ...	F700	*58488A/B (58566)	Solenoid, starting motor ...	ST950	76465A	Outer casing, motor to wheelbox ...	—	54710207
Number plate ...	534	53763A	Solenoid, starting motor (later) ...	2ST	76464A	Outer casing, wheelbox to wheelbox ...	—	54710208
Number plate (later) ...	649	53814A	Stop lamp ...	HL2	31882A	Outer casing, short, wheelbox	—	740746
Reverse ...	644	53787D	Windshield wiper ...	57SA	31836B	Grommet ...	—	740811
Side and flasher ...	633	52431B	Warning lights:			Ferrule, outer casing retaining	—	740715
North America ...	633	*52446B (52492)	Bulb holder, ignition ...	—	863511	Arm, right hand drive ...	—	54711539
Stop tail and flasher			Bulb ...	—	987	Arm, left hand drive ...	—	54711538
Left hand ...	646	53792D	Bulb holder, main beam ...	—	554734	Blade ...	—	54711283
Right hand ...	646	53793D	Bulb ...	—	987			

Wolseley 'Fifteen Hundred'

Battery ...	BT7A	—	Lamps—continued			Switches—continued		
Battery (cold climates) ...	BT9A	—	Number plate ...	467-2	53093H/J	Windshield wiper ...	PS7	*31554A (31434)
Bulb holder, panel light ...	—	554734	Side and flasher ...	595	52342E	Knob ...	—	313633
Bulb ...	—	987	Stop tail, flasher and reflex ...	596	53586B	Warning lights:		
Coil, ignition ...	LA12	*45053M (45074)	Export U.S.A. and Canada	596	53587B	Bulb holder, ignition ...	—	863511
Control box ...	RB106-2	37183K/L	Radiator badge	RL2	534539	Bulb ...	—	987
Distributor ...	DM2P4	*40499D/H (40624)	Bulb ...	—	222	Bulb holder, main beam ...	—	554734
Flasher unit ...	FL5	35010A	Starting motor ...	M35G-1	25022Q	Bulb ...	—	987
Fuse box ...	SF6	033239	Switches:			Windshield wipers:		
Generator ...	C40	22704A	Dipper ...	FS22-1	31284D	Motor ...	DR2	75297E
Generator (alternative) ...	C40-1	22700D	Flasher ...	37SA	31760A	Wheelbox ...	—	72673B
Horn—High note ...	WT618	69047F	Ignition ...	S55	*31484B (31497)	Crosshead and rack (cut to 35 $\frac{3}{8}$ ")	—	743221
Low note ...	WT618	69046F	Lighting ...	PPGI	31183H	Outer casing, motor to wheelbox ...	—	744463
Lamps:			Knob ...	—	313630	Outer casing, wheelbox to wheelbox ...	—	744462
Head			Panel ...	PS7	*31554A (31434)	Outer casing, short, wheelbox	—	740746
Right hand drive, dip left ...	F700	*51780D (51344)	Knob ...	—	313632	Ferrule, outer casing retaining	—	740811
Left hand drive, dip right ...	F700	*51781A/B (51533)	Solenoid, starting motor ...	ST950	*76411E (76465)	Arm, left hand drive ...	—	745072
Export Europe (except France and Sweden) ...	F700	58286A	Solenoid operating ...	SS9	*31446D (31253)	Arm, right hand drive ...	—	745071
Export France ...	F700	58287A	Knob ...	—	313634	Blade ...	—	737897
Export Sweden ...	F700	58459A	Stop lamp ...	HL2	31082J			
Export U.S.A. ...	F700	58474A						

* When ordering, quote part number shown in brackets



EQUIPMENT SPECIFICATIONS

Wolseley 'Fifteen Sixty'

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	BT9A	—	Lamps—continued			Windshield wipers—continued		
Bulb holder, panel light... ..	—	554734	Stop tail, flasher and reverse			Wheelbox, passenger side	—	72707A
Bulb	—	987	Left hand	635	53770B	Wheelbox, driver side	—	72713B
Coil, ignition	LA12	*45113D	Right hand	635	53790B	Crosshead and rack	—	744254
Control box	RB106-2	37290D	Left hand (North America)	635	53771B	Outer casing, motor to wheel-		
Distributor (low compression)... ..	DM2P4	40624D/H	Right hand (North America)	635	53791B	box	—	54710207
Distributor (high compression)	DM2P4	40643D/H	Relay, horn	6RA	33188A	Outer casing, wheelbox to		
Flasher unit	FL5	35020A	Starting motor	M35G-1	25022Q	wheelbox	—	54710208
Fuse box	4FJ	033285	Sleeve, Lucas connector			Outer casing, short, wheelbox		
Generator	C40	22704A	14 amp.	—	54190042	Ferrule, outer casing retaining		
Generator (alternative)	C40-1	22700D	35 amp.	—	54190043	Grommet	—	740715
Horn—High note	WT618	69047F	Sleeve, twin Lucas connector	—	54190119	Arm, right hand drive	—	54711538
Low note	WT618	69046F	Suppressor (when fitted)	W55	78106A	Arm, left hand drive	—	54711539
Lamps:			Switches:			Blade	—	54711283
Head			Dipper	21SA	31800A			
Right hand drive, dip left	F700	58251F	Flasher	37SA	31885A	From Chassis 13781 onwards—		
Left hand drive, dip right	F700	58252F	Heater	65SA	31838B	Windshield wipers:		
Export Europe (except			Ignition and starter	47SA	31973B	Motor, right hand drive	DR3	75358A
France and Sweden)	F700	58253E	Lighting	57SA	31841B/D	Motor, left hand drive	DR3	75357A
Export France	F700	58254E	Panel	65SA	31838B	Wheelbox, passenger side	—	72713B
Export Sweden	F700	58545A/B	Reverse	SS10	31849A	Wheelbox, driver side	—	72707A
Export U.S.A.	F700	*58488A/B	Solenoid, starting motor	ST950	76465A	Crosshead and rack	—	744254
			Solenoid, starting motor (later)	2ST	76464A	Outer casing, motor to wheel-		
Number plate	534	53763A	Stop lamp	HL2	31882A	box	—	54710207
Number plate (later)	649	53814A	Windshield wiper	57SA	31839D	Outer casing, wheelbox to		
Radiator badge	RL2	534539	Warning lights:			wheelbox	—	54710208
Bulb	—	222	Bulb holder, ignition	—	863511	Outer casing, short, wheelbox		
Side and flasher			Bulb	—	987	Ferrule, outer casing retaining		
Left hand	634	52432D/E	Bulb holder, main beam	—	554734	Grommet	—	740811
Right hand	634	52433D/E	Bulb	—	987	Arm, right hand drive	—	54711539
Left hand (North America)	634	52434D/E	Windshield wipers:			Arm, left hand drive	—	54711538
Right hand (North America)	634	52435D/E	Motor, right hand drive	DR3	75357A	Blade	—	54711283
			Motor, left hand drive	DR3	75358A			

Wolseley 'Six Ninety-Nine'

Ammeter	CZU34	36253A/B	Lamps—continued			Warning lights:		
Ammeter (Police Cars)	CZU60	36270A	Side and flasher	632	52425D	Bulb holder, ignition, main		
Battery	BT9A	—	North America and			beam and vacuum switch	—	863511
Battery (cold climates)	BT11A	—	Switzerland	632	52430E	Bulb	—	987
Bulb holder, panel light (2 off)	—	554734	Stop tail and flasher	641	53776A			
Bulb (2 off)	—	987	North America	641	53777A	Windshield wipers:		
Bulb (1 off)	—	987	Reflex reflector (Export			Motor, right hand drive	DR3	75365A
Coil, ignition	HA12	45102E	Switzerland)	RER27	57136A	Motor, left hand drive	DR3	75366A
Control box	RB106-2	37290D	Relay, horn	6RA	33214A	Crosshead and rack, right hand		
Distributor	DM6	40661D	Starting motor	M418G	25521D	drive (cut to 33 3/4")	—	744254
Flasher unit	FL5	35020A	Sleeve, Lucas connector			Crosshead and rack, left hand		
Fuse box	4FJ	033285	14 amp.	—	54190042	drive (cut to 39 3/4")	—	744256
Generator	C45PV-6	22530A	35 amp.	—	54190043	Wheelbox	—	72724A
Horn—High note	WT618	69047F	14 amp. twin	—	54190119	Outer casing, motor to wheel-		
Low note	WT618	69046F	Switches:			box, right hand drive	—	54710837
Lamps:			Brake booster warning light... ..	60SA	31921D	Outer casing, motor to wheel-		
Driving	WLR576	55215D	Dipper	21SA	31800A	box, left hand drive	—	54710838
Gear Indicator (automatic			Driving lamp	57SA	31840B/D	Outer casing, wheelbox to		
transmission)			Heater	65SA	31838B	wheelbox	—	54710839
Right hand drive	4WL	38202D	Ignition and starter	47SA	31973B	Outer casing, short, wheelbox		
Left hand drive	4WL	38205B	Lighting	57SA	31841B/D	Ferrule, outer casing retaining		
Head			Panel	65SA	31838B	Grommet	—	740811
Right hand drive, dip left	F700	58443A/D	Reverse lamp	SS10	31849A	Arm, right hand drive	—	54711545
Left hand drive, dip right	F700	58444B/D	Solenoid, starting motor	ST950	76465A	Arm, left hand drive	—	54711544
Export Europe (except			Solenoid, starting motor (later)	2ST	76464A	Blade	—	54711283
France and Sweden)	F700	58445A/D	Solenoid, starting motor					
Export France	F700	58447A/D	(automatic transmission)	ST950	76466A	BORG WARNER OVERDRIVE		
Export Sweden	F700	58446A/D	Later	2ST	76469A	Kick-down switch	34SA	31632B
Export U.S.A.	F700	*58527A	Stop lamp	HL2	31882A	Kick-down switch (later)	34SA	34261A
			Starter circuit safety			Relay	2RA	33177A
Number plate	534	53518A	(automatic transmission)	SS10	*31824A	Relay (later)	2RA	33217A
Number plate (later)	649	53814A	Windshield wiper	79SA	31918A/B	Centrifugal switch	OCS1	76112D
Radiator badge	RL2	534539	Windshield wiper (special			Centrifugal switch (later)	OCS1	76122A
Bulb	—	222	orders)	PR57	31975A	Solenoid	SS	76508A
Reverse	645	53789A	Knob	—	312644	Solenoid (later)	SS	76529A

B.M.C. 3 litre 'Princess'

Ammeter	CZU20	36261A	Lamps—continued			Relay, horn	6RA	33214A
Battery	BT11A	—	Head			Starting motor	M418G	25521D
Bulb holder, speedometer			Right hand drive, dip left	PL700	58581A	Steering column control	CC2	†33560A
Illumination	—	554734	Left hand drive, dip right	F700	58444B/D	Switches:		
Bulb	—	987	Export Europe (except			Brake booster warning light... ..	60SA	31921D
Bulb holder, clock illumination			France and Sweden)	F700	58445A/D	Dipper	21SA	31800A
Bulb	—	54944812	Export France	F700	58447A/D	Fog lamp	57SA	31780D
Coil, ignition	HA12	45102E	Export Sweden	F700	58446A/D	Heater	PS7	*31498A
Control box	RB310	37304B	Export U.S.A.	F700	*58527A	Knob	—	(31434)
Distributor	DM6	40661D	Map	P1L	39006A	Ignition and starter	47SA	31973B
Flasher unit	FL5	35020A	Number plate	649	53814A	Lighting	57SA	31850B
Fuse box	4FJ	033285	Reverse	645	53789A	Map light	PS7	*31498A
Generator	C45PV-6	22530A	Side and flasher			Knob	—	(31434)
Horn—High note	WT618	69090A	Left hand	584	52506B	Panel	3R	78369A
Low note	WT618	69087A	Right hand	584	52507B	Knob	—	313622
Lamps:			North America and			Reverse	SS10	31849A
Fog	SFTS76	55165D	Switzerland (left hand)	584	52508B	Safety	SS10	*31824A
Gear Indicator			North America and					
Right hand drive	4WL	38213A	Switzerland (right hand)	584	52509B			
Left hand drive	4WL	38214A	Stop tail	641	53776A			
			Stop tail (North America)	641	53777A			

* When ordering, quote part number shown in brackets

† Complete control serviced by Vehicle Manufacturer

continued



EQUIPMENT SPECIFICATIONS

B.M.C. 3 litre 'Princess'—continued

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Switches—continued			Warning lights—continued			Windshield wipers—continued		
Solenoid, starting motor ...	ST950	76465B	Bulb holder, main beam ...	—	554734	Outer casing, wheelbox to wheelbox ...	—	54710839
Later ...	2ST	76464A	Bulb ...	—	987	Outer casing, short, wheelbox	—	740746
Solenoid, starting motor (automatic transmission) ...	ST950	76466B	Windshield wipers:			Ferrule, outer casing retaining	—	740715
Later ...	2ST	76469A	Motor, right hand drive ...	DR3	75365A	Grommet ...	—	740811
Stop lamp ...	HL2	31882B	Motor, left hand drive ...	DR3	75366A	Arm, right hand drive ...	—	54711545
Windshield wiper ...	PRS7	31997A	Wheelbox ...	—	72724A	Arm, left hand drive ...	—	54711544
Knob ...	—	312644	Crosshead and rack, right hand drive (cut to 33 1/2")	—	744254	Blade ...	—	54711283
Warning lights:			Crosshead and rack, left hand drive (cut to 39 1/2")	—	744256	OVERDRIVE EQUIPMENT		
Brake booster ...	WL13	38204A	Outer casing, motor to wheelbox, right hand drive	—	54710837	Centrifugal switch ...	OCS1	76112D
Bulb holder ...	—	863511	Outer casing, motor to wheelbox, left hand drive	—	54710838	Kick-down switch ...	34SA	34291A
Bulb ...	—	987				Solenoid ...	SS	76508A
Bulb holder, ignition ...	—	863511				Relay ...	2RA	33177A
Bulb ...	—	987						

B.M.C. 4 litre 'Princess' L.W.B. Saloon (DS6) and 'Princess' L.W.B. Limousine (DM4)

Ammeter ...	CZU55	36185A	Lamps—continued			Switches—continued		
Battery (2 off) ...	SLT15E	—	Step light ...	489-1	52139E	Solenoid, starting motor ...	ST950	*76411E
Bulb holder, panel ...	—	554734	Stop tail and reflex ...	551	53384B	Cap ...	—	(76465)
Bulb ...	—	987	Mirror ...	573	*62047A	Solenoid, starting motor (automatic transmission) ...	ST950	*763014
Coil, ignition ...	HA12	*45054M	Mirror (optional, left hand) ...	406/1/41A	062590			
Control box ...	RB106-2	37183K/L	Mirror (optional, right hand) ...	406/1/29A	062587	Solenoid operating ...	SS8	(76466)
Distributor ...	DM6	40371E/F	Relay, horn ...	SB40-1	33135B	Knob ...	—	31115E
Flasher unit ...	FL5	35010A	Screenjet ...	2SJ	077011A	Stop lamp ...	HL2	316520
Fuse box ...	SF6	033240	Accessories ...	—	1295230	Windshield wiper ...	PS16	31082J
Fuse box (special orders) ...	SF3	37075A	Starting motor ...	M45G	26043A	Knob ...	—	31113D
Generator ...	C45PV-6	22489B	Steering column control	CC3	*32951E	Knob, air control	—	316520
Generator (power steering) ...	C45PV-6	22528A/D	Stator tube, right hand drive	—	1331516	Knob, choke control (automatic transmission) ...	—	327617
Rubber coupling ...	—	54210027	Stator tube, left hand drive	—	1331517	Terminal block ...	TB6	084550
Driving plate ...	—	239889	Suppressor (when fitted) ...	WS5	78106A	Warning lights:		
Horn—High note ...	WT618	69047F				Adaptor ...	—	304994
Low note ...	WT618	69046F	Switches:			Bulb holder ...	—	39020B
Junction box (when fitted) ...	2J	78265A	Dipper ...	FS22-1	31284D	Bezel, main beam and ignition	—	304084
Junction box (when fitted) ...	4J	78264A	Flasher ...	37SA	31609A	Bezel, rear door (green) ...	—	304085
Junction box (when fitted) ...	6J	78266A	Foglamp ...	PPG2	31114E	Bulb ...	—	987
Lamps:			Knob ...	—	316520	Windshield wipers:		
Flasher ...	539	*52282B	Heater, dash ...	PS16	31113D	Motor ...	DR2	75296E
Fog ...	SFT576	55165D	Knob ...	—	316520	Wheelbox ...	—	72694B
Head ...			Heater, under seat (DM4) ...	CHRI	78203B	Crosshead and rack (cut to 44 1/2")	—	743235
Right hand drive, dip left ...	PF700	58164A	Heater, under seat (DM4, later) ...	3R	78370A	Outer casing, motor to wheelbox ...	—	744550
Right hand drive (Home only) ...	PF700	58165A	Interior light (auxiliary) ...	PS7	31201D	Outer casing, wheelbox to wheelbox ...	—	745039
Left hand drive, dip right ...	PF700	58166A	Knob ...	—	312856	Outer casing, short, wheelbox	—	740746
Export Europe (not France) ...	PF700	51922B	Lighting and ignition ...	PRS2	31194D	Ferrule, outer casing retaining	—	740715
Export France ...	PF700	51923B	Knob ...	—	316285	Grommet ...	—	740811
Map reading and boot ...	P1L	39006A	Map reading lamp ...	PS16	31113D	Arm, left hand ...	—	745081
Number plate ...	467-2	53093H/J	Knob ...	—	316520	Arm, right hand ...	—	745080
Reverse ...	464	53412B	Panel rheostat ...	3R	78369A	Blade ...	—	741680
Roof ...	562	56061A/B	Knob ...	—	316518			
Roof (DM4) ...	562	56060A/B	Reverse lamp ...	SS10-1	*31077E			
Side ...	516	52254A	(synchronesh gear) ...	—	(31542)			

B.M.C. Ambulance Chassis (DA2 and DA3) and Hearse Chassis (DH2 and DH3)

Ammeter ...	CZU55	36185A	Relay, horn ...	SB40-1	33135B	Switches—continued		
Battery (DA2 and DH2, 2 off) ...	STXT19E	—	Screenjet ...	2SJ	077011A	Solenoid operating ...	SS8	31115E
Battery (DA3 and DH3, 2 off) ...	FM129E	—	Accessories ...	—	1295230	Knob ...	—	316520
Bulb holder, panel light ...	—	554734	Starting motor ...	M45G	26043A	Stop lamp ...	S4C	31281B
Bulb ...	—	987	Steering column control	CC3	*32951E	Windshield wiper ...	PS16	31113D
Coil, ignition ...	HA12	*45054M	Stator tube, right hand drive	—	1331516	Knob ...	—	316520
Control box ...	RB106-2	37183K/L	Stator tube, left hand drive	—	1331517	Knob, air control	—	327617
Distributor ...	DM6	40371E/F	Suppressor (when fitted) ...	WS5	78106A	Knob, choke control (automatic transmission) ...	—	084550
Flasher unit ...	FL5	35010A	Switches:			Terminal block ...	TB6	37101B
Fuse box ...	SF6	033240	Dipper ...	FS22-1	31284D	Warning lights:		
Fuse box (special orders) ...	SF3	37075A	Flasher ...	37SA	31609A	Bulb holder ...	—	39020B
Generator ...	C45PV-6	22489B	Foglamp ...	PPG2	31114E	Adaptor ...	—	304994
Generator (power steering) ...	C45PV-6	22528A/D	Knob ...	—	316520	Bezel ...	—	304084
Horn—High note ...	WT618	69047F	Heater/Fan ...	PS16	31113D	Bulb ...	—	987
Low note ...	WT618	69046F	Knob ...	—	316520	Windshield wipers (when fitted):		
Junction box (when fitted) ...	4J	78264A	Lighting and ignition ...	PRS2	31194D	Motor ...	DR2	75296E
Junction box (when fitted) ...	2J	78265A	Knob ...	—	316285	Wheelbox ...	—	72694B
Junction box (when fitted) ...	6J	78266A	Panel rheostat ...	3R	78369A	Crosshead and rack (cut to 44 1/2")	—	743235
Lamps:			Knob ...	—	316518	Outer casing, motor to wheelbox ...	—	744550
Flasher, front ...	539	*52282B	Reading light ...	PS16	31113D	Outer casing, wheelbox to wheelbox ...	—	745039
Fog ...	SFT576	55165D	Knob ...	—	316520	Outer casing, short, wheelbox	—	740746
Head ...			Reverse light ...	SS10-1	*31077E	Ferrule, outer casing retaining	—	740715
Right hand drive, dip left ...	PF700	58164A	Solenoid, starting motor ...	ST950	*76411E	Grommet ...	—	740811
Right hand drive (Home) ...	PF700	58165A	Cap ...	—	763014	Arm, left hand ...	—	745081
Left hand drive, dip right ...	PF700	58166A	Solenoid, starting motor (automatic gearbox) ...	ST950	*76443A	Arm, right hand ...	—	745080
Export Europe (not France) ...	PF700	51922B			(76466)	Blade ...	—	741680
Export France ...	PF700	51923B						
Side ...	516	52254A						

* When ordering, quote part number shown in brackets † 60/36 watt bulb

‡ Complete control serviced by Vehicle Manufacturer

§ Reference only—for details of components see page 39

|| Serviced by Vehicle Manufacturer



EQUIPMENT SPECIFICATIONS

COMMERCIAL VEHICLES

Austin A35 Van (AV5) — For details see page 4

Austin A55 Half Ton Pick-up Chassis (HQ6), Pick-up Truck (HK6) and Van (HV6)

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	BT7A	—	Lamps, Head—continued			Switches—continued		
Battery (special orders)	BT9A	—	Export Europe (except			Starting motor	ST19-2	76423A
Coil, ignition	LA12	*45053M	France and Sweden)	F700	58282A	Coupling	—	764428
Control box	RB106-2	37183K/L	Export France	F700	58283A	Stop lamp	HL2	31082J
Distributor (low compression)	DM2P4	*40499D/H	Export Sweden	F700	58457A	Windshield wiper	PS7	*31498A
Distributor (high compression)	DM2P4	*40600D/H	Number plate	467-2	53101H/J	Knob	—	(31434)
Flasher unit	FL5	(40624)	Side	516	*52214F	Knob, choke	—	318369
Fuse box	SF6	(40643)	Stop tail	594	53564A/B	Knob, starter control	—	326728
Generator	C40	35010A	Reflex reflector	RER25	57121A	Windshield wipers:		
Generator (alternative)	C40-1	033240	Starting motor	M35G-I	25022Q	Motor	DR2	75251H
Horn—High note (optional extra)	WT618	22700A	Steering column control	CCS	*32993D	Wheelbox	—	*72665A/B
Low note	WT618	69047F	Suppressor (when fitted)	WSS	78106A	Crosshead and rack (cut to		
Lamps:			Switches:			41 1/2")	—	743235
Flasher, front	539	*52296B	Dipper	FS22-I	31284D	Outer casing, motor to wheel-		
Flasher, front (North America)	539	(52371)	Flasher	375A	31885A	box	—	745118
Flasher, rear	594	*52213B	Heater (optional)	PS7	*31498A	Outer casing, wheelbox to		
Flasher, rear (North America)	594	(52369)	Knob	—	(31434)	wheelbox	—	54711027
Head			Lighting and Ignition	PRS3	31516E	Outer casing, short, wheelbox		740746
Right hand drive, dip left	F700	52337A	Knob	PS7	316449	Ferrule, outer casing retaining		740715
Left hand drive, dip right	F700	53600D	Panel	—	31498A	Arm, left hand drive	—	745081
			Knob	—	(31434)	Arm, right hand drive	—	745080
						Blade	—	738734
						Blade (laser)	—	54711614

Austin 'Gipsy' (Petrol and 2.2 litre Diesel)

Ammeter	CZU34	36099H	Lamps, Head—continued			Trailer socket (when fitted)	—	82061A
Battery (Petrol)	BT9A	—	Export Sweden (later)	F700	58459A	Warning lights:		
Battery (Diesel)	MT15E-6	—	Export U.S.A.	F700	58474A	Bulb holder, ignition or no		
Bulb holder, panel light (2 off)	—	39007A	Number plate	467-2	53101H/J	charge	—	863511
Bulb holder, panel light	—	39010A	Side	594	52391A	Bulb	—	987
Bulb	—	987	Stop tail and reflex	581	53520D	Bulb holder, main beam	—	554734
Coil, ignition	LA12	*45053M	Grommet	—	25211D	Bulb	—	987
Control box	RB106-2	37182J/K	Starting motor (Petrol)	M418G	26133D/H	Windshield wipers:		
Distributor	DM2P4	40583E/J	Starting motor (Diesel)	M45G	78106A	Motor	FW2	*75285F
Flasher unit	FL5	35010A	Suppressor (when fitted)	WSS	—			(75113)
Fuse box	SF6	033240	Switches:			Arm	—	735072
Generator	C40	22700A	Change-over			Blade	—	727803
Generator (alternative)	C40-1	22700D	(when trailer fitted)	PRS7	31759B			
Generator (special orders)	C39PV-2	2265E	Knob	—	316133			
Horn push and dipper switch	HD78	31438B	Flasher	SD84	*31635B			
Lamps:			Lighting and Ignition or master					
Flasher, front and rear	594	52337A	Knob	PRS3	31270F			
Flasher, front (North America)	594	52345A	Panel	PS7	316285			
Flasher, rear (North America)	594	53600D	Knob	—	(31434)			
Head			Solenoid, starting motor					
Right hand drive, dip left	F700	*51780D	(Petrol)	ST950	*76411E			
Left hand drive, dip right	F700	(51344)	Solenoid operating (Petrol)	SS9	(76465)			
Export Europe (except			Knob	—	317376			
France and Sweden)	F700	58286A	Starter and heater (Diesel)	S60	*31629J			
Export France	F700	58287A	Stop lamp	HL2	(31854)			
Export Sweden	F700	51782A			31082J			

Morris Quarter Ton Van and Pick-up Truck

Battery	BT7A	—	Lamps, Head—continued			Switches—continued		
Bulb holder, panel light	—	554734	Export Europe (except			Starting motor	ST19-2	76423A
Bulb	—	987	France and Sweden)	F700	58270A	Coupling	—	764428
Coil, ignition	LA12	*45053M	Export Europe (except			Boot	—	860556
Control box	RB106-2	37183K/L	France and Sweden, later)	F700	58230D	Stop lamp	HL2	31082J
Distributor (high compression)	DM2P4	*40561H/L	Export France	F700	58271A	Windshield wiper	PS7-I	*31515A
Distributor (low compression)	DM2P4	(40675)	Export France (later)	F700	58231A/B	Knob	—	(31434)
Fuse box	SF6	*40569F/K	Export Sweden	F700	58450A	Warning lights:		312865
Generator	C40	(40674)	Export Sweden (later)	F700	58456A/B	Bulb holder, ignition and oil		
Generator (alternative)	C40-1	033239	Export U.S.A.	F700	*58497A	pressure	—	863511
Horn—High note (North America			Number plate	537	(58493)	Bulb	—	987
and optional extra other			Side	489	52139E	Bulb holder, main beam	—	554734
destinations)	WT618	69047F	Stop tail	488	53178H	Bulb	—	987
Low note	WT618	69046F	Reflex reflector	RER6	57047D	Windshield wipers:		
Horn push	48	(31269 & 380527)	Export Switzerland	RER22	57098A	Motor	DR2	75295E
Lamps:			Sleeve, Lucas connector			Wheelbox	—	726938
Head			14 amp.	—	54190042	Crosshead and rack	—	743251
Right hand drive, dip left	F700	51736D	35 amp.	—	54190043	Outer casing, motor to wheel-		
Right hand drive, dip left			Starting motor	M35G-I	25022Q	box	—	744546
(later)	F700	51336H/J	Suppressor (when fitted)	WSS	78106A	Outer casing, wheelbox to		
Left hand drive, dip right	F700	51737B	Switches:			wheelbox	—	744547
Left hand drive, dip right			Dipper	FS22-I	31284D	Outer casing, short, wheelbox		740746
(later)	F700	*51337J/K	Ignition	S45	31287F	Ferrule, outer casing retaining		740715
			Lighting	PPG1	*31251D	Grommet	—	740811
			Knob	—	(31126)	Arm, right hand	—	745084
			Panel	10	316154	Arm, left hand	—	745075
					31140B	Blade	—	738734
						Blade (laser)	—	54711614

* When ordering, quote part number shown in brackets

† Complete control serviced by Vehicle Manufacturer

‡ Serviced by C.A.V.



EQUIPMENT SPECIFICATIONS

Morris Quarter Ton G.P.O. Van

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	BT9A	—	Sleeve, Lucar connector	—	54190042	Warning lights:	—	—
Bulb holder, panel	—	554734	14 amp.	—	54190043	Bulb holder, ignition and oil	—	863511
Bulb	—	987	35 amp.	—	54190043	pressure	—	987
Coil, ignition	LA12	*45053M	Starting motor	M35G-I	25022Q	Bulb	—	554734
Control box	RB106-2	37183K/L	Suppressor (when fitted)	WSS	78106A	Bulb holder, main beam	—	987
Distributor	DM2P4	40494D/H	Switches:	—	—	Bulb	—	—
Flasher unit	FL5	35012A	Dipper	FS22-I	31284D	Windshield wipers:	—	—
Fuse box	SF5-2	*37131A	Flasher	375A	31883A	Motor	DR2	75295E
Generator	C40	22704A	Ignition (Engineers' Van)	S45	31287K	Wheelbox	—	72693B
Generator (alternative)	C40-I	22700D	Ignition (Mail Van)	265A	*31786A/B	Crosshead and rack	—	743251
Horn	WT618	69046F	Lighting	PPG1	*31251D	Outer casing, motor to wheel-	—	—
Lamps:	—	—	Knob	—	316154	box	—	744546
Flasher	S59	53778A	Master battery	ST330	76605B	Outer casing, wheelbox to	—	—
Head	F700	51736D	Panel	10	31140B	wheelbox	—	744547
Head (later)	F700	51336H/J	Starting motor	ST19-2	76423A	Outer casing, short, wheelbox	—	740715
Number plate	537	53291B	Coupling	—	860556	Ferrule, outer casing retaining	—	740811
Side	489	52139E	Boot	—	860556	Grommet	—	745084
Stop tail	488	52139E	Stop lamp	HL2	31082J	Arm, right hand	—	745075
Reflex reflector	WER6	57047D	Windshield wiper	PS7-I	*31515A	Arm, left hand	—	738734
			Knob	—	312865	Blade	—	54711614
						Blade (later)	—	—

Morris Half Ton Van and Pick-up Truck

Ammeter	CZU34	36234A	Lamps, Head—continued	F700	58271A	Switches—continued	ST19-2	76423A
Battery	BT9A	—	Export France	F700	58450A	Starting motor	—	764428
Coil, ignition	LA12	*45053M	Export Sweden	F700	51987B	Coupling	—	860556
Control box	RB106-2	37183K/L	Export North America	467-2	53101H/J	Boot	—	—
Distributor	DM2P4	*40499D/H	Number plate	545	52216D	Stop lamp	HL2	31082J
Flasher unit	FL5	35010A	Side and flasher	558	*53479D	Windshield wiper	PS7	*31515A
Fuse box	SF6	033239	Stop tail, flasher and reflex	558	(53356)	Knob	—	312865
Generator	C40	22704A	U.S.A. only	558	53634A	Windshield wipers:	—	—
Generator (alternative)	C40-I	22700D	Roof	300FS	56022B	Motor	DR2	75212F
Horn—High note (North America	—	—	Relay (when twin horns fitted)	5840-I	*33116B	Wheelbox	—	72680D
and optional extra other	—	—				Crosshead and rack	—	743235
destinations)	WT618	69047F				Outer casing, motor to wheel-	—	—
Low note	WT618	69046F				box	—	745150
Lamps:	—	—				Outer casing, wheelbox to	—	—
Head	—	—				wheelbox	—	745151
Right hand drive, dip left ...	F700	51736D				Outer casing, short, wheelbox	—	740746
Left hand drive, dip right ...	F700	51737B				Ferrule, outer casing retaining	—	740715
(except countries stated)	F700	51737B				Arm, right hand	—	54711572
Export Europe (except	F700	58270A				Arm, left hand	—	54711571
France and Sweden) ...	F700	58270A				Blade	—	737897
						Blade (later)	—	—

Austin '101' Van Morris 'JB' Van

Ammeter	CZU26	*36113A	Lamps, Head—continued	S700	58464A	Switches—continued	PS6	*31276B
Battery	BT7A	(36047)	Export Sweden	S700	51682A	Windshield wiper (G.P.O.) ...	SE100	(31356)
Battery (G.P.O.)	BT11A	—	Export U.S.A.	467-2	53101H/J	Trafficators (G.P.O.)	—	54050A
Bulb holder, panel	—	39020B	Number plate	489-1	52139E	Warning lights:	—	—
Bulb holder, panel (G.P.O.) ...	—	39007A	Side	LD109A	*52105B	Ignition	WL3-I	*38013B
Bulb	—	987	Side (G.P.O.)	—	(52154)	Main beam	WL12	(38049)
Coil, ignition	LA12	*45053M	Stop tail	488	53178H		—	380528
Control box	RB106-2	(45074)	Reflex reflector	RER25	57116A	Windshield wipers:	—	—
Distributor	DM2P4	37182J/K	Special orders	RER2	57031D	Motor	CWI	75097B
Flasher unit (optional extra) ...	FL5	*40499D/H	Models with bumper bar	RER25	57131A	Motor (G.P.O.)	CRT15	75146B
Fuse box	SF6	(40624)	Starting motor	M35G-I	25022Q	Wheelbox (G.P.O.)	—	72648B
Generator	C40	35010A	Suppressor (when fitted)	WSS	78106A	Crosshead and rack (cut to	—	—
Generator (alternative)	C40-I	22704A	Switches:	—	—	55") (G.P.O.)	—	738223
Horn	WT618	22700D	Battery master (G.P.O.)	ST350	76602B	Outer casing, motor to wheel-	—	—
Horn push and dipper switch ...	17	69046F	Battery master (alternative) ...	ST330	76605B	box (G.P.O.)	—	739907
Lamps:	—	—	Flasher (optional extra)	SD84	31476D	Outer casing, wheelbox to	—	—
Flasher, front (optional extra) ...	559	53362B	Ignition (G.P.O.)	PLC6	*34018B	wheelbox (G.P.O.)	—	739973
Flasher, rear (optional extra) ...	488	53359D	Lighting and ignition	PLC5	(34055)	Outer casing, short, wheelbox	—	—
Head	—	—	Solenoid, starting motor	ST950	34065B	(G.P.O.)	—	740031
Right hand drive, dip left ...	S700	51023E	Solenoid operating	SS5	*31071B	Ferrule, outer casing retaining	—	—
Left hand drive, dip right ...	S700	51025F	Stop lamp	HL2	(74666)	(G.P.O.)	—	738410
Export Europe (except	S700	58295A	Trafficator (G.P.O.)	TPS1-I	31082J	Arm	—	735065
France and Sweden) ...	S700	58295A			31107)	Arm (G.P.O.)	—	738929
					031296	Blade	—	727803
						Blade (G.P.O.)	—	738930

Austin 10/15 cwt. 152 'Omnivan', 'Omnitruck' and 'Omnicoach' Morris 10/15 cwt. J2 Light Van, Pick-up Truck and 'Minibus'

Ammeter	CZU26	*36225B	Fuse box	SF6	033239	Lamps, Head—continued	F700	58273A
Battery	BT9A	(36256)	Generator	C40	22704A	Export France	F700	58451B
Bulb holder, panel	—	554734	Generator (alternative)	C40-I	22700D	Export Sweden	F700	*58499A
Bulb	—	987	Horn	WT618	69046F	Export U.S.A.	F700	(58570)
Circuit breaker, wiper	2CB	78316A	Lamps:	—	—	Number plate	467-2	53101H/J
Coil, ignition	LA12	*45053M	Flasher, side	559	53362B	Roof (driving cab)	562	56062B/D
Control box	RB106-2	(45074)	Head	—	—	Roof ('Omnicoach' & 'Minibus')	562	56063B/D
Distributor	DM2P4	37183K/L	Right hand drive, dip left ...	F700	51344E	Gasket, roof lamp	—	535380
Flasher unit	FL5	*40499D/H	Left hand drive, dip right ...	F700	*51345E	Side (Austin)	516	52436A
		(40624)	Export Europe (except	F700	(51533)	Side (Morris)	581	52298B
		35010A	France and Sweden) ...					

* When ordering, quote part number shown in brackets

† Serviced by G.P.O.

continued



EQUIPMENT SPECIFICATIONS

Austin 10/15 cwt. 152 'Omnivan', 'Omnitruck' and 'Omnicoch'—continued
Morris 10/15 cwt. J2 Light Van, Pick-up Truck and 'Minibus'—continued

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Lamps—continued			Switches:			Warning lights:		
Side and flasher (Morris, North America) ...	539	*52333D (52365)	Dipper ...	FS22-1	31284D	Flasher ...	WL13	*38155A (38132)
Stop tail, flasher and reflex ...	558	*53479D (53356)	Heater (when fitted) ...	PPG1	31126E	Bulb holder, ignition ...	—	863511
North America ...	558	53634A	Knob ...	—	316162	Bulb ...	—	987
Mirror (hinge door) ...	603/117	062639	Interior light ('Omnicoch' and 'Minibus') ...	18SA	31544B	Bulb holder, main beam ...	—	554734
Mirror (sliding door) ...	603/117	062638	Interior light (driving cab) ...	PS7	*31557A (31434)	Bulb ...	—	987
Sleeve, Lucas connector			Knob ...	—	316276	Windshield wipers:		
14 amp. ...	—	54190042	Lighting and ignition ...	PRS3	31270F	Motor ...	DR2	75347A
35 amp. ...	—	54190043	Knob ...	—	316276	Wheelbox ...	—	72711A
Starting motor ...	M35G-1	25022Q	Starting motor ...	ST19-2	76423A	Crosshead and rack (cut to 39") ...	—	743950
Steering column control (Austin)	CCU2	‡32965E	Knob ...	—	764469	Outer casing, motor to wheelbox (2 off) ...	—	54710280
Stator tube ...	—	‡331739	Stop lamp ...	HL2	31082J	Outer casing, short, wheelbox (2 off) ...	—	740746
Suppressor (when fitted) ...	WS5	78106A	Windshield wiper ...	PS7	*31557A (31434)	Arm, left hand ...	—	54711531
			Knob ...	—	316393	Arm, right hand ...	—	54711530
			Knob (special orders, B.R.S.) ...	—	54332711	Blade ...	—	54711284

Austin 1 ton (LDIA Petrol and LDOIA 2.2 litre Diesel), 1½ ton (LD2A Petrol and LDO2A 2.2 litre Diesel)
Morris 1 ton (LDI Petrol and LDOI 2.2 litre Diesel), 1½ ton (LD2 Petrol and LDO2 2.2 litre Diesel)

Ammeter (Morris) ...	CZU34	36125B	Lamps—continued			Switches—continued		
Battery (Petrol) ...	BT11A	—	Side ...	539	*52274B (52367)	Windshield wiper ...	PS7	*31557A (31434)
Battery (Diesel, 2 off) ...	MT19E	—	Stop tail ...	488	53178H	Knob ...	—	316388
Bulb holder, panel (Morris)	PL31	39010A	Reflex reflector ...	RER25	57116A	Warning lights:		
Bulb holder, speedometer (Morris) ...	PL34	39007A	Models with bumpers ...	RER25	57131A	Ignition (Petrol) (Morris) ...	WL3-1	38049A
Bulb ...	—	987	Special orders ...	RER2	57031A	Main beam (Morris) ...	WL12	38052B
Coil, ignition ...	LA12	*45053M (45074)	Starting motor (Petrol) ...	M45G	26043A	Windshield wipers:		
Control box ...	RB106-2	37182J/K	Starting motor (Diesel) ...	M45G	26125A	Motor ...	CRT15	75145B
Distributor ...	DM2P4	40496D/H	Suppressor (when fitted) ...	WS5	78106A	Wheelbox ...	—	72651A
Flasher unit (when fitted) ...	FLS	35010A	Switches:			Crosshead and rack (cut to 44½") ...	—	736307
Fuse box ...	SF6	033239	Battery master (G.P.O. and special orders) ...	ST350	76602B	Outer casing, motor to wheelbox ...	—	739844
Generator ...	C40	22704A	Flasher (when fitted) ...	SD84	31476D	Outer casing, wheelbox to wheelbox ...	—	739972
Generator (alternative) ...	C40-1	22700D	Fuel gauge (Diesel) (Morris) ...	SS5	*31294B (31107)	Outer casing, short, wheelbox ...	—	739972
Horn ...	WT618	69046F	Heater (Diesel) ...	108-2	11823420	Ferrule, outer casing retaining ...	—	738410
Horn push and dipper switch ...	17	*31442A (31262)	Ignition or master (Morris) ...	SS5	31187E	Arm ...	—	742293
Junction box ...	2J	78265A	Lighting (Morris) ...	PPG1	*31251D (31126)	Arm (special orders) ...	—	742311
Junction box ...	6J	78266A	Knob ...	—	316117	Blade ...	—	741680
Junction box ...	4J	78264A	Lighting and ignition or master (Austin) ...	PRS3	31270F	Blade (special orders) ...	—	732642
Lamps:			Knob ...	—	312813	Fuel Injection Equipment (C.A.V.) (2.2 litre Diesel)		
Flasher (when fitted) ...	568	53457D	Panel ...	PS7	*31557A (31434)	Despatch No. 4415202		
Flasher (when fitted) ...	556	53367D	Knob ...	—	316132	Comprising:		
Flasher, rear (when fitted) ...	488	53359D	Solenoid, starting motor (Diesel) ...	ST950	*76443A (76466)	Injection pump ...	BPE4A6SU210S6355EL	
Flasher, side (when fitted) ...	559	53362B	Solenoid operating (G.P.O., LDO2) ...	SS9	31719B	Governor ...	BEPBMZ80A131	
Head			Knob ...	—	317378	Despatch No. 6231900		
Right hand drive, dip left ...	F700	51515H	Starting motor (Petrol) ...	ST19-2	76423A	Venturi ...	BEP/K42/42/1115	
Left hand drive, dip right (except countries stated) ...	F700	51516H/J	Coupling ...	—	764428	Despatch No. 5324001		
Export Europe (except France and Sweden) ...	F700	58274A	Stop lamp ...	HL2	31082J	Comprising:		
Export France ...	F700	58275A				Nozzle holder ...	BK8355668	
Export Sweden ...	F700	58452A				Nozzle ...	BDN125P6A	
Number plate ...	467-2	53101H/J				Despatch No. 5830122		
						Filter ...	F2B9	

Austin '301' Range (Petrol and 3.4 litre Diesel)
Morris LC5 (Petrol) and LCO5 (3.4 litre Diesel)

Ammeter ...	CZU34	36125B	Lamps, Head—continued			Switches—continued		
Battery (Petrol) ...	BT11A	—	Export U.S.A. ...	F700	*58499A (58570)	Starting motor (Petrol) ...	ST19-2	76423A
Battery (Diesel, 2 off) ...	MT19E	—	Number plate ...	467-2	53101H/J	Coupling ...	—	764428
Bulb holder, speedometer	—	39007A	Side ...	489-1	52139E	Stop lamp ...	HL2	31082J
Bulb holder, panel ...	—	39010A	Stop tail ...	488	53178H	Windshield wiper ...	PS7	*31557A (31434)
Bulb ...	—	987	Reflex reflector ...	RER25	57116A	Knob ...	—	316388
Coil, ignition ...	LA12	*45053M (45074)	Models with bumper bar	RER25	57131A	Warning lights:		
Control box ...	RB106-2	37182J/K	Starting motor (Petrol) ...	M45G	26043A	Ignition (Petrol) ...	WL3-1	38049A
Distributor ...	DM2P4	40496D/H	Starting motor (Diesel) ...	M45G	26051J/K	Main beam ...	WL12	38052B
Fuse box ...	SF6	033239	Suppressor (when fitted) ...	WS5	78106A	Windshield wipers:		
Generator ...	C40	22704A	Sleeve, Lucas connector			Motor ...	CRT15	75146B
Generator (alternative) ...	C40-1	22700D	14 amp. ...	—	54190042	Wheelbox ...	—	72644H
Horn ...	WT618	69046F	35 amp. ...	—	54190043	Crosshead and rack		
Horn push and dipper switch ...	17	*31305A (31262 & 380259)	Switches:			Right hand drive ...	—	738987
Junction box ...	2J	78265A	Fuel gauge (Diesel) ...	SS5	*31294B (31107)	Left hand drive ...	—	738499
Lamps:			Ignition (Petrol) ...	SS5	31187E	Outer casing, motor to wheelbox ...	—	739870
Head			Lighting ...	PPG1	*31251D (31126)	Outer casing, wheelbox to wheelbox ...	—	739974
Right hand drive, dip left ...	F700	51344E	Knob ...	—	316117	Outer casing, short, wheelbox ...	—	740031
Left hand drive, dip right ...	F700	*51345E (51533)	Panel ...	PS7	*31557A (31434)	Ferrule, outer casing retaining ...	—	738410
Export Europe (except France and Sweden) ...	F700	58272A	Knob ...	—	316132	Arm, right hand ...	—	737639
Export France ...	F700	58273A	Solenoid, starting motor (Diesel) ...	ST950	*76443A (76466)	Arm, left hand ...	—	737640
Export Sweden ...	F700	58451B				Blade ...	—	727803

* When ordering, quote part number shown in brackets

† Complete control serviced by Vehicle Manufacturer

‡ Serviced by Vehicle Manufacturer

|| Serviced by C.A.V.



EQUIPMENT SPECIFICATIONS

Austin Series IV FG Trucks — S200 1½ ton (2.2 litre Petrol or Diesel), T200 2 ton, 304 3 ton and 404 4 ton (4 litre Petrol or 3.4 litre Diesel)

Morris Series IV FG Trucks — 1½ ton (2.2 litre Petrol or Diesel), 2, 3 and 4 ton (4 litre Petrol or 3.4 litre Diesel)

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Ammeter ...	CZU26	36256A	Lamps—continued			Warning lights:		
Battery (Petrol) ...	BT11A	—	Number plate ...	467-2	53101H/J	Bulb holder, ignition and oil		
Battery (Diesel) ...	MT19E	—	Side ...	595	52466A	pressure ...	—	863511
Bulb holder, panel ...	—	554734	Stop tail ...	488	53178H	Bulb ...	—	987
Bulb ...	—	987	Reflex reflector			Windshield wipers:		
Coil, ignition ...	LA12	*45113D	Red ...	RER3	57044A/B	Motor ...	DL2	75353A/B
		(45111)	Amber ...	RER3	57045A	Link, primary ...	—	54710472
		37283D	Optional ...	RER4	57033E	Spindle assembly, with bearing		
Control box ...	RB106-2	—	Relay, horn (when fitted) ...	SB40-I	*33116B	bush, arm boss and oscil-		
Distributor					(33188)	lating link ...	—	54710418
(2.2 litre Petrol) ...	DM2P4	40705A/B	Sleeve, Lucas connector			Link, rotary, gear shaft ...	—	745958
(4 litre Petrol) ...	DM6	40673D	14 amp. ...	—	54190042	Nut, fixing ...	—	153511
Flasher unit ...	FL5	35020A	35 amp. ...	—	54190043	Bush, front ...	—	54710402
Fuse box ...	4FI	033285	Sleeve, twin Lucas connector			Bush, rear ...	—	54710401
Generator ...	C40	22704A	12 amp. ...	—	54190119	Sundry parts, set ...	—	54710077
Generator (alternative) ...	C40-I	22700D	Starting motor			Arm, right hand ...	—	54712111
Horn—Low note ...	WT618	69046F	(2.2 litre Petrol) ...	M418G	25521D	Arm, left hand ...	—	54712110
High note (optional) ...	WT618	69047F	(4 litre Petrol) ...	M45G	26043A	Blade ...	—	54711074
Grommet ...	—	690995	(2.2 litre Diesel) ...	M45G	26166A/B			
Junction box ...	6J	78266A	(3.4 litre Diesel) ...	M45G	26167A/B			
Lamps:			Switches:			† Fuel Injection Equipment (C.A.V.)		
Flasher (cab) ...	617	53744A	Heater ...	575A	31788B	(2.2 litre only)		
Flasher (rear) ...	556	53358D	Interior lamp ...	575A	31780D	Despatch No. 4415202		
Head			Lighting, horn push and flasher	665A	31791B	Comprising:		
Right hand drive, dip left ...	F700	*51780D	Panel ...	575A	31780D	Injection pump ...	BPE4A65U210S6355EL	
		(51344)	Solenoid, starting motor	ST950	76465A	Governor ...	BEPBMZ80A131	
Left hand drive, dip right ...	F700	*51781A/B	Solenoid, starting motor (later)	25T	76464A	Despatch No. 6231900		
		(51533)	Starter and heater or ignition	705A	31829B	Venturi ...	BEP/K42/42/1115	
Export Europe (except	F700	58286A	later) ...	705A	34299A	Despatch No. 5324001		
France and Sweden) ...	F700	58287A	Starter and ignition (Petrol,	475A	31973B	Comprising:		
Export France ...	F700	58287A	later) ...	HL2	31882A	Nozzle holder ...	BKBL67S668	
Export Sweden ...	F700	*51782A/B	Stop lamp (1½ and 2 ton) ...	HL2	31882A	Nozzle ...	BDN12SP6A	
		(51346)	Stop lamp (3 and 4 ton) ...	HL2	31802D	Despatch No. 5830122		
Export Sweden (later) ...	F700	58459A	Windshield wiper ...	575A	31780D	Filter ...	F2B9	
Interior ...	562	56062D						
Base ...	—	535380						

Austin Series III 3 (303), 4 (403) and 5 (503) ton Trucks, Prime Mover, 5 ton SWB Tipper and Petrol Tanker (Normal Control)

Morris Series III 3, 4 and 5 ton Trucks, Prime Mover, 5 ton SWB Tipper and Petrol Tanker (Normal Control)

Ammeter (Morris) ...	CZU34	36125B	Lamps—continued			Switches—continued		
Battery (Petrol) ...	BT11A	—	Head, Morris—continued			Solenoid operating ...	SS9	31719B
Battery (Diesel, 2 cff) ...	MT19E	—	Export France ...	F700EF	58287A	Knob (Austin) ...	—	317376
Bulb holder, panel light	—	39007A	Export Sweden ...	F700	51782A/B	Knob (Morris) ...	—	317378
Morris ...	—	39007A	Export Sweden (later) ...	F700	58459A	Stop lamp ...	54C	31281B
Morris ...	—	554734	Head, Austin (Petrol Tanker)			Insulating cap ...	—	236741
Austin ...	—	554734	Right hand drive, dip left ...	F700	51878A	Warning lights (Normal Control):		
Austin (alternative) ...	—	39010A	Left hand drive, dip right ...	F700	51879A	Adaptor ...	—	304994
Austin (alternative) ...	—	39020B	Export Europe (not France)	F700	51880A	Bulb holder, ignition or no		
Bulb ...	—	987	Head, Morris (Petrol Tanker)			charge		
Coil, ignition ...	LA12	*45053M	Right hand drive, dip left ...	F700	51882A	Austin ...	—	863511
		(45074)	Left hand drive, dip right ...	F700	51883A	Austin (alternative) ...	—	39020B
High speed engine ...	HA12	*45054M	Export Europe (not France)	F700	51884A	Morris ...	—	39007A
		(45075)	Number plate			Bulbs ...	—	987
Petrol Tanker ...	Q12	*45021A	(except Petrol Tanker) ...	467-2	53101H/J	Bulb holder, main beam	—	554734
		(45093)	Side ...	1130	52260E	Austin ...	—	39020B
Control box ...	RB106-2	37182J/K	Side (Petrol Tanker) ...	1130	52307B	Morris ...	—	39007A
High speed engine ...	RB106-2	37183K/L	Stop tail ...	488	53178H	Bulbs ...	—	987
Distributor ...	DM6	*40472A/B	(except Petrol Tanker)			Windshield wipers:		
		(40673)	Special orders ...	525	53244D	Motor ...	FW2	75285F
High speed engine ...	DM6	40308H/J	Petrol Tanker ...	533	*53534B/D	Motor (Petrol Tanker) ...	CW1	75130B
Petrol Tanker ...	DUH6A	40556A			(53295)	Arm (10½") ...	—	735072
Flasher unit (when fitted)	FL5	35010A	Reflex reflector			Arm (Petrol Tanker, 8½") ...	—	735055
Fuse box ...	SP6	033240	Red ...	RER3	57044B	Blade (9") ...	—	727803
Petrol Tanker ...	5ML	†1800700	Amber ...	RER3	57045A	Blade (Petrol Tanker, 8") ...	—	727802
Generator ...	C40	22704A	Relay, horn (special orders) ...	SB40-I	*33116B	Blade (special orders, 10") ...	—	737799
Alternative ...	C40-I	22700D			(33188)			
B.R.S. ...	C39PV-2	22299A/D	Relay, starter switch (used with	SB40-I	33229A	† Fuel Injection Equipment (C.A.V.)		
B.R.S. (insulated return) ...	C39PV-2	22300A	CA45 starting motor) ...			(5 ton and Prime Mover only)		
High speed engine ...	C45PV-5	22483D	Starting motor			Despatch No. 4715110		
Petrol Tanker ...	C39PV-2	22268E	Petrol ...	M45G	26043A	Comprising:		
Petrol Tanker (alternative) ...	C45PV-6	22497B	3 and 4 ton (Diesel) ...	M45G	26135A	Injection pump ...	AAR6B75/93	
Horn—High note (special orders)	WT618	69047F	5 ton and Prime Mover (Diesel)	CA45C12-2	†1320023	Governor ...	LPE14	
Low note (special orders)	WT618	69046F	Petrol Tanker (Petrol) ...	M45G	26066A	Despatch No. 6232100		
Horn push and dipper switch ...	HD78	31438B	Petrol Tanker (5 ton Diesel) ...	CA45C12-3	†1320033	Venturi ...	BEP/K50/50/120	
Junction box			Petrol Tanker (3 and 4 ton	M45G	26136A	Despatch No. 5215402		
4 way ...	4J	78264A	Diesel) ...			Comprising:		
6 way (when fitted) ...	6J	78266A	Switches:			Nozzle holder ...	BKBL67S668	
Lamps:			Battery Isolation			Nozzle ...	BDLL150S6194	
Dash (Petrol Tanker) ...	D20-2	63000A	(Petrol Tanker) ...	134-19	†1824890	Despatch No. 5830122		
Flasher, rear (when fitted)	556	53358D	Flasher (when fitted) ...	SD84	*31635B	Filter ...	F2B9	
Head, Austin			Heater (when fitted) ...	3R	78356A			
Right hand drive, dip left ...	F700	51515H	Knob (Austin) ...	—	54332086	(5 ton special orders, B.R.S.)		
Left hand drive, dip right ...	F700	51516H/J	Knob (Morris) ...	—	54333487	Despatch No. 4714030		
Export Europe (except	F700	58274A	Lighting and ignition or master	PR53	31270F	Comprising:		
France and Sweden) ...	F700	58275A	Knob (Austin) ...	—	316285	Injection pump ...	AAR6B75/72	
Export France ...	F700	51517F/H	Knob (Morris) ...	—	312813	Governor ...	LWB22/250/1230	
Export Sweden ...	F700	58452A	Panel ...	PS7	*31498A	Despatch No. 5215402		
Export Sweden (later) ...	F700	58452A	Knob (Austin) ...	—	(31434)	Comprising:		
Head, Morris			Knob (Morris) ...	—	312871	Nozzle holder ...	BKBL67S668	
Right hand drive, dip left ...	F700	*51780D	Solenoid, starting motor	ST950	*76411E	Nozzle ...	BDLL150S6194	
		(51344)	Petrol Tanker ...	ST950	76422D	Despatch No. 5830122		
Left hand drive, dip right ...	F700	*51781A/B				Filter ...	F2B9	
		(51533)						
Export Europe (except	F700	58286A						
France and Sweden) ...	F700	58286A						

* When ordering, quote part number shown in brackets

† Serviced by C.A.V.

B.R.S. ... British Road Services



EQUIPMENT SPECIFICATIONS

Austin '504' 5 ton Truck, Petrol Tanker, Coach and Prime Mover (Petrol and 5.1 litre Diesel) and '702' 7 ton Truck and Petrol Tanker (5.1 litre Diesel) Series IV FF

Morris 5 ton Truck, Petrol Tanker, Coach and Prime Mover (Petrol and 5.1 litre Diesel) and 7 ton Truck and Petrol Tanker (5.1 litre Diesel) Series IV FF

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Ammeter	CZU26	*36225B (36256)	Lamps—continued			Switches—continued		
Battery (Petrol)	BT11A	—	Head (702 and Morris 5 & 7 ton)	F700	*51780D (51344)	Stop lamp	54C	31281B
Battery (Diesel, 2 off)	MT19E	—	Right hand drive, dip left ...	F700	*51781A/B (51533)	Insulating cap	—	236741
Bulb holder, panel (Petrol Tanker)	—	863511	Left hand drive, dip right ...	F700	58286A	Windshield wiper	57SA	317800
Bulb	—	987	Export Europe (except	F700	58287A	Warning lights:		
Bulb holder	—	554734	France and Sweden) ...	F700	*51782A/B (51346)	Bulb holder, no charge or		
Vacuum gauge illumination (ER)	—	863511	Export France	F700EF	58459A	ignition	—	863511
Vacuum gauge illumination (IR)	—	987	Export Sweden	F700	51882A	Bulb	—	987
Bulb	—	987	Export Sweden (later) ...	F700	51883A	Bulb holder, main beam ...	—	863511
Coil, ignition	LA12	*45053M (45074)	Head (702 and Morris 5 & 7 ton	F700	51884A	Bulb	—	987
Coil, ignition (Petrol Tanker) ...	Q12	*45021A (45093)	Petrol Tanker)	F700	53101H/J	Windshield wipers:		
Control box	RB106-2	371821/K	Right hand drive, dip left ...	F700	52286D	Motor, right hand drive ...	DR2	75349A
Control box (Coach)	RB310	37308B	Left hand drive, dip right ...	F700	(52367)	Motor, left hand drive ...	DR2	75363A
Distributor	DM6	*40472A/B (40673)	Export Europe (vertical dip)	F700	*52306B (52366)	Motor (Petrol Tanker) ...	DR2	75377A
Distributor (Petrol Tanker) ...	DUH6A	40556A	Number plate	467-2	53178H	Wheelbox	—	72712A
Flasher unit (when fitted) ...	FL5	35010A	Side	539	53244D	Crosshead and rack	—	743957
Fuse box	SF6	033240	Side (Petrol Tanker)	539	*53534B/D (53295)	Outer casing, motor to wheel-		
Fuse box (Coach)	SF4	*37137A (37110)	Stop call	488		box, right hand	—	54710143
Generator	C40	22700D	Special orders	525		Outer casing, motor to wheel-	—	54710142
Alternative	C40-1	22299A/D	Petrol Tanker	533		box, left hand	—	740746
B.R.S.	C39PV-2	22300A	Reflex reflector			Ferrule, outer casing retaining	—	740715
B.R.S. (insulated return) ...	C39PV-2	22268E	Amber	RER3	57045A	Arm, right hand drive ...	—	54711541
Petrol Tanker	C39PV-6	22497B	Red	RER3	57044B	Arm, left hand drive ...	—	54711540
Petrol Tanker (alternative) ...	C45PV-6	22492L	Relay, horn (when fitted) ...	SB40-1	*33116B (33188)	Blade	—	54711284
Coach	C47	69046F	Relay (starter)	SB40-1	33229A			
Horn—Low note (when fitted) ..	WT618	69047F	Sleeve, Lucas connector ...	—	54190042			
Horn—High note (when fitted) ..	WT618	4J	Starting motor					
Junction box	6J	78264A	Petrol	M45G	26043A			
Junction box (when flasher fitted)	—	78266A	Diesel	CA45C12-2	1320023			
Lamps:			Petrol Tanker (Diesel) ...	CA45C12-3	1320033			
Flasher, rear (when fitted) ...	556	53358D	Petrol Tanker (Petrol) ...	M45G	26066A			
Flasher, cab	—	—	Switches:					
Right hand (when fitted) ...	617	53706A	Heater (optional extra) ...	57SA	31780D			
Left hand (when fitted) ...	617	53707A	Ignition or master	S45	31403H			
Right hand (Petrol Tanker) ...	617	*53808A	Lighting and horn push ...	66SA	31792B			
Left hand (Petrol Tanker) ...	617	*53809A	Lighting and horn push (B.R.S.)	66SA	31936A			
Head (504 Truck and Prime			Lighting, flasher and horn push					
Mover)			(when fitted)	66SA	31791B			
Right hand drive, dip left ...	F700	51515H	Panel	57SA	31780D			
Left hand drive, dip right ...	F700	51516H/J	Solenoid, starting motor	ST950	*76411E (76465)			
Export Europe (except			(Petrol)	—	31719B			
France and Sweden) ...	F700	58274A	Solenoid operating	SS9	317376			
Export France	F700	58275A	(Petrol and Diesel) ...	—				
Export Sweden	F700	51517F/H	Knob	—				
Export Sweden (later) ...	F700	58452A						
Head (504 Petrol Tanker)								
Right hand drive, dip left ...	F700	51878A						
Left hand drive, dip right ...	F700	51879A						
Export Europe (vertical dip)	F700	51880A						

* When ordering, quote part number shown in brackets

† Serviced by C.A.V.

‡ Special orders; 6 volt bulbs

B.R.S. ... British Road Services

FUSE BOXES

Part No.	...	...	...	...
Model	...	...	...	...
§Fuse, 25 amp.	...	...	...	...
§Fuse, 35 amp.	...	...	...	...
§Fuse, 50 amp.	...	...	...	...
§Screw, terminal	...	...	...	...
§Cover	...	...	...	...
§Clip, cover fixing	...	...	...	...

Part No.	...	...	...	...
Model	...	...	...	...
§Fuse, 35 amp.	...	...	...	...
§Fuse, 50 amp.	...	...	...	...
§Screw, terminal	...	...	...	...
§Cover	...	...	...	...

AMMETERS

Part No.	...	...	...	...
Model	...	...	...	...
§Nut, terminal	...	...	...	...
§Washer, terminal	...	...	...	...
§Connector, Lucar, small	...	...	...	...
§Connector, Lucar, large	...	...	...	...
§Spacer, connector	...	...	...	...

Part No.	...	...	...	...
Model	...	...	...	...
§Ammeter, less Lucar connectors	...	...	...	...
§Nut, terminal	...	...	...	...
§Washer, terminal	...	...	...	...
§Connector, Lucar, small	...	...	...	...
§Connector, Lucar, large	...	...	...	...
§Spacer, connector	...	...	...	...
§Nut, clamp fixing	...	...	...	...
§Washer, clamp fixing nut	...	...	...	...
§Clamp, ammeter fixing	...	...	...	...
§Ring, rubber	...	...	...	...
§Bulb holder	...	...	...	...
§Bulb	...	...	...	...

FLASHER UNITS

Part No.	...	...	...	...
Model	...	...	...	...
§Screw, terminal	...	...	...	...
§Washer, terminal screw	...	...	...	...

JUNCTION BOXES

Part No.	...	...	...	...
Model	...	...	...	...
§Cover and screw	...	...	...	...
§Screw, terminal	...	...	...	...

 
TERMINAL BLOCK

Part No.	...	...	...	...
Model	...	...	...	...
§Screw, terminal	...	...	...	...


HORN PUSH AND DIPPER SWITCHES

Part No.	...	...	...	...
Model	...	...	...	...
Button and cover	...	...	...	...
Contact shell	...	...	...	...
Screw, fixing	...	...	...	...
Washer, fixing screw	...	...	...	...
Nut, fixing screw	...	...	...	...
Knob, horn push	...	...	...	...
Plate, horn contact	...	...	...	...
§Spring, horn push knob	...	...	...	...
Cover, horn push knob	...	...	...	...
Contact (horn) and body	...	...	...	...
Body assembly	...	...	...	...
§Screw, terminal	...	...	...	...
§Washer, terminal screw	...	...	...	...
Base, insulating	...	...	...	...
Base, die-cast	...	...	...	...
Clip, fixing	...	...	...	...
Screw, earth terminal	...	...	...	...

* Horn push only § Recommended spares for stock

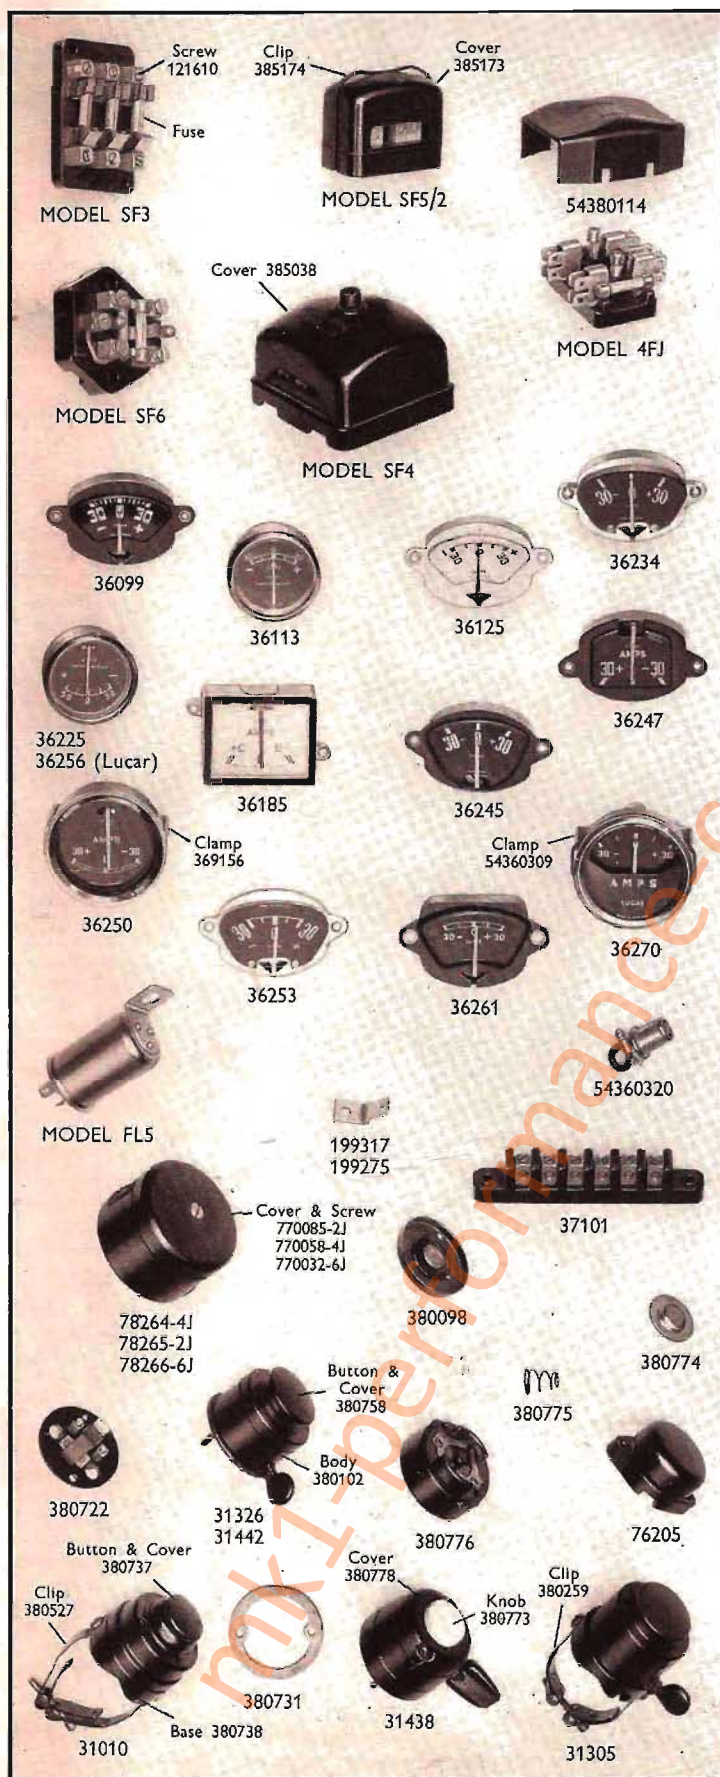

DISTRIBUTORS

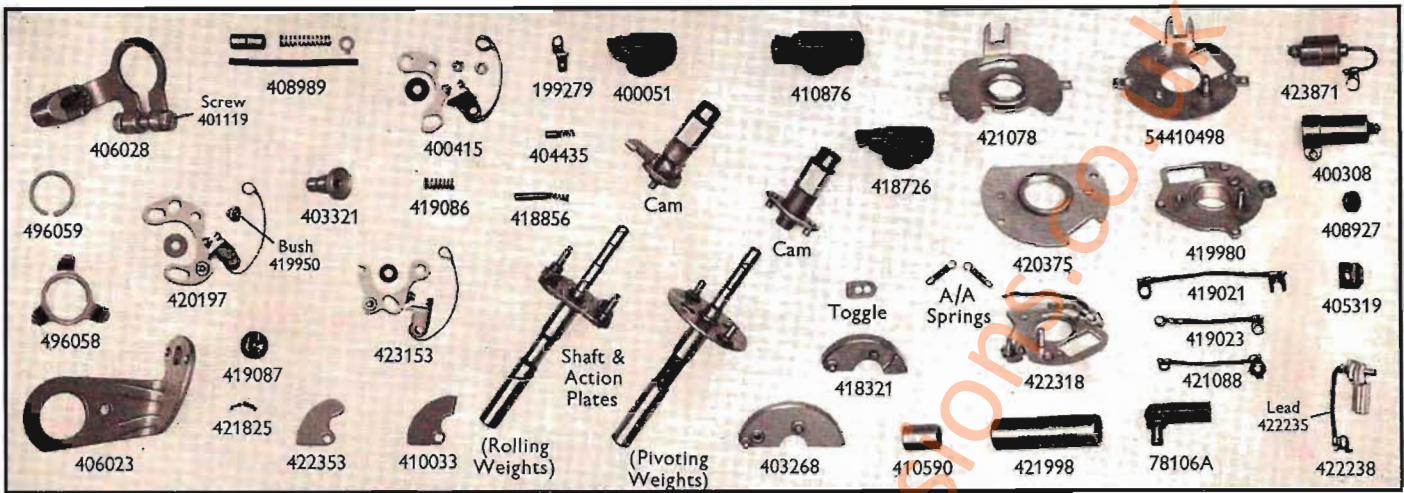 


Part No. Model	40308H/J DM6	40494D & F DM2P4	40496E & H DM2P4	40510D & F DM2P4	40561J & L DM2P4	40570D DM2P4	40583F & J DM2P4	Part No. Model	40556A DUH6A
Cover, moulded...	418861	422905	418865	422905	422905	422905	418865	Detailed Parts	
Nut, knurled ...	410600	—	410600	—	—	—	410600	\$Dog, driving ...	410601
Cam ...	496074	496076	491071	496076	491068	496076	491068	\$Nut, micrometer adjusting ...	403321
Springs, set, auto-advance	416151/S	416103	425105	420469	54411529	416103	54412887	\$Details set, micrometer ...	408989
Toggle ...	418707	418707	—	418707	—	418707	—	\$Vacuum control unit ...	424340
Weight ...	418321	418321	422353	418321	422353	418321	422353	Bracket, vacuum unit ...	406023
Shaft and action plate	419913	421153	54410290	423077	54410290	423077	54410290	\$Actuating lever ...	406028
Vacuum unit	419923	54411101	421946	54411301	54411100	54411101	425682	Screw and nut ...	401119
Clip, cover retaining	425765	421824	421824	421824	421824	421824	421824	\$Cover, moulded ...	404520
Dog, driving	420620	420620	—	420620	420620	420620	420620	Brush and spring ...	404435
Part No. Model	40371E/F DM6	40494E & H DM2P4	40499D & F DM2P4	40510E & H DM2P4	40569F & J DM2P4	40570E & H DM2P4	40587D & F DM2P4		
Cover, moulded...	418857	422905	422905	422905	422905	422905	422905	\$Rotor arm ...	410876
Nut, knurled ...	410600	—	—	—	—	—	—	\$Base assembly, contact breaker	406469
Cam ...	496074	424424	496076	424422	496076	424422	496076	\$Condenser ...	400308
Springs, set, auto-advance	416151/S	410049/S	422243	54412196	416113	416108	425416	Terminal, low tension ...	123120
Toggle ...	418707	—	418707	—	418707	—	418707	\$Contact set ...	400415
Weight ...	418321	422353	418321	422353	418321	422353	418321	\$Cam ...	419947
Shaft and action plate	419913	54410290	420007	54410290	420007	54410290	420274	\$Weight ...	403268
Vacuum unit	419923	54411101	54411241	54411301	54411301	54411101	54411241	\$Toggles ...	400141
Clip, cover retaining	421824	421824	421824	421824	421824	421824	421824	\$Springs, set, auto-advance	424342
Dog, driving	—	420620	420620	420620	420620	420620	420620	\$Shaft and action plate	424356
Part No. Model	40472A/B DM6	40496D & F DM2P4	40499E & H DM2P4	40561H & K DM2P4	40569H & K DM2P4	40583E & H DM2P4	40587E & H DM2P4		
Cover, moulded...	418861	418865	422905	422905	422905	418865	422905	\$Lubricator ...	405394
Nut, knurled ...	410600	410600	—	—	—	410600	—	\$Bushing, bottom ...	410590
Cam ...	496074	496078	424424	496076	491070	496076	424423	\$Clip, cover retaining ...	420261
Springs, set, auto-advance	406136	416168	54411901	424875	54411690	424629	54411530	\$Sundry parts, set ...	400843
Toggle ...	418707	—	—	418707	—	419149	—		
Weight ...	418321	410033	422353	418321	422353	418321	422353		
Shaft and action plate	420447	419689	54410290	421065	54410290	421065	54410290		
Vacuum unit	421189	421946	54411241	54411100	54411301	425682	54411241		
Clip, cover retaining	421824	421824	421824	421824	421824	421824	421824		
Dog, driving	410601	—	420620	420620	420620	420620	420620		
The following parts are common to distributors in appropriate column									
\$Plate, clamping ...	421191	421191	421191	421191	421191	421191	421191	Detailed Parts	
Screw, clamping...	412202	412202	412202	412202	412202	412202	412202	\$Plate, clamping ...	421191
\$Brush and spring ...	418856	418856	418856	418856	418856	418856	418856	Screw, clamping ...	412202
\$Rotor arm ...	418726	400051	400051	400051	400051	400051	400051	\$Cover, moulded ...	422905
\$Contact set ...	420197	423153	423153	423153	423153	423153	423153	\$Brush and spring ...	418856
Bush, insulating contact breaker lever ...	419950	419950	419950	419950	419950	419950	419950	\$Rotor arm ...	400051
\$Condenser ...	423871	423871	423871	423871	423871	423871	423871	\$Contact set ...	423153
\$Plate, contact breaker base ...	419980	42318	42318	42318	42318	42318	42318	Bush, insulating, contact breaker lever ...	419950
Plate, contact breaker bearing	420375	421078	421078	421078	421078	421078	421078	\$Condenser ...	423871
Springs, star...	496058	—	—	—	—	—	—	\$Plate, contact breaker base ...	54410498
Circlip, base fixing ...	496059	—	—	—	—	—	—	\$Terminal bush and lead ...	422238
\$Terminal bush and lead ...	407019	422238	422238	422238	422238	422238	422238	\$Lead, low tension ...	422235
Lead, low tension ...	419021	161353	161353	161353	161353	161353	161353	Connector, Lucas ...	199279
Washer, insulating, terminal	—	—	—	—	—	—	—	\$Lead, earth ...	421088
Bush, insulating, low tension terminal ...	408927	—	—	—	—	—	—	\$Cam ...	424423
Pad, insulating, low tension terminal ...	405319	—	—	—	—	—	—	\$Springs, set, auto-advance (set of 2)...	54412530
\$Lead, earth ...	419023	421088	421088	421088	421088	421088	421088	\$Weight ...	422353
\$Nut, knurled, micrometer	419087	421087	421087	421087	421087	421087	421087	\$Shaft and action plate ...	54410290
Springs, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	\$Bushing, body bearing ...	421998
Springs, return, micrometer	419086	421998	421998	421998	421998	421998	421998	\$Clip, cover retaining ...	421824
\$Bushing, body bearing ...	419525	—	—	—	—	—	—	\$Dog, driving ...	420620
\$Lubricator ...	54410441	—	—	—	—	—	—	\$Sundry parts, set ...	54412406
\$Sundry parts, set ...	419645	419644	419644	419644	419644	419644	419644		

* Less lead

† Fitted to 40371E/F only

§ Recommended spares for stock

 DISTRIBUTORS AND COILS

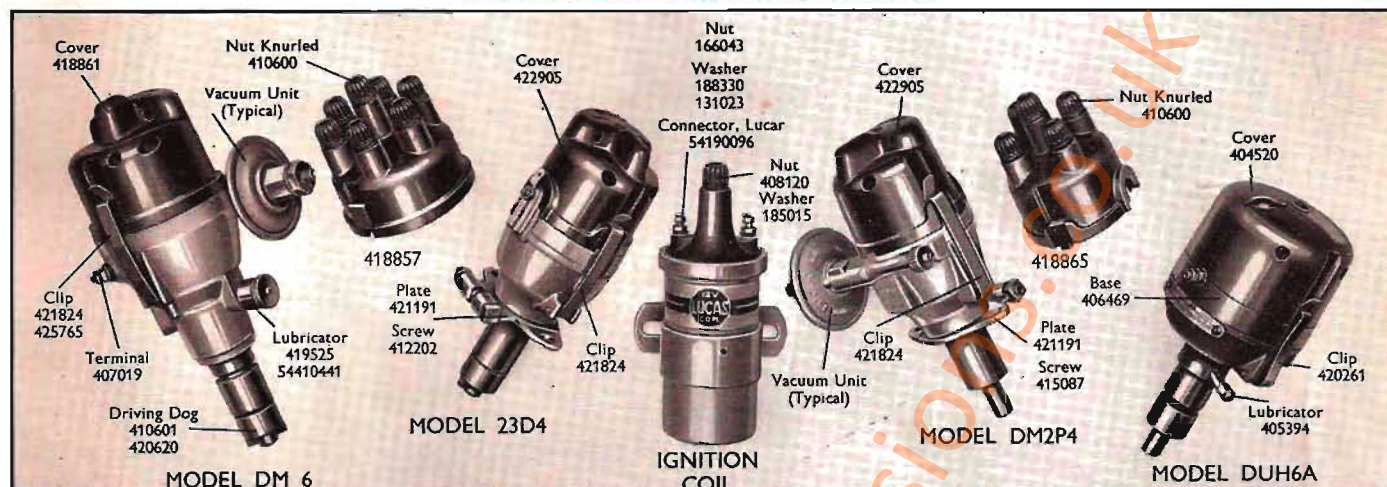

Part No. ... Model ...	40600D & F DM2P4	40624E & H DM2P4	40644B & E DM2P4	40648E & H DM2P4	40661D DM6	40674A/B DM2P4	40707A/D DM2P4
Distributor, less Lucas connector	—	—	40587F	—	40580B	—	—
Cover, moulded...	422905	422905	422905	422905	418861	422905	422905
Cam ...	496076	424424	496076	491070	496074	491070	424422
Springs, set, auto-advance	416103	54411901	425416	54411570	421616	54412328	54412714
Toggle ...	418707	—	418707	—	418707	—	—
Weight ...	418321	422353	418321	422353	418321	422353	422353
Shaft and action plate	423077	54410290	420274	54410290	419913	54410290	54410290
Vacuum unit ...	54411233	54411241	54411241	54411478	421189	54411301	54411090
Clip, cover retaining	421824	421824	421824	421824	421824	421824	421824
Dog, driving	420620	420620	420620	420620	420620	420620	420620
Connector, Lucas	—	199279	199279	199279	199279	199279	199279
Part No. ... Model ...	40600E & H DM2P4	40643D & F DM2P4	40644D & F DM2P4	40656A/B & E DM2P4	40662B/D DM6	40675A/B DM2P4	—
Distributor, less Lucas connector	—	40600F	—	—	40581D	—	—
Cover, moulded...	422905	422905	422905	422905	418861	422905	—
Cam ...	424422	496076	424423	496076	496074	491068	—
Springs, set, auto-advance	416108	416103	54411530	54411178	421616	54411529	—
Toggle ...	—	418707	—	419149	418707	—	—
Weight ...	422353	418321	422353	418321	418321	422353	—
Shaft and action plate	54410290	423077	54410290	420274	419913	54410290	—
Vacuum unit ...	54411233	54411233	54411241	425700	421189	54411100	—
Clip, cover retaining	421824	421824	421824	421824	421824	421824	—
Dog, driving	420620	420620	420620	420620	420620	420620	—
Connector, Lucas	—	199279	199279	—	199279	199279	—
Part No. ... Model ...	40642D & F DM2P4	40643E & H DM2P4	40648D & F DM2P4	40656D & F DM2P4	40673D DM6	40705A/B DM2P4	—
Distributor, less Lucas connector	40499F	40600H	—	—	40472B	—	—
Cover, moulded...	422905	422905	422905	422905	418861	418865	—
Nut, knurled ...	—	—	—	—	418861	410600	—
Cam ...	496076	424422	496076	491069	496074	491070	—
Springs, set, auto-advance	422243	416108	54410984	54412231	406136	410605	—
Toggle ...	418707	—	418707	—	418707	—	—
Weight ...	418321	422353	418321	422353	418321	422353	—
Shaft and action plate	420277	54410290	419669	54410290	420447	54410290	—
Vacuum unit ...	54411241	54411233	54411478	425700	421189	421045	—
Clip, cover retaining	421824	421824	421824	421824	421824	421824	—
Dog, driving	420620	420620	420620	420620	410601	—	—
Connector, Lucas	—	199279	199279	—	199279	199279	—
The following parts are common to distributors in appropriate column							
Plate, clamping ...	421191	421191	421191	421191	421191	421191	421191
Screw, clamping...	412202	412202	412202	412202	412202	412202	412202
Brush and spring ...	418856	418856	418856	418856	418856	418856	418856
Rotor arm ...	400051	400051	400051	400051	418726	400051	400051
Contact set...	423153	423153	423153	423153	420197	423153	423153
Bush, insulating, contact breaker lever ...	419950	419950	419950	419950	419950	419950	419950
Condenser ...	423871	423871	423871	423871	423871	423871	423871
Plate, contact breaker base	422318	422318	422318	422318	419980	422318	422318
Plate, contact breaker bearing	421078	421078	421078	421078	420375	421078	421078
Spring, star...	—	—	—	—	496058	—	—
Circlip, base fixing	—	—	—	—	496059	—	—
Terminal bush and lead	422238	422238	422238	422238	*407019	422238	422238
Lead, low tension	422235	422235	422235	422235	419021	422235	422235
Washer, insulating, terminal	161353	161353	161353	161353	—	161353	161353
Bush, insulating, low tension terminal ...	—	—	—	—	408927	—	—
Pad, insulating, low tension terminal ...	—	—	—	—	405319	—	—
Lead, earth ...	421088	421088	421088	421088	419023	421088	421088
Nut, knurled, micrometer	419087	419087	419087	419087	419087	419087	419087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086
Bushing, body bearing	421998	421998	421998	421998	421998	421998	421998
Lubricator ...	—	—	—	—	419525	—	—
Sundry parts, set	419644	419644	419644	419644	419645	419644	419644

* Less lead § Recommended spares for stock

COILS, IGNITION

Part No. ...	45021A
Model ...	Q12
Part No. ...	45053M
Model ...	LA12
Part No. ...	45054M
Model ...	HA12

Detailed Parts	
§ Nut, moulded ...	408120
§ Washer, cable end ...	185015
Nut, switch and contact breaker terminals ...	166043
Washer, shakeproof ...	188330
Washer, plain ...	131023


Part No. ...	45113D
Model ...	LA12
Detailed Parts	
§ Coil, less Lucas connector ...	45074
§ Nut, moulded ...	408120
§ Washer, cable end ...	185015
Nut, switch and contact breaker terminals ...	166043
Washer, shakeproof ...	188330
Washer, plain ...	131023
Connector, Lucas terminals ...	54190096

Part No. ...	45102E
Model ...	HA12
Detailed Parts	
§ Coil, less Lucas connector ...	45075
§ Nut, moulded ...	408120
§ Washer, cable end ...	185015
Nut, switch and contact breaker terminals ...	166043
Washer, shakeproof ...	188330
Washer, plain ...	131023
Connector, Lucas terminals ...	54190096

SUPPRESSOR

Part No. ...	78106A
Model ...	WS5

 GENERATORS AND CONTROL BOXES

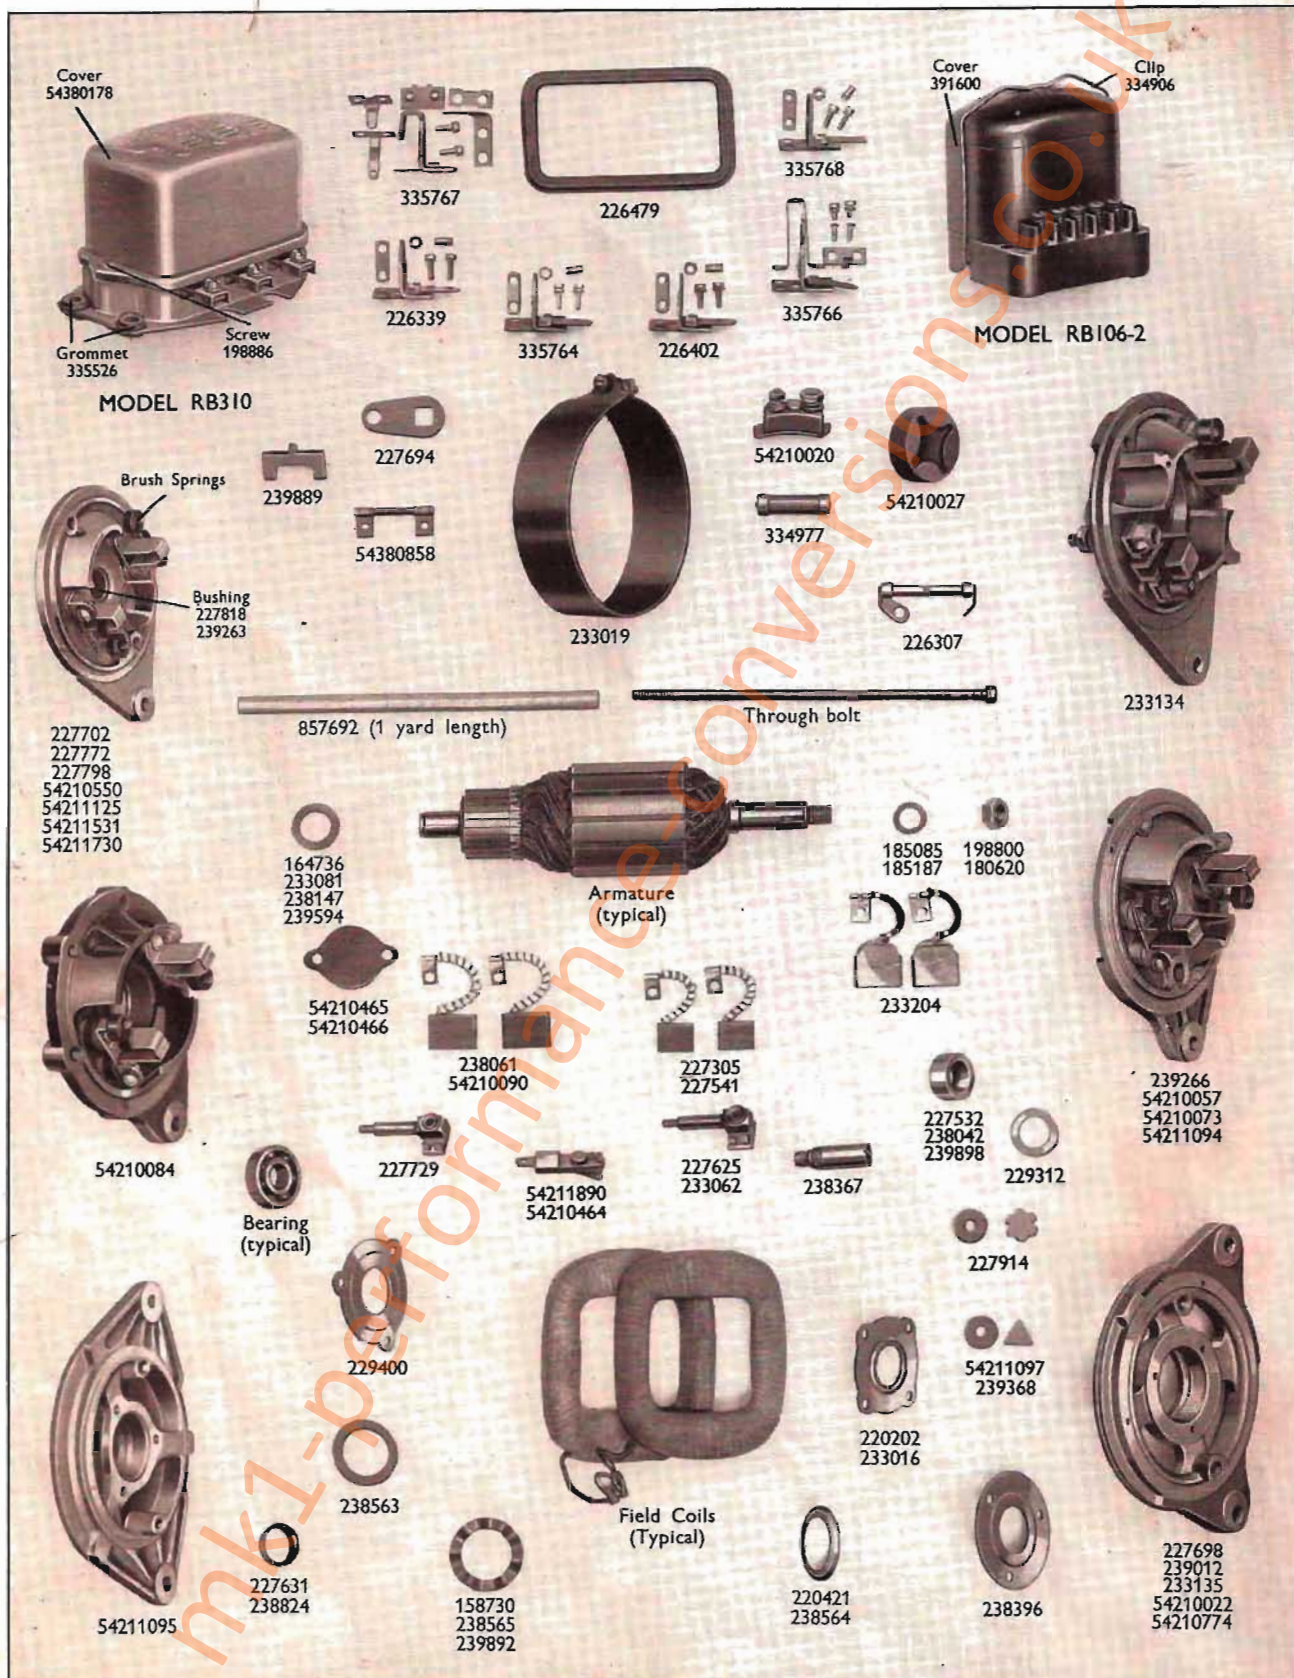

GENERATORS

Part No. Model	22258F/H C39PV-2	22265E C39PV-2	22268E C39PV-2	22295A C39PV-2	22299A/D C39PV-2	22300A C39PV-2	22700D C40-I 22704A C40
Brushes, set ...	227305	227305	227305	227305	227305	227305	227541
Bearing, commutator end ...	—	—	—	—	189237	189237	—
Bracket or frame, commutator end ...	227702	227772	227798	54210550	54211531	54211730	54211125
Bushing, bearing ...	227818	227818	227818	227818	—	—	227818
Oiler ...	227914	238367	227914	227914	—	—	54211097
Wick and spring ...	—	228141	—	—	—	—	—
§ Springs, set, brush tension	228159	228159	228159	228159	228159	228159	227542
Plate, terminal location ...	—	227694	—	—	—	—	—
Plate, blanking ...	—	—	—	—	54210465	—	—
Washer, rubber, plate sealing	—	—	—	—	54210466	—	—
Screw, blanking plate fixing	—	—	—	—	126463	—	—
Washer, spring ...	—	—	—	—	185022	—	—
§ Bearing, drive end ...	189307	189307	189307	189307	189307	189307	189307
§ Bracket, or frame, drive end	227698	227698	227698	54210774	227698	227698	54211095
Plate, bearing ...	220202	220202	220202	220202	220202	220202	229400
Washer, dished, oil retaining	220421	220421	220421	220421	220421	220421	—
Washer, corrugated, bearing	158730	158730	158730	158730	158730	158730	158730
§ Nut, shaft ...	198800	198800	198800	198800	198800	198800	198800
Washer, shakeproof ...	185085	185085	185085	185085	185085	185085	185085
§ Armature ...	227693	227693	227693	227693	227693	227693	227987
Retainer, bearing ring ...	227631	227631	227631	227631	227631	227631	227631
Collar, drive end bearing ...	227532	227532	227532	227532	227532	227532	227532
Collar, distance, commutator end	164736	164736	164736	164736	164736	164736	164736
Collar, distance (Tacho drive)	—	—	—	—	229312	229312	—
§ Field coils, set ...	227291	227291	227291	227291	227291	227291	227543
§ Terminal assembly ...	227625	227625	227625	227625	227625	227625	54211890
Insulating tube (1 yard)	857692	857692	857692	857692	857692	857692	—
§ Bolt, through ...	228336	228336	228336	228336	228336	228336	228336
§ Sundry parts, set ...	227726	227726	227726	227726	227726	227726	54211894

Part No. Model	22483D C45PV-5	22489B C45PV-6	22492L C47	22497B C45PV-6	22528A/D C45PV-6	22530A C45PV-6
§ Cover band ...	—	—	233019	—	—	—
Screw, cover fixing ...	—	—	127584	—	—	—
Nut, cover fixing screw ...	—	—	169160	—	—	—
§ Brushes, set ...	238061	54210090	233204	54210090	54210090	54210090
Bearing, commutator end ...	—	—	—	—	189237	—
Bracket or frame, commutator end	239266	54210057	233134	54210073	54210084	54211094
Bushing, bearing ...	239263	239263	239263	239263	—	239263
Oiler ...	239368	239368	239368	239368	—	239368
§ Springs, set, brush tension	238062	54210091	233358	54210091	54210091	54210091
Bearing, drive end ...	189308	189308	189275	189308	189314	189308
§ Bracket or frame, drive end	239012	239012	233135	239012	54210022	239012
Plate, bearing ...	238396	238396	233016	238396	239888	238396
Washer, dished, oil retaining	238564	238564	—	238564	238564	238564
Washer, corrugated, bearing	238565	238565	—	238565	239892	238565
Washer, felt ...	180620	180620	—	238563	238563	238563
§ Nut, shaft ...	185187	185187	180620	180620	180620	180620
Washer, shakeproof ...	239428	239428	185187	185187	185187	185187
§ Armature ...	238824	238824	233105	239428	54211386	239428
Retainer, bearing ring ...	238042	238042	238824	238824	238824	238824
Collar, drive end bearing ...	238042	238042	238042	238042	239898	238042
Collar, distance, commutator end	238147	238147	233081	238147	239594	238147
§ Field coils, set ...	238820	238820	233012	239169	207013	238820
§ Terminal assembly ...	227625	227625	233062	227729	—	54210464
§ Block, terminal ...	—	—	—	—	—	—
Insulating tube (1 yard)	857692	857692	—	857692	54210020	—
§ Bolt, through ...	227252	227252	233018	227252	207008	227252
* Driving plate ...	—	—	—	—	239889	—
* Rubber coupling ...	—	—	—	—	54210027	—
§ Sundry parts, set ...	239024	239024	233133	239024	239024	239024

CONTROL BOXES

Part No. Model	37182J 37183K RB106-2	—	—	37297A/B
§ Resistance ...	334977	—	—	54380858
Contact set, voltage regulator	—	—	—	335768


Part No. Model	37182K 37183L RB106-2	37283D 37290D RB106-2	37304B RB310	37308B RB310
§ Resistance ...	54380858	54380858	54380858	54380858
Contact set, voltage regulator	—	—	335768	226402
§ Resistance, 38 ohms	—	—	—	226307

The following parts are common to control boxes shown in appropriate column


§ Cover ...	391600	391600	54380178	54380178
Clip or screw, cover fixing	334906	334906	198886	198886
§ Gasket, sealing cover ...	—	—	226479	226479
Grommet and ferrule, mounting	—	—	335526	335526
§ Screw, terminal ...	121610	—	—	54127518
§ Contact set, cutout ...	335767	335767	335766	335766
§ Contact set, regulator ...	226339	226339	—	—
§ Contact set, current regulator	—	—	335764	335764
Screw, adjusting, cutout ...	54380161	54380161	390794	390794
Spring, adjusting screw, cutout	54380088	54380088	—	—
Nut, adjusting screw, cutout	—	—	390529	390529
Screw, adjusting, regulator	54380161	54380161	54380161	54380161
Spring, adjusting screw, regulator	54380088	54380088	54380088	54380088

* Order separately § Recommended spares for stock

 STARTING MOTORS

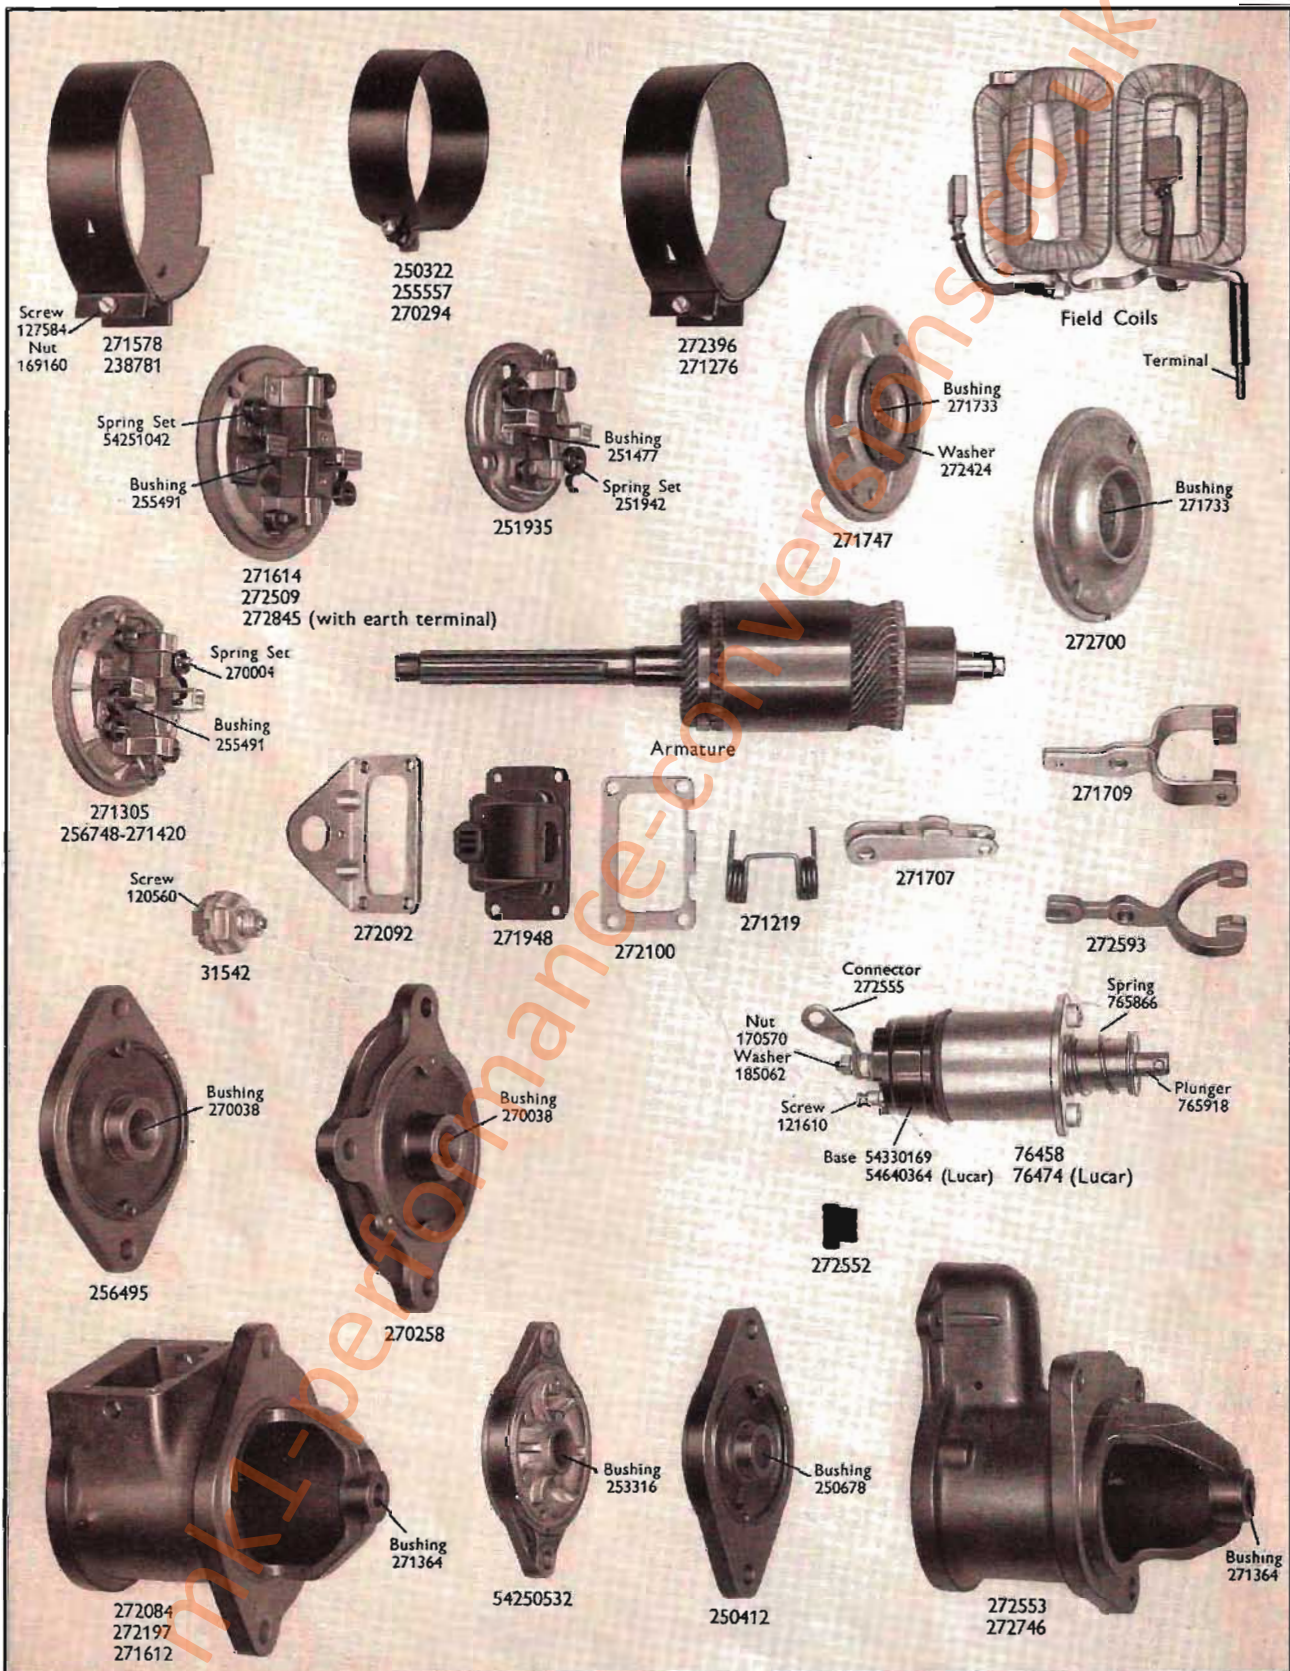

STARTING MOTORS

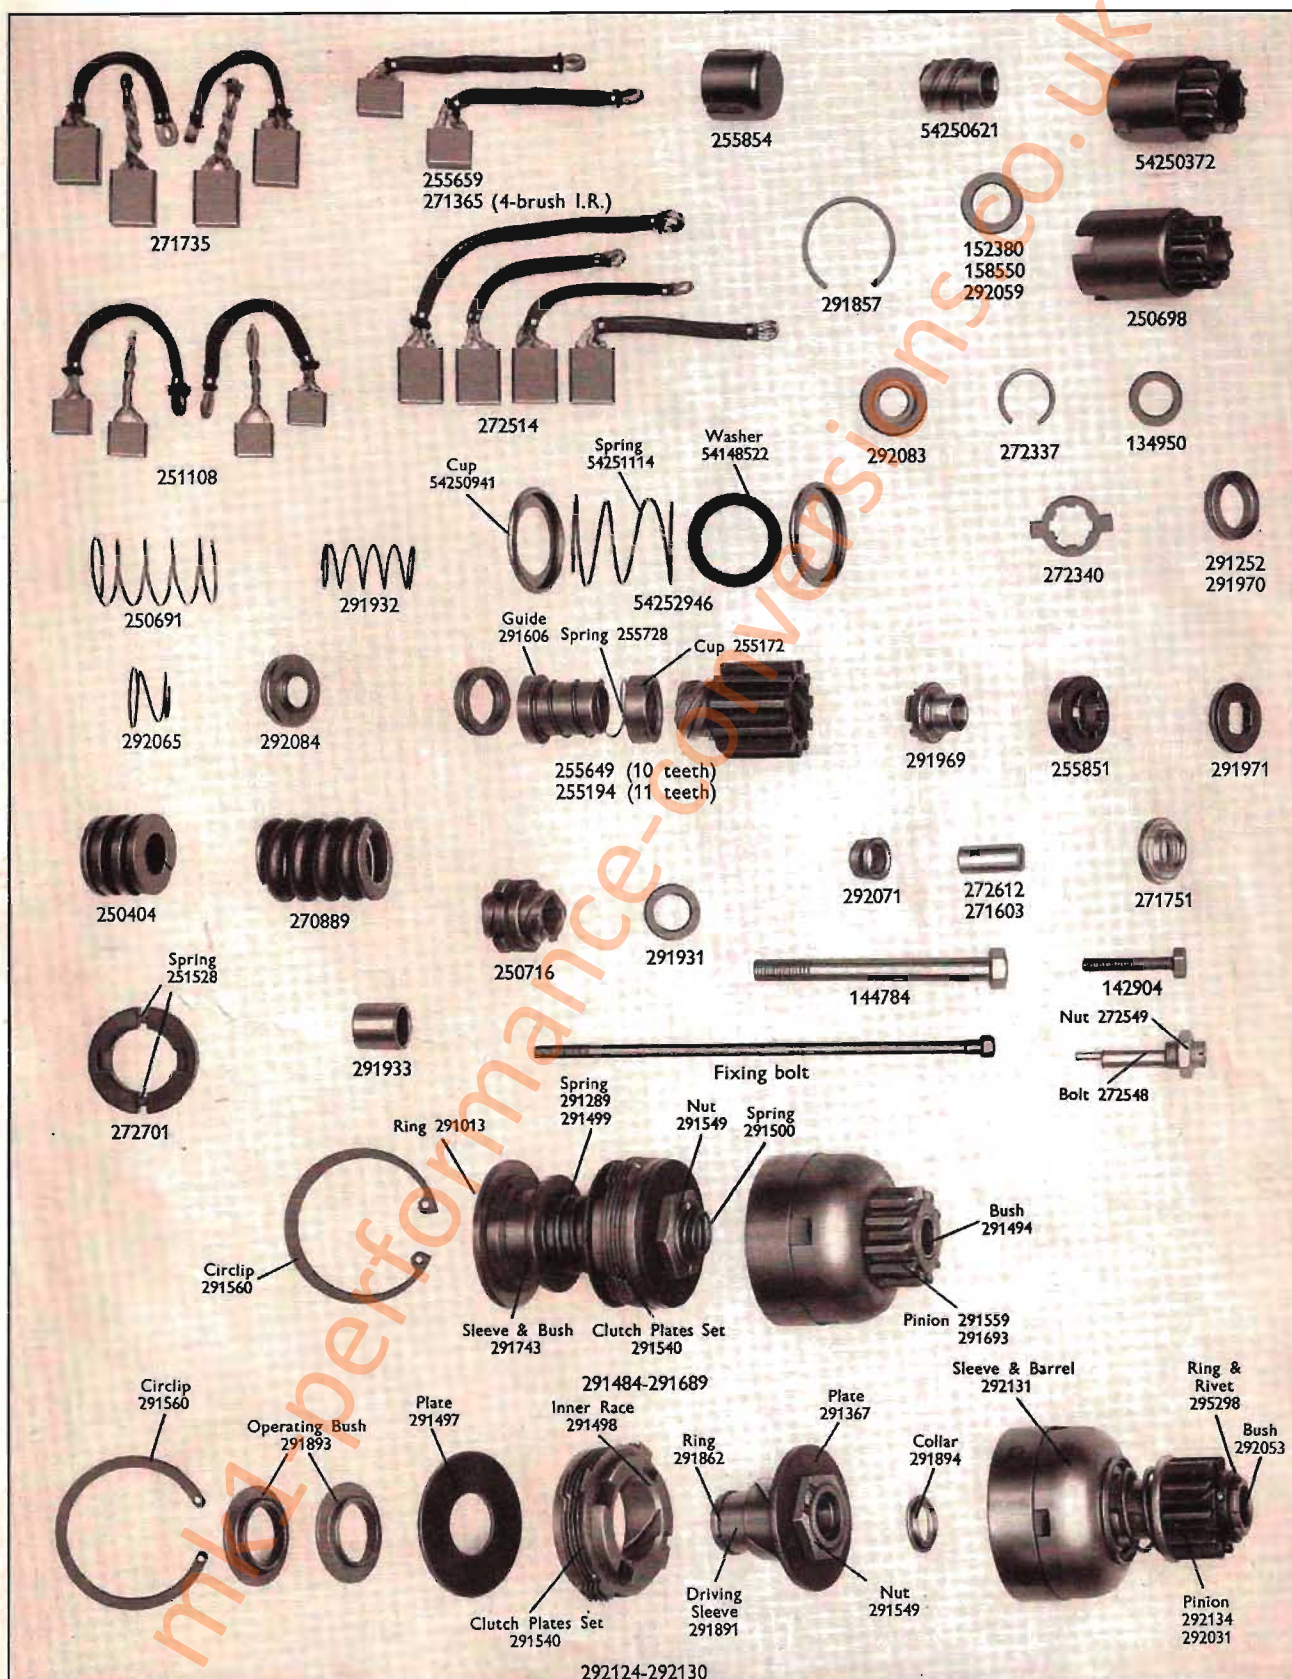 

I.R. ... Insulated Return



STARTING MOTORS

Part No. ... Model ...	26051J/K M45G	26125A M45G	26135A M45G	26136A M45G
\$Bolt, through fixing ...	272752	272752	272752	272752
\$Cover band ...	271578	271578	271578	271276
Screw, cover fixing ...	127584	127584	127584	127584
Nut, cover fixing ...	169160	169160	169160	169160
\$Brushes, set ...	271735	271735	271735	272514
\$Bracket or frame, commutator end ...	271614	271614	271614	272509
\$ Bushing, bearing ...	255491	255491	255491	255491
\$ Springs, set, brush tension ...	54251042	54251042	54251042	54251042
Lever with shoes, drive operating ...	271709	271709	271709	271709
Lever and stirrup, top ...	271707	271707	271707	271707
Spring, lever return ...	271219	271219	271219	271219
Bolt, lever pivot ...	144784	144784	144784	144784
Collar, lever distance ...	271603	271603	271603	271603
Bracket, switch fixing ...	272092	272092	272092	272092
Plate, dust cover ...	272100	272100	272100	272100
Nut, switch fixing ...	271751	271751	271751	271751
Cover, dust, rubber ...	271948	271948	271948	271948
\$Switch ...	31542	31542	31542	31542
\$ Screw, terminal ...	120560	120560	120560	120560
\$Drive ...	291484	291484	291484	291484
Ring, retaining, brake plate ...	291013	291013	291013	291013
Cup, ring retaining ...	291539	291539	291539	291539
Bush, drive operating ...	291488	291488	291488	291488
Spring, bush tension operating ...	291499	291499	291499	291499
Circlip, clutch retaining ...	291560	291560	291560	291560
Plate, clutch plates retaining ...	291497	291497	291497	291497
\$ Pinion and barrel ...	291559	291559	291559	291559
Bush, pinion ...	291494	291494	291494	291494
\$ Clutch plates, set ...	291540	291540	291540	291540
Shim, clutch adjusting (0.006") ...	291374	291374	291374	291374
Shim, clutch adjusting (0.005") ...	291378	291378	291378	291378
Shim, clutch adjusting (0.004") ...	291379	291379	291379	291379
Ring, rear, clutch plates ...	291365	291365	291365	291365
Nut, locking, pressure plates ...	291549	291549	291549	291549
Plate, pressure ...	291367	291367	291367	291367
Sleeve and bush, driving ...	291743	291743	291743	291743
\$ Spring, pinion cushioning ...	291500	291500	291500	291500
Inner race, clutch ...	291498	291498	291498	291498
\$Bracket or frame, drive end ...	271612	272084	272197	272197
\$ Bushing, drive end bracket ...	271364	271364	271364	271364
\$Bracket or frame, brake ...	271747	271747	271747	271747
\$ Bushing, brake bracket ...	271733	271733	271733	271733
Washer, brake bracket ...	272424	272424	272424	272424
\$Armature ...	272334	272334	272334	272334
\$Field coils, set ...	272219	272219	272219	272219
Terminal, field coils ...	255835	255835	255835	255835
\$Sundry parts, set ...	271731	271731	271731	271731

Part No. ... Model ...	26153D M45G	26166A M45G	26167A M45G
*\$Spring, pinion return, with cups...	54252946	54252946	54252946

Part No. ... Model ...	26153F/H M45G	26166B M45G	26167B M45G
* Cup, return spring ...	54250941	54250941	54250941
* Washer, return spring ...	54148522	54148522	54148522
*\$Spring, pinion return ...	54251114	54251114	54251114

The following parts are common to starting motors shown in appropriate column

\$Cover band ...	272396	272396	272396
Screw, cover band fixing ...	127584	127584	127584
Nut, cover band fixing ...	169160	169160	169160
\$Bolt, through fixing ...	272752	272752	272752
\$Brushes, set ...	271735	271735	271735
\$Bracket or frame, commutator end ...	272845	272845	272845
Terminal, earth ...	142904	142904	142904
\$ Bushing, bearing ...	255491	255491	255491
\$ Springs, set, brush tension ...	54251042	54251042	54251042
Bolt, pivot ...	272548	272548	272548
Nut, pivot bolt ...	272549	272549	272549
Lever ...	272593	272593	272593
\$Drive ...	291224	291224	291224
Ring and rivet, pinion retaining ...	295298	295298	295298
\$ Pinion, engaging ...	292031	292031	292031
Sleeve and barrel ...	292131	292131	292131
Bush, sleeve, bearing ...	292053	292053	292053
Ring, operating bush, retaining ...	291862	291862	291862
Bush, sleeve operating ...	291893	291893	291893
Circlip, clutch retaining ...	291560	291560	291560
Plate, clutch plates retaining ...	291497	291497	291497
Inner race, clutch ...	291498	291498	291498
\$ Clutch plates, set ...	291540	291540	291540
Shim, clutch adjusting (0.006") ...	291374	291374	291374
Shim, clutch adjusting (0.005") ...	291378	291378	291378
Shim, clutch adjusting (0.004") ...	291379	291379	291379
Ring, rear, clutch plates ...	291365	291365	291365
Nut, locking, pressure plates ...	291549	291549	291549
Plate, pressure ...	291367	291367	291367
Sleeve and bush, driving ...	291743	291743	291743
\$ Spring, pinion cushioning ...	291500	291500	291500
Inner race, clutch ...	291498	291498	291498
\$Bracket or frame, fixing ...	272746	272746	272746
\$ Bushing, bearing ...	271364	271364	271364
Grommet, bracket fixing ...	272552	272552	272552
Washer, thrust, drive end ...	134950	134950	134950
Washer, thrust, commutator end ...	152380	152380	152380
\$Bracket or frame, brake ...	272700	272700	272700
\$ Bushing, brake bracket ...	271733	271733	271733
Brake shoe and spring ...	272701	272701	272701
Spring, brake shoe ...	251528	251528	251528
Washer, brake driving ...	272340	272340	272340
Ring, driving washer retaining ...	272337	272337	272337
\$Armature ...	272334	272334	272334
\$Solenoid ...	76474	76474	76474
Plate, contact, with washer ...	54330168	54330168	54330168
Base, with nuts, washer and gasket ...	54330169	54640364	54640364
Nut, terminal ...	170570	170570	170570
Washer, spring, terminal nut ...	185062	185062	185062
Screw, terminal ...	121610	121610	121610
Plunger ...	765918	765918	765918
Spring, plunger ...	765866	765866	765866
Connector, terminal to starter ...	272555	272555	272555
\$Field coils, set ...	272394	272394	272394
Terminal, main ...	272022	272022	272022
\$Sundry parts, set ...	271731	271731	271731

Part No. ... Model ...	25022Q M35G-I	25075A M35G-I	25521D M418G	26043A M45G	26066A M45G
\$Cover band ...	250322	250322	255557	270294	238781
Screw, cover band fixing ...	127584	127584	127584	127584	127584
Nut, cover band fixing screw ...	169160	169160	169160	169160	169160
\$Bolt, through fixing ...	228335	228335	255459	255459	255459
\$Cap, shaft ...	—	—	255854	255854	255854
\$Brushes, set ...	251108	251108	255659	255659	271365
\$Bracket or frame, commutator end ...	251935	251935	256748	271305	271420
\$ Bushing, bearing ...	251477	251477	255491	255491	255491
\$ Springs, set, brush tension ...	251942	251942	270004	270004	270004
\$Nut, shaft ...	291969	291969	255851	255851	255851
Washer, buffer ...	291970	291970	291252	291252	291252
Washer, spline ...	291971	291971	—	—	—
\$Pinion and barrel ...	250698	250698	—	—	—
Ring, barrel retaining ...	291857	291857	—	—	—
\$Spring, main ...	250404	250404	270889	270889	270889
Sleeve, screwed, with control nut ...	250716	250716	—	—	—
\$Pinion and sleeve ...	—	—	255649	255649	255194
\$ Spring, pinion retaining ...	250691	250691	255728	255728	255728
Guide, retaining spring ...	—	—	291606	291606	291606
Cup, retaining spring ...	—	—	255172	255172	255172
\$Bracket or frame, drive end ...	250412	54250532	256495	270258	270258
\$ Bushing, bearing ...	250678	253316	270038	270038	270038
Washer, thrust, drive end ...	—	158550	—	—	—
\$Armature ...	54250096	54250096	255463	270482	270482
\$Field coils, set ...	251089	251089	256578	271306	271306
Terminal, field coils ...	54252850	54252850	256745	255835	255835
Terminal, main ...	—	—	—	271429	271429
\$Sundry parts, set ...	256762	256762	256762	256762	256762

Part No. ... Model ...	25071A/B M35H
\$Cover band ...	250322
Screw, cover band fixing ...	127584
Nut, cover band fixing screw ...	169160
\$Bolt, through fixing ...	228335
\$Brushes, set ...	251108
\$Bracket or frame, commutator end ...	251935
\$ Bushing, bearing ...	251477
\$ Springs, set, brush tension ...	251942
\$Nut, shaft ...	291969
\$Spring, main ...	250404
Washer, buffer ...	292083
Cup, spring support ...	292084
Spring, run-off ...	292065
Sleeve, run-off spring ...	292071
Plate, run-off spring retaining ...	292059
Sleeve, screw-in ...	54250621
\$Pinion and barrel, with control nut ...	54250372
Collar, distance ...	291933
Cup, return spring ...	291931
\$Spring, pinion return ...	291932
\$Bracket or frame, drive end ...	54250532
\$ Bushing, bearing ...	253316
\$Armature ...	54250822
\$Field coils, set ...	54250820
Terminal, field coils ...	251730
\$Sundry parts, set ...	54251038

* Part of drive assembly

\$ Recommended spares for stock

STEERING COLUMN CONTROLS

Models CCU2 and CCU3

Part No. Model	... CCU2	*32965E CCU2	*32897D CCU3
§Horn bar, cover plate and top contact	333347	—	—
§Top cover assembly ...	—	330718	330677
§Top cover moulding ...	—	330678	330746
§Knob, horn push ...	324943	330671	330674
§Spring, horn push or ring ...	—	330632	330676
§Contact set, horn push ...	—	330676	330676
§Contact plate, horn push ...	—	330676	330676
§Plate, moulding, cover support ...	—	330676	330676
§Lever, trafficator ...	—	330676	330676
§Switch, trafficator, less lever ...	31381A	31380A	31380A
§Rotor, switch ...	311154	311153	311153
§Plunger, rotor ...	322150	322150	322150
§Pawl and springs set ...	324527	324527	324527
§Moulding, top ...	311151	311151	311151
§Moulding, base ...	311152	311152	311152
§Nut, 4 B.A., location pin ...	169290	—	—
§Connector, earth ...	—	330612	330612
§Contact, lower ...	330616	—	—
§Plate and contacts, cable fixing ...	330672	330672	330672
§Pin, bottom contact fixing ...	323920	—	—
§Clip, trafficator lever fixing ...	330709	—	—
§Sundry parts, set ...	331081	331081	331081

The following parts are serviced by the Vehicle Manufacturer

Plate, stator, retaining plate and sleeve ...	330626	54300234
Cable ...	863416	861189
Plate, cover ...	331735	—
Lever, trafficator, with motif ...	331825	—
End piece, horn bar ...	331419	—
Stator tube ...	331739	331054

Model CC5

Part No. Model	... CC5	*32915B CC5	*32993D CC5
Top cover ...	331301	—	—
Contact, horn push, with spring ...	331309	—	—
§Contact assembly, bottom ...	331305	333330	333078
§Bezel and top contact ...	—	54300301	169290
§Spring, horn push ...	—	169290	322382
§Nut, fixing ...	331345	322382	—
§Sundry parts, set ...	331345	322382	—

The following parts are serviced by the Vehicle Manufacturer

Knob, horn push ...	331306	—
Cover and motif ...	—	333079
Cable ...	—	864459

Model CC5


Part No. Model	... CC5	*33515A CC5	*33516B CC5	*33537A CC5	*33543A CC5
§Ring, horn push retaining ...	333253	324366	—	—	324366
§Cover, top moulding ...	—	54300274	—	—	—
§Contact, top ...	333255	333360	—	—	333230
§Bezel and top contact ...	—	—	333078	—	—
§Spring, horn push ...	333257	324866	331911	—	—
§Plate, retaining, and bottom contact ...	—	—	333330	—	—
§Cover and contact, lower ...	—	—	—	—	54300307
§Body and bottom contact ...	333415	—	—	—	—
§Nut, fixing ...	—	—	169290	—	—
§Screw, control fixing ...	—	113091	—	—	113611
†Brush ...	333418	—	—	—	—
§Sundry parts, set ...	—	322382	322382	—	—

The following parts are serviced by the Vehicle Manufacturer

Knob, horn push... ..	333422	333357	—	333357
Cover and motif	—	—	333079	—
Cable	—	—	865507	—

* Complete control serviced by Vehicle Manufacturer
§ Recommended spares for stock

 † Order separately

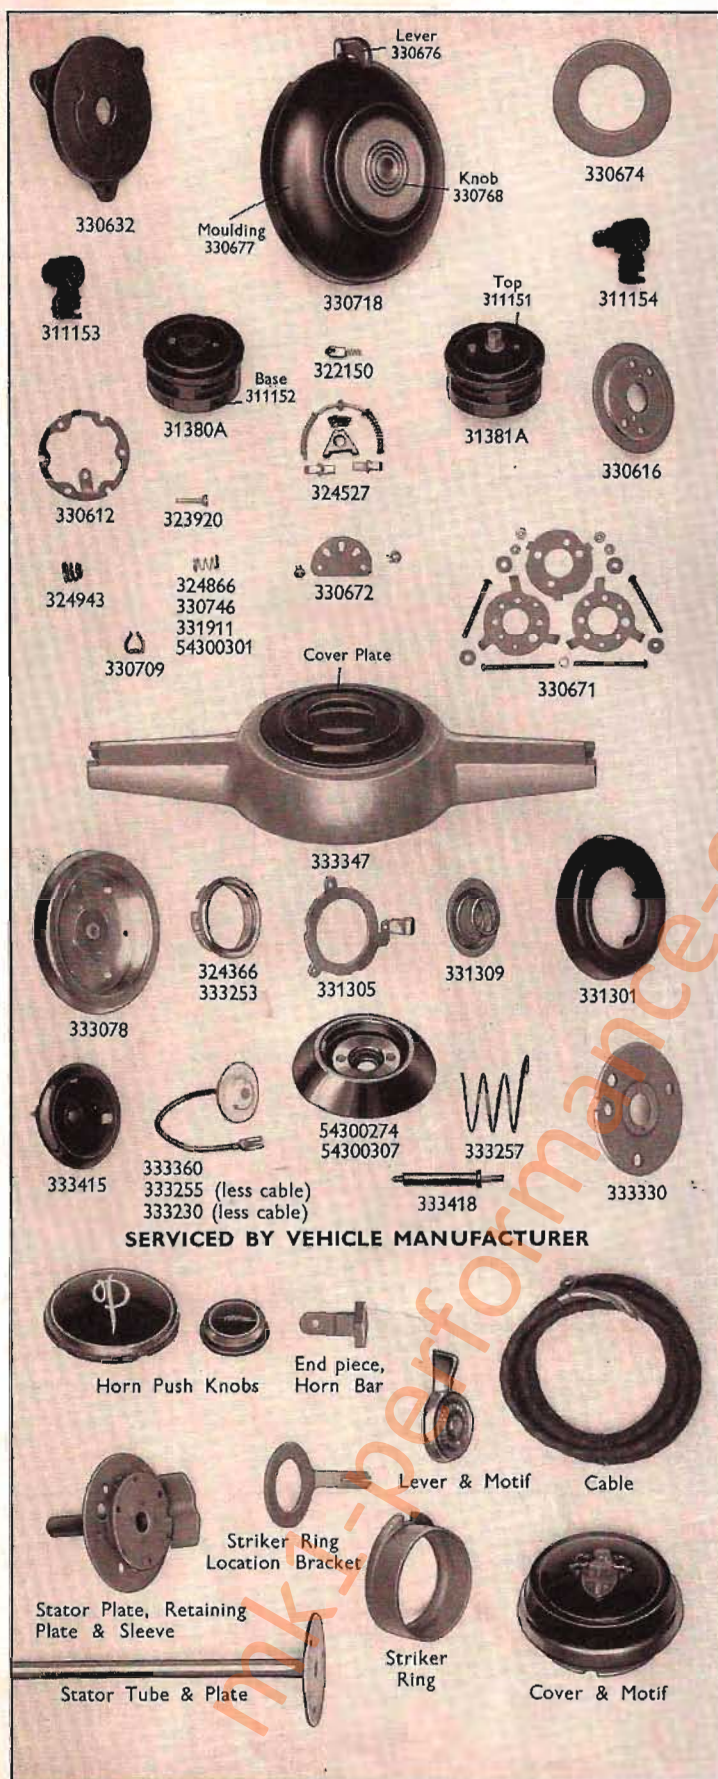

SERVICED BY VEHICLE MANUFACTURER



F700 AND P700 HEADLAMPS

Right hand drive, dip left

Part No.	51336H/J 58083D 58521A/B F700	51344E 51780D F700	51515H F700	51878A F700	51736D F700	51882A F700	51956D/E F700	58006E F700	58056B F700	58099E/F F700	58218D F700	58251F 58443A/D F700	58465B/D F700
Light unit	553921	553921	553921	555991	553921	555991	553921	553921	553921	553921	553921	553921	553921
Bulb holder	554602	554602	554602	54520187	554602	54520187	554602	554602	554602	554602	554602	554602	554602
Bulb	414	414	354	354	354	354	414	414	354	414	414	414	414

Right hand drive (Home only)

Part No.	58388D F700P	58143D P700	*58581A PL700
Light unit	555309	554308	556599
Spring, bulb retaining	554602	554602	556442
Bulb holder, main	554710	553780	553738
Bulb holder, pilot	553780	554354	414
Interior	414	989	416
Ring, seating	989		
Bulb, main			
Bulb, pilot			

Left hand drive, dip right

Part No.	513371/K 58086A/B 58522A/B F700	51345E 51781A/B F700	51516H/J F700	51879A F700	51737B F700	51883A F700	51966D/E F700	58007B/D F700	58057A/B F700	58100B/E F700	58219B F700	58252F 58444B/D F700	58466B/D F700
Light unit	555447	555447	555447	555306	555447	555306	555447	555447	555447	555447	555447	555447	555447
Bulb holder	554602	554602	554602	54520187	554602	54520187	554602	554602	554602	554602	554602	554602	554602
Bulb	355	355	355	355	355	355	355	355	355	355	355	355	355

Export Europe (except France)

Part No.	51782A/B F700	51517F/H F700	51880A F700	51884A F700	58008D F700
Light unit	553940	553940	555305	555305	553940
Bulb holder	554602	554602	54520187	54520187	554602
Bulb	370	370	370	370	370

Export Europe (except France and Sweden)

Part No.	58230D 58288A 58523A/B F700	58272A 58286A F700	58274A F700	58270A F700	58290A F700	58268A F700	58282A F700	58276A F700	58278A F700	58253E 58445A/D F700	58467B/D F700
Light unit	556452	556452	556452	556452	556452	556452	556452	556452	556452	556452	556452
Spring, bulb retaining	556442	556442	556442	556442	556442	556442	556442	556442	556442	556442	556442
Adaptor	553738	553738	553738	553738	553738	553738	553738	553738	553738	553738	553738
Bulb	410	410	410	410	410	410	410	410	410	410	410

Export France

Part No.	58231A/B 58289A/B 58524A/B F700	58273A 58287A F700	58275A F700	58271A F700	58291A/B F700	58269A F700	58283A F700	58277A F700	58279A F700	58254E 58447A/D F700	58468B/D F700
Light unit	556452	556452	556452	556452	556452	556452	556452	556452	556452	556452	556452
Spring, bulb retaining	556442	556442	556442	556442	556442	556442	556442	556442	556442	556442	556442
Adaptor	553738	553738	553738	553738	553738	553738	553738	553738	553738	553738	553738
Bulb	411	411	411	411	411	411	411	411	411	411	411

Export Sweden

Part No.	58456A/B 58458A 58525A F700	58451B 58459A F700	58452A F700	58450A F700	58463A F700	58457A F700	58453A F700	58455A F700	58446A/D 58545A/B F700	58460B/D F700
Light unit	54520148	54520148	54520148	54520148	54520148	54520148	54520148	54520148	54520148	54520148
Spring, bulb retaining	556442	556442	556442	556442	556442	556442	556442	556442	556442	556442
Adaptor	553738	553738	553738	553738	553738	553738	553738	553738	553738	553738
Bulb	410	410	410	410	410	410	410	410	410	410

Export North America (except U.S.A.)

Part No.	51533E F700	51987B F700	58008D F700
Light unit	555447	555447	555447
Adaptor	553724	553724	553724
Adaptor, conversion	554691	554691	554691
Bulb	355	355	355

The following parts are common to above lamps in appropriate column

Rim or door	554440	554439	554982	554982	554440	554439	556234	556353	556432	555747	54520122	54520158	556563
Screw, rim fixing	198898	198898	554983	554983	198898	198898	198898	198937	198913	198898	54127511	198913	119811
Washer, screw retaining	161385	161385	161385	161385	161385	161385	161385	161385	161385	161385	161385	161385	161385
Nut, rim fixing	187117	187117	—	—	187117	187117	187117	187117	187113	187117	187117	187117	—
Bracket, rim fixing	555704	555704	—	—	555704	555704	555704	555704	556362	555704	—	—	—
Excluder, dust	552906	552906	552906	552906	552906	552906	552906	552906	556388	552906	552906	552906	—
Plate, light unit retaining	554872	554872	554872	554872	554872	554872	554872	554872	554872	554872	554872	554872	554872
Screw, unit rim	186137	186137	186137	186137	186137	186137	186137	186137	186137	186137	186137	186137	186137
Rim, unit seating	554871	554871	554871	554871	554871	554871	554871	554871	554871	554871	554871	554871	554871
Sleeve, terminal	555910	555910	555910	—	555910	—	555910	555910	555910	555910	555910	555910	555910
Gasket, rubber	554280	554279	554279	554279	555415	554279	554280	556345	556446	556521	556590	54520723	554279
Screw and washer, trimmer	554288	554288	554288	554288	554288	554288	554288	554288	554288	554288	554288	554288	554288
Spring, trimmer	552813	552813	552813	552813	552813	552813	552813	552813	552813	552813	552813	552813	552813
Sleeve, sealing	554626	554626	554626	554626	554626	554626	554626	554626	554626	554626	554626	554626	554626

* Right hand drive, Home and Export

† Part of 555306 and 555305

§ Recommended spares for stock

|| Export U.S.A. Indirect

¶ Export Sweden

F700 AND P700 HEADLAMPS



Export U.S.A.

Part No. ...	58011B	58487A/B	58488A/B	58494B	58495A	58496A	58497A	58499A 58474A	58526A	58527A
Model ...	F700	F700	F700	F700	F700	F700	F700	F700	F700	F700
§ Rim or door ...	556353	54520122	54520158	556563	555747	54520673	54520650	54520651	54520650	54520158
§ Screw, rim fixing ...	198937	54127511	198913	119811	198898	198898	198898	198898	198898	198913
Washer, screw retaining ...	161385	161385	161385	161385	161385	161385	161385	161385	161385	161385
§ Nut, rim fixing ...	187117	—	187117	—	187117	187117	187117	187117	187117	187117
Bracket, rim fixing ...	555704	—	555940	—	555704	555704	555704	555704	555704	555940
§ Excluder, dust ...	552906	—	—	—	—	—	—	—	—	—
§ Plate, light unit retaining ...	554872	554179	554179	554179	554179	554179	554179	554179	554179	554179
Screw, unit rim ...	*186137	186194	186194	186194	186194	186194	186194	186194	186194	186194
Rim, unit seating ...	*554871	554175	554175	554175	554175	554175	554175	554175	554175	554175
Spring, seating rim fixing ...	—	554180	554180	554180	554180	554180	554180	554180	554180	554180
§ Adaptor ...	553724	553738	553738	553738	553738	553738	553738	553738	553738	553738
§ Gasket, rubber ...	556345	54520508	54520512	554227	54520670	554178	554178	554227	554178	54520512
Screw and washer, trimmer ...	554288	554182	554182	554182	554182	554182	554182	554182	554182	554182
Spring, trimmer ...	552813	554202	554202	554202	554202	554202	554202	554202	554202	554202
Sleeve, sealing ...	554626	—	—	—	—	—	—	—	—	—

* Part of assembly 554872

§ Recommended spares for stock

HEADLAMPS

Models PF700 and S700

Right Hand Drive, Dip Left	Part No. Model ...	58164A PF700	51023E S700
\$Light unit ...	...	556565	553921
\$Bulb holder ...	...	554602	554602
\$Sleeve, terminal ...	...	555910	555910
\$Bulb ...	...	354	354

Right Hand Drive, Dip Left (Home only)	Part No. Model ...	58165A PF700	—
\$Light unit ...	...	556567	—
\$Bulb holder ...	...	554855	—
\$Bulb ...	...	404	—

Left Hand Drive, Dip Right	Part No. Model ...	58166A PF700	51025F S700
\$Light unit ...	...	556566	555447
\$Bulb holder ...	...	554602	554602
\$Sleeve, terminal ...	...	555910	555910
\$Bulb ...	...	355	355

Export Europe (not France)	Part No. Model ...	51922B PF700	—
\$Light unit ...	...	554917	—
\$Bulb holder ...	...	554602	—
\$Sleeve, terminal ...	...	555910	—
\$Bulb ...	...	370	—

Export Europe (except France and Sweden) later	Part No. Model ...	—	58295A S700
\$Light unit ...	...	—	556452
\$Adaptor ...	...	—	553738
\$Sleeve, terminal ...	...	—	555910
\$Bulb ...	...	—	410

Export Sweden (later)	Part No. Model ...	—	58464A S700
\$Light unit ...	...	—	54520148
\$Spring, bulb retaining ...	...	—	556442
\$Adaptor ...	...	—	553738
\$Sleeve, terminal ...	...	—	555910
\$Bulb ...	...	—	410


Export U.S.A.	Part No. Model ...	—	51682A S700
\$Bulb holder ...	...	—	553724
\$Base, lamp seating ...	...	—	511356
\$Sleeve, terminal ...	...	—	555910

Export France	Part No. Model ...	51923B PF700EF	—
\$Light unit ...	...	555356	—
\$Backshell ...	...	552943	—
\$Bulb holder ...	...	562303	—
\$Clip and screw ...	...	562306	—
\$Sleeve, terminal ...	...	555910	—

The following parts are common to lamps
shown in appropriate column

\$Rim or door ...	556027	553248
\$Bracket, rim fixing ...	553953	—
\$Screw, bracket securing ...	116003	—
\$Screw, rim fixing ...	552796	144921
\$Excluder, dust ...	554459	—
\$Rim, light unit seating ...	554907	—
\$Plate, light unit retaining ...	554906	—
\$Screw, unit rim ...	186137	—
\$Gasket, body ...	553955	—
\$Screw, trimmer, with washer ...	552708	—
\$Spring, control ...	553872	—
\$Screw, body fixing ...	117020	—
\$Sleeve, sealing ...	554626	—
\$Wire, light unit retaining ...	—	504665
\$Plate, rim fixing ...	—	534296
\$Nut, lamp fixing ...	—	180377
\$Washer, fixing bolt ...	—	188349
\$Bolt, lamp fixing ...	—	505122
\$Clip, cable ...	—	552335
\$Screw, cable clip ...	—	186181

 \$ Recommended spares for stock

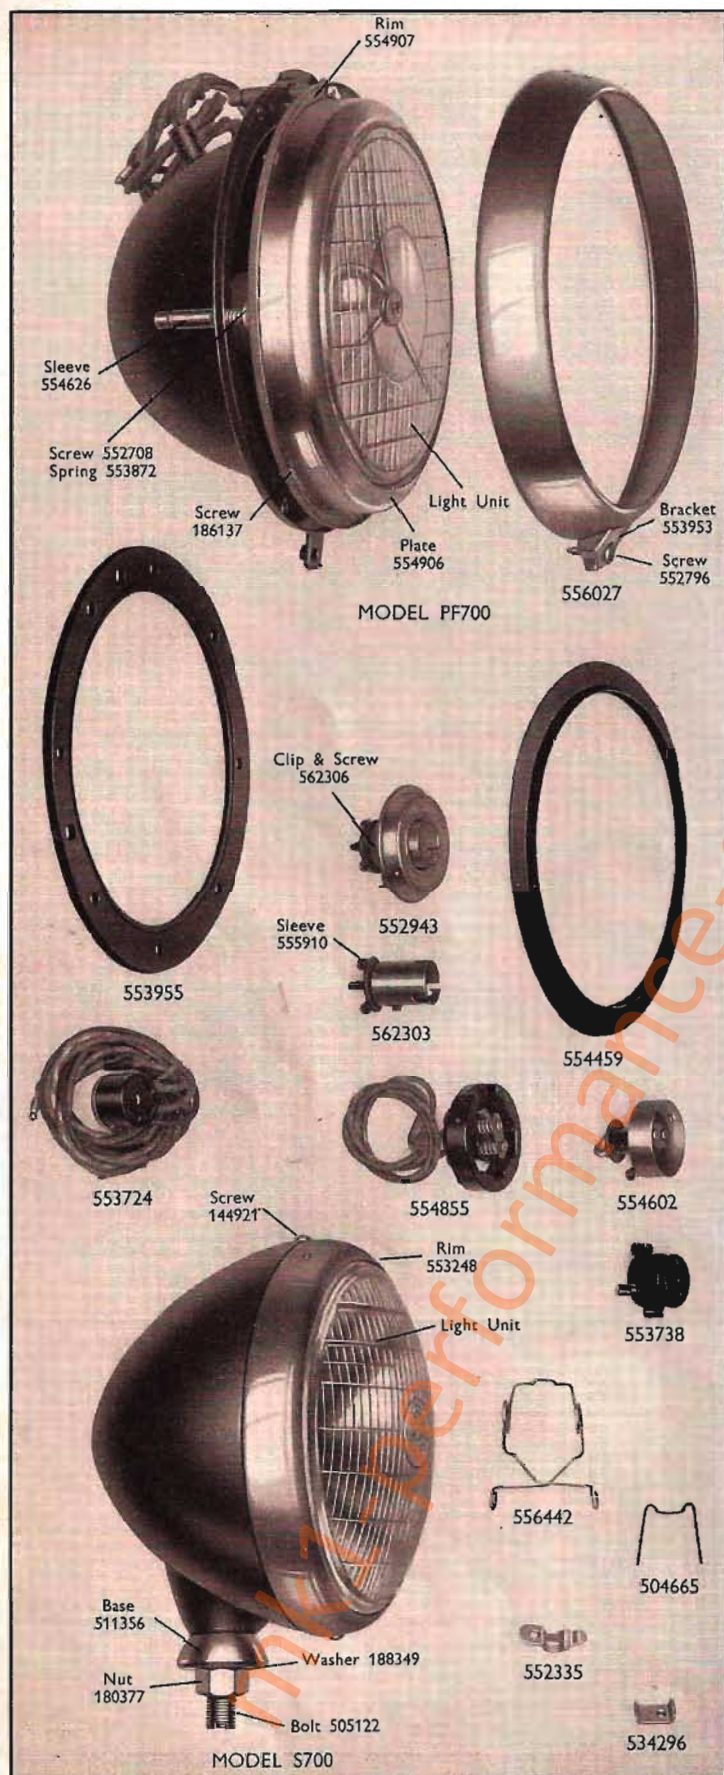

FLASHER LAMPS

Models 488 and 594

Part No. Model	53359D 488	52337A 594	52345A 594	53600D 594
\$Rim or door	572734	572734	572734	572734
\$Lens	573266	576108	576983	54571112
\$Sleeve, terminal	555910	555910	555910	555910
\$Body, rubber	572728	576105	576105	576105
Bulb holder	573285	576986	576986	576986
\$Interior, bulb holder	552103	552103	552103	552103
\$Bulb	382	382	382	382

Models 556 and 559

Part No. Model	53358D 556	53362B 559	53367D 556	53778A 559	53807A 559
\$Lens	575026	535138	575026	535138	535138
Screw, lens fixing	572072	145781	572072	145781	145781
Washer, screw retaining	161385	161775	161385	161775	161775
Washer, leatheroid	161727	—	161727	—	—
\$Gasket, lens seating	574786	535131	574786	535131	535131
\$Body, rubber	574788	—	574788	—	—
Base or backplate with bulb holder	574796	535134	575024	535134	535134
\$Interior, bulb holder	552103	—	552101	—	—
\$Sleeve, terminal	555910	—	555910	—	—
Nut, lens fixing screw	574785	—	574785	—	—
\$Gasket, lamp seating	—	535126	—	54570365	54570731
\$Bulb	382	382	335	382	335

Models 568 and 611

Part No. Model	52392B 611	52393B 611	53457D 568
\$Lens	577523	577529	535242
Screw, lens seating	103441	103441	106351
Washer, screw retaining	—	—	161385
Washer, leatheroid, screw seating	—	—	161727
\$Gasket, lens seating	577524	577524	535236
Base or backplate with bulb holder	577528	577528	535241
\$Interior, bulb holder	573832	573832	—
\$Screw, terminal	—	—	120560
\$Gasket, lamp seating	577525	577525	535235
\$Bulb	382	382	335

Model 539

Part No. Model	52213B 539	52282B 539	52296B 539
\$Rim and lens	574233	574267	575644
\$Lens	574243	574256	574256
\$Ring, sliding	574255	574255	574255
\$Gasket, lens seating	575640	575640	575640
\$Body, with bulb holder	574234	574234	574234
Interior, bulb holder	573832	573832	573832
\$Gasket, body seating	574231	574231	574231
\$Grommet, cable	573825	—	573825
\$Bulb	382	382	382

Model 617


Part No. Model	53706A 617	53707A 617	53744A 617
\$Bulb	335	335	335

Part No. Model	53808A 617	53809A 617	—
\$Bulb	319	319	—

The following parts are common to Model 617 flasher lamps shown in appropriate column

\$Nut, lens fixing	575219	575219	575219
\$Lens	535830	535830	535830
\$Rubber, lens seating	535827	535827	535827
Plate, baffle	535829	535829	535829
Backplate with bulb holder	535824	535824	535824
\$Screw, terminal	120560	120560	120560
\$Gasket, base, lamp seating	535831	535832	535828

 \$ Recommended spares for stock

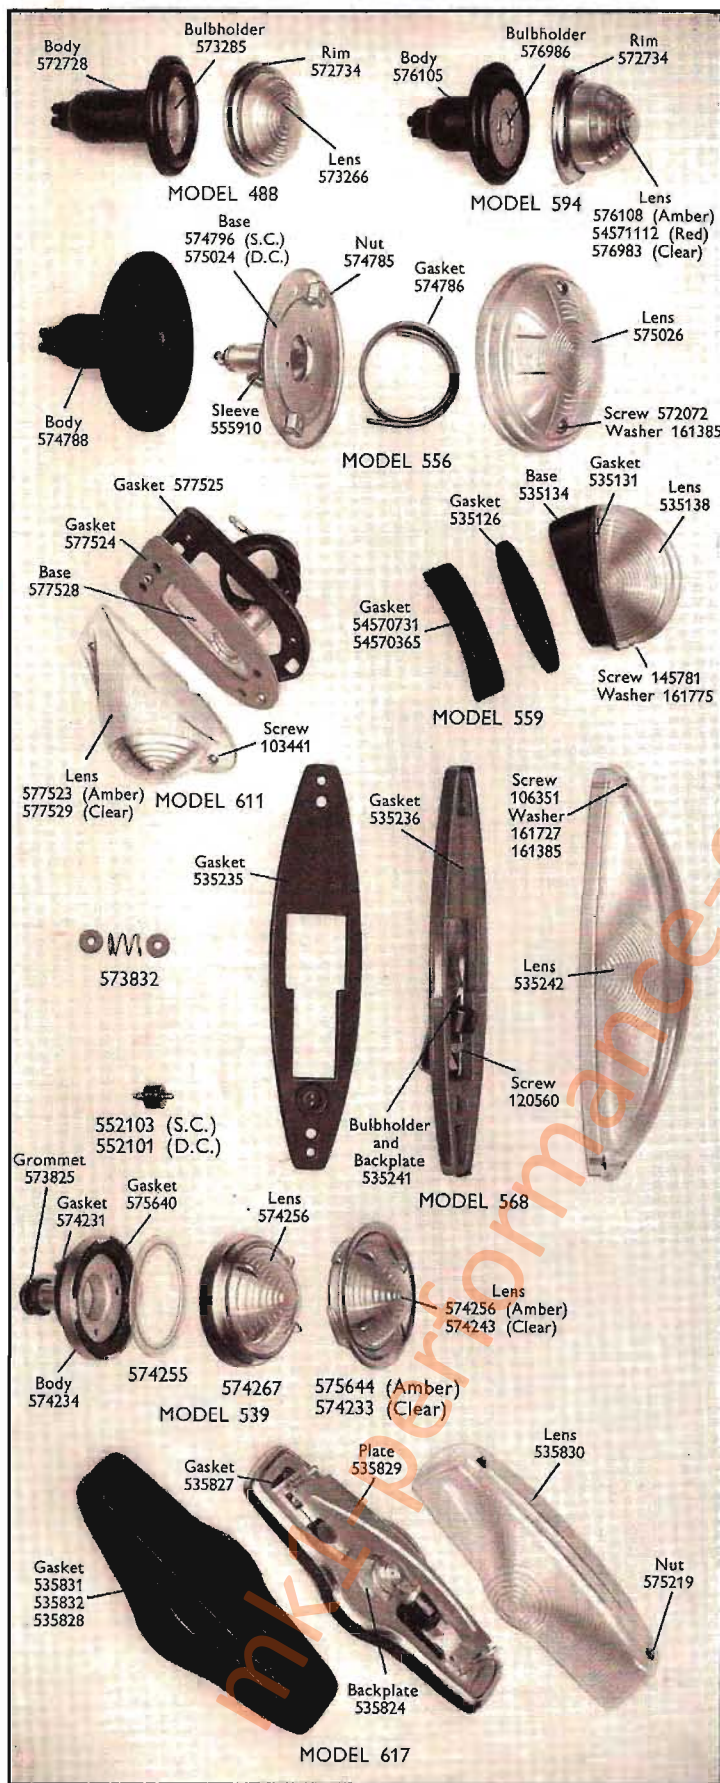

S.C. ... Single contact D.C. ... Double contact

SIDE AND SIDE FLASHER LAMPS

Models LD109A and 595

Part No. Model	52105B LD109A	52342E 595	52466A 595
Rim	521989	576227	576227
Screw, with locking plate	523429	—	—
Wire, lens fixing	522869	—	—
Washer, lens joint	520354	—	—
Lens	571211	576223	576223
Screw, lens fixing	—	54100081	54100081
Washer, screw retaining	—	161385	161385
Gasket, lens seating	—	576228	576228
Bulb holder shell	571197	—	—
Interior, bulb holder	—	573828	573832
Reflector	525849	—	—
Wires, reflector fixing, set	522869	—	—
Washer, lens joint	520354	—	—
Spring, bulb holder fixing	524637	—	—
Nut, lamp fixing	181261	—	—
Washer, lamp fixing nut	188350	—	—
Washer, base	146240	—	—
Base, lamp seating	522003	—	—
Bolt or screw, lamp fixing	522964	103414	103414
Washer, fixing screw	—	131023	131023
Medallion	524874	—	—
Terminal, earth	524733	—	—
Gasket, lamp seating	—	576229	576229
Bulb	207	380	207

Models 488, 489-1 and 594

Part No. Model	52139E 489-1	52240B 488	52338A 594	52391A 594
Rim, lens and gasket	572776	—	—	—
Rim	572781	572734	572734	572734
Gasket	572775	—	—	—
Lens	*572772	572715	576983	576983
Bulb holder	572783	572727	576985	576986
Interior, bulb holder	553780	552101	552101	552103
Sleeve, terminal	555910	555910	555910	555910
Body, rubber	572763	572728	576105	576105
Bulb	222	380	380	207

Model 630


Part No. Model	52422E/F 630	52427E/F 630
Lens, flasher, with light shield	54570135	54570320
Part No. Model	52423E/F 630	52428E/F 630
Lens, flasher, with light shield	54570323	54570324
The following parts are common to lamps shown in appropriate column		
Screw, lens fixing	54110111	54110111
Lens, side lamp	54570322	54570132
Gasket, lens seating and lamp seating	54570134	54570134
Interior, bulb holder, flasher	573832	573832
Interior, bulb holder, side lamp	553780	553780
Grommet, cable entry, flasher	576401	576401
Grommet, cable entry, side lamp	574049	574049
Base, with bulb holder	54570319	54570319
Bulb, flasher	382	382
Bulb, side lamp	989	989

Models 539, 619 and 632

Part No. Model	52274B 52286D 539	52306B 539	52407A 619	52425D 632
Rim and lens	574258	574258	—	54570557
Lens	574243	574243	54570139	54570378
Base or body	576634	576357	54570138	54570363
Bulb, side lamp	989	209	989	989
Part No. Model	52394D 539	52333D 539	52408A 619	52430E 632
Rim and lens	574233	574258	—	54570651
Lens	574243	574243	54570166	54570471
Base or body	576634	576356	54570138	54570363
Bulb, side lamp	989	380	989	989
The following parts are common to lamps shown in appropriate column				
Gasket, lens seating	575640	575640	576805	576805
Ring, sliding	574255	574255	574616	574616
Interior, bulb holder, flasher	—	—	573832	573832
Interior, bulb holder, side lamp	553780	573828	553780	553780
Grommet, cable entry, flasher	—	—	576401	576401
Grommet, cable entry, side lamp	574049	—	574049	574049
Gasket, lamp seating	574231	574231	54570032	54570381
Bulb, flasher	—	—	382	382

* Part of assembly 572776

 § Recommended spares for stock

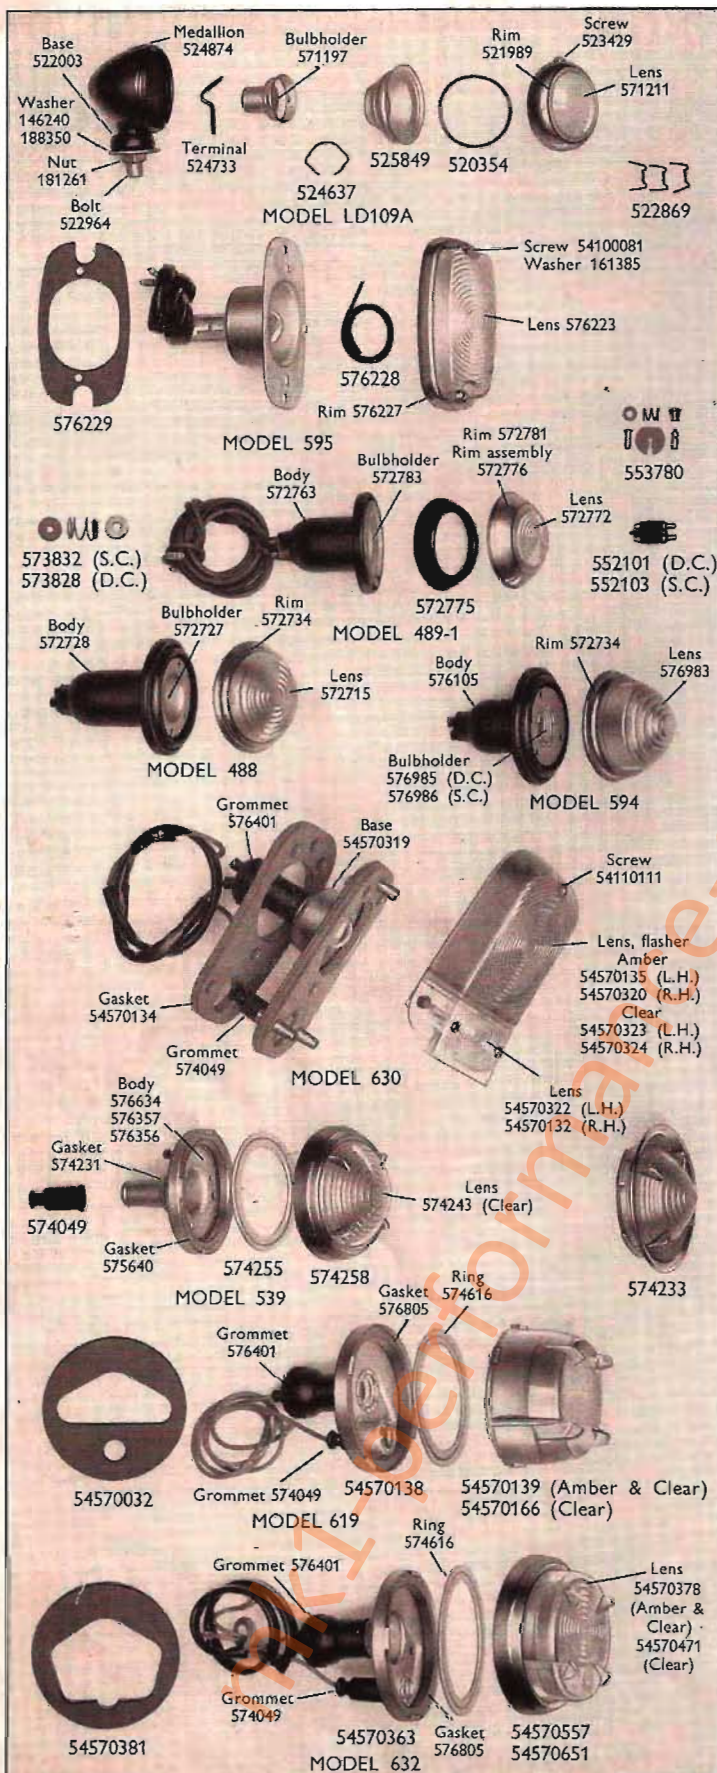

S.C. ... Single contact D.C. ... Double contact L.H. ... Left hand R.H. ... Right hand

SIDE AND SIDE FLASHER LAMPS

Models 516 and 545

Part No.	...	...	...	52254A 52182E 516	52214F 516	52215D 545
Model	...	...	...	516	516	545
Base, lamp mounting	...	...	...	573618	*573636	—
Bracket, lamp fixing	...	...	...	—	*573635	—
Washer, lamp fixing	...	...	...	185085	185085	188330
Washer, mudwing	...	...	...	551803	551803	—
Interior, bulb holder	...	...	...	553780	553780	553780
Backplate	...	...	...	—	—	574417
Grommet	...	...	...	—	—	574049
Bulb	...	...	...	222	222	222

Part No.	...	...	...	52348D 516	52436A 516	52216D 545
Model	...	...	...	516	516	545
Plinth or base mounting	...	...	...	574508	573618	—
Washer, lamp seating	...	...	...	574509	—	—
Piece, distance, mudwing	...	...	...	577162	—	—
Washer, lamp fixing	...	...	...	188350	185085	188330
Interior, bulb holder	...	...	...	553780	553780	573828
Backplate	...	...	...	—	—	574424
Washer, mudwing	...	...	...	—	551803	—
Bulb	...	...	...	222	222	380

The following parts are common to lamps shown in appropriate column

Screw, bulb holder fixing	116141	116141	—
Washer, retaining screw	161385	161385	—
Rim, front	573646	573646	574431
Screw, rim fixing	—	—	133211
Gasket, lens seating	573619	573619	574418
Lens	573615	573615	574413
Bracket, with bulb holder	573624	573624	—
Gasket, backplate seating	—	—	574419
Sleeve, terminal	—	—	188818
Bolt, lamp fixing	520395	520395	—
Nut, lamp fixing	181261	181261	166014

Models 584 and 625

Part No.	...	...	...	52506B 584	52508B 584	52416A/B 625
Model	...	...	...	584	584	625
Lens	...	...	...	54571509	54571509	54570287
Shield	...	...	...	—	—	54570113

Part No.	...	...	...	52507B 584	52509B 584	52429A/B 625
Model	...	...	...	584	584	625
Lens	...	...	...	54571508	54571508	54570473
Shield	...	...	...	—	—	54570113

The following parts are common to lamps shown in appropriate column

Rim	576285	576285	—
Screw, rim fixing	144921	144921	—
Washer, retaining screw	161385	161385	—
Cover, lens	—	—	54570609
Ring, sliding	—	—	54570116
Gasket, lens seating	576288	576288	54570114
Lens, flasher	576286	—	—
Interior, bulb holder, side lamp	553780	553780	553780
Interior, bulb holder, flasher	573832	573832	573832
Grommet, cable, side lamp	574049	574049	574049
Grommet, cable, flasher	573825	573825	576401
Gasket, lamp seating	—	—	54570115
Body	54571661	54571661	—
Bulb, side lamp	222	222	989
Bulb, flasher	382	382	382

Models 633 and 634


Part No.	...	...	...	52431B 633	52432D/E 634	52433D/E 634
Model	...	...	...	633	634	634
Lens, flasher	...	...	...	54570392	54570623	54570620

Part No.	...	...	...	52446B 633	52434D/E 634	52435D/E 634
Model	...	...	...	633	634	634
Lens, flasher	...	...	...	54570583	54570621	54570622

The following parts are common to lamps shown in appropriate column

Lens, side lamp	54570391	54570624	54570619
Screw, lens fixing	54110171	†114501	†114501
Washer, screw retaining	161020	†161385	†161385
Washer, leatheroid, seating screw	—	†161727	†161727
Rim	54570396	—	—
Gasket, lens seating	54570397	54570263	54570263
Interior, bulb holder, side lamp	553780	553780	553780
Interior, bulb holder, flasher	573832	573832	573832
Gasket, lamp seating	54570398	54570264	54570264
Grommet, cable entry, side lamp	574049	574049	574049
Grommet, cable entry, flasher	576401	576401	576401
Body or base	54570395	54570551	54570552
Bulb, side lamp	989	989	989
Bulb, flasher	382	382	382

 * Order separately † Part of lens assemblies § Recommended spares for stock

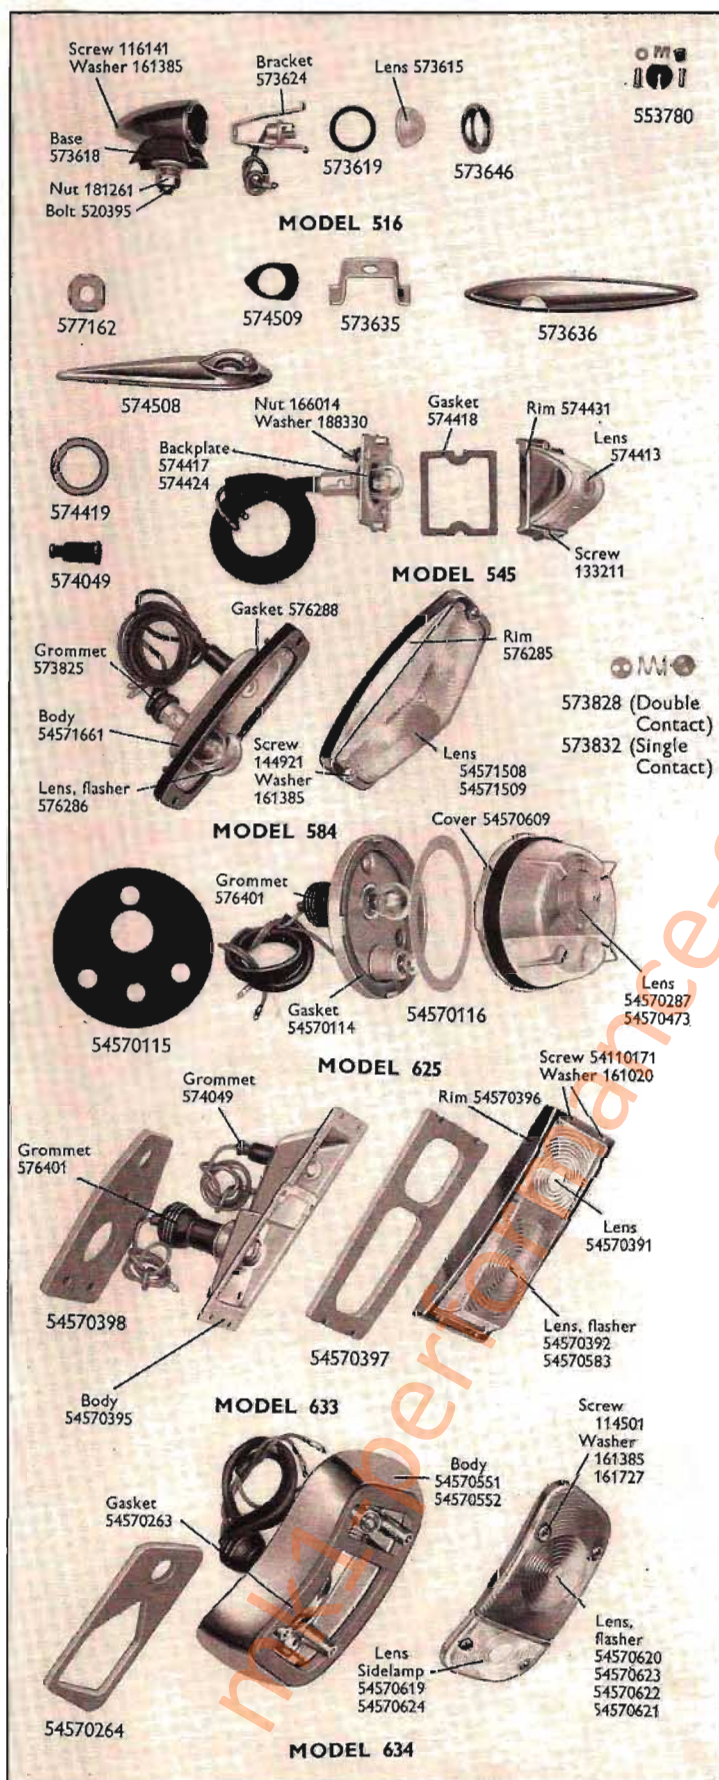

SIDE LAMPS

Models 1130 and 581

Part No. Model	52260E 1130A-1	52298B 581	52307B 1130A-1
\$Lens	571584	576117	571584
\$Screw, lens fixing	118261	576396	118261
Washer, screw retaining	—	161385	—
Washer, fibre	—	161732	—
\$Ring, rubber, lens seating	574376	—	574376
Base, with bulb holder	574383	576393	574380
\$Interior, bulb holder	553780	553780	552101
\$Sleeve, terminal	555910	188818	555910
\$Grommet	—	574049	573825
\$Gasket, rubber, base	571560	576390	571560
*Screw, lamp fixing	142725	—	142725
*Washer, spring	185053	—	185053
\$Screw, base fixing	198943	—	198943
\$Bulb	989	989	209

BOOT LIGHT, MAP READING, STEP LIGHT AND REVERSE LAMPS

Part No. Model	39006A PIL	52139E 489-1	53412B 464	53787D 644	53789A 645
\$Cover	319003	—	—	54570538	54570522
\$Screw, cover fixing	—	—	—	54110151	54110221
\$Rim, lens and gasket	—	572776	—	—	—
Rim	—	572781	573153	—	—
Gasket	—	572775	—	—	—
Screw, rim fixing	—	—	572072	—	—
Washer, screw retaining	—	—	161385	—	161385
\$Lens	—	571990	54570537	54570520	—
\$Gasket, lens seating	—	571979	54570536	54570521	—
\$Bulb holder	—	572783	—	—	—
\$Interior, bulb holder	—	553780	552103	—	—
\$Gasket, lamp seating	—	—	—	—	54570524
\$Sleeve, terminal	188818	555910	555910	555910	555910
\$Body, rubber	—	572763	—	—	—
\$Grommet, cable	—	—	526302	572039	—
Base	—	—	—	54570535	54570530
\$Bulb	256	222	382	382	382

ROOF, INTERIOR AND DASH LAMPS, RADIATOR BADGE AND TAXI SIGN

Part No. Model	56060A 562	56060B 562
\$Bulb	382	382

Part No. Model	56061A 562	56061B 562
\$Sleeve, terminal	188818	188818
\$Bulb	380	380

Part No. Model	56062B 562	56062D 562
\$Sleeve, terminal	188818	188818
\$Bulb	382	382

Part No. Model	56063B 562	56063D 562
\$Sleeve, terminal	188818	188818
\$Bulb	207	207

The following parts are common to Model 562 lamps shown in appropriate column

\$Lens	535154	54570209
\$Rim	535156	535156
\$Screw, rim fixing	198899	54127517
Nut, securing rim fixing screw	187108	187108
*Gasket, seating	535380	535380

Part No. Model	52447A 513	56022B 300FS	63000A D20-2	534539 RL2
\$Window or lens	—	540169	622114	—
\$Cover	—	555910	—	—
\$Sleeve, terminal	—	—	622514	—
Base, with bulb holder	571585	—	622117	—
\$Spring, top cover fixing	—	—	—	—
\$Interior	552103	—	—	—
\$Bulb	382	207	209	222

MAP LIGHT


Body	574825
Glass	573915
Gasket	573916

* Order Separately

† Part of 576393

‡ Part of 572776

 § Recommended spares for stock

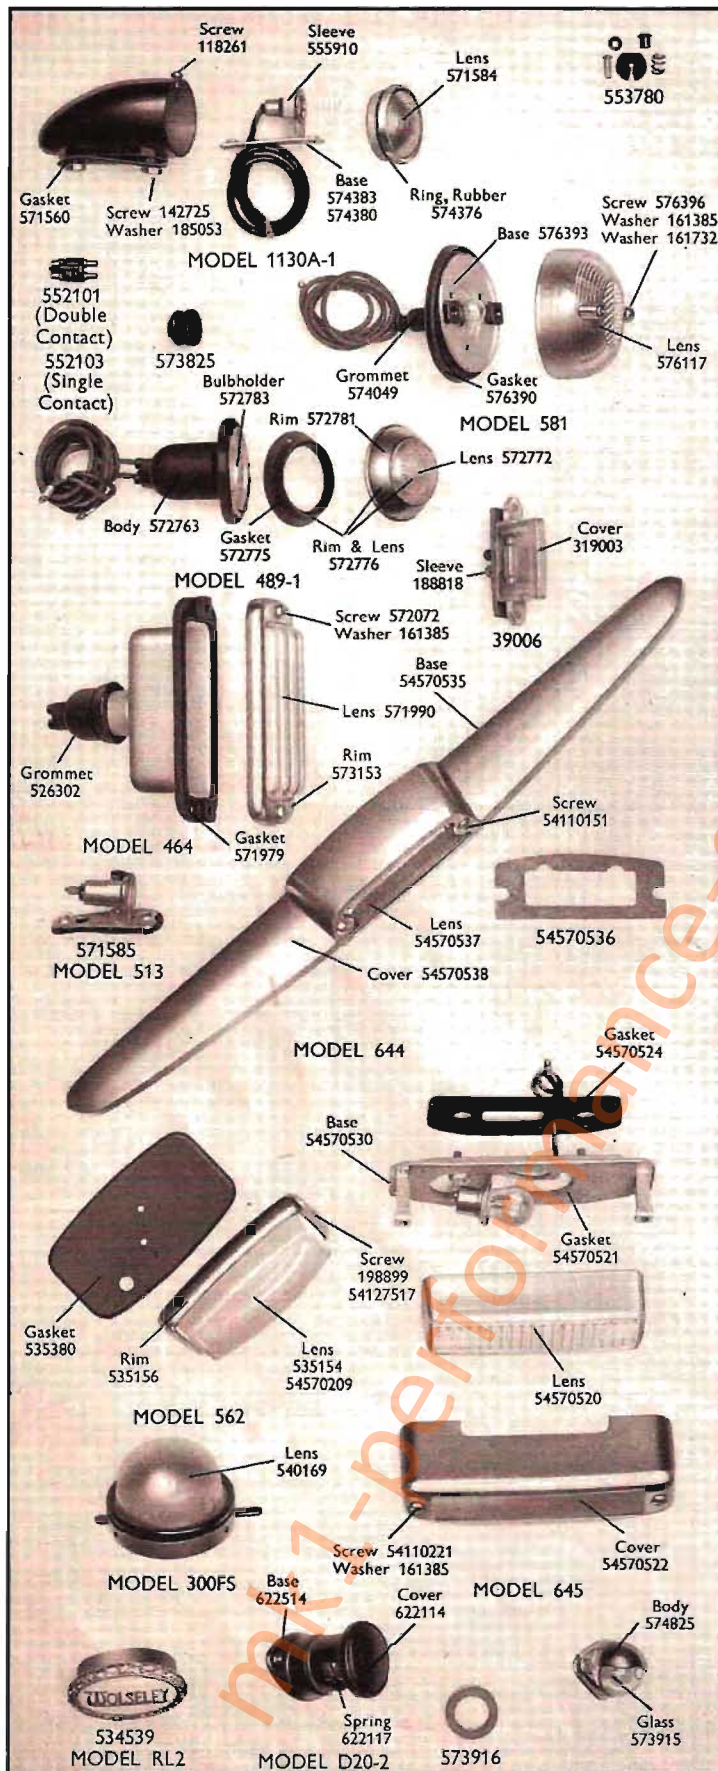

STOP TAIL LAMPS

Models 488, 551 and 594

Part No. Model ...	53178H 488	53384B 551	53564A/B 594
§ Rim or door ...	572734	*574615	572734
§ Rubber, lens seating ...	576805	576805	—
§ Lens ...	54570664	575473	576109
§ Rubber, body seating ...	—	574607	—
§ Bulb holder ...	572727	574608	576985
§ Interior ...	552101	573828	552101
§ Sleeve, terminal ...	555910	555910	555910
§ Body, rubber ...	572728	—	576105
§ Ring, sliding ...	—	574616	—
§ Bulb ...	380	380	380

Model 597

Part No. Model ...	53589E/F 597
§ Rim and plate ...	576873
§ Screw, rim fixing ...	54110190
§ Washer, screw retaining ...	161385
§ Rubber, rim seating ...	576870
§ Lens, tail lamp ...	574226
§ Ring, sliding ...	574255
§ Rubber, lens seating, tail lamp ...	575640
§ Rubber, body seating, tail lamp ...	574231
§ Body, with bulb holder, tail lamp ...	576634
§ Interior, bulb holder, tail lamp ...	553780
§ Grommet, bulb holder, tail lamp ...	574049
§ Lens, stop lamp and reflex ...	574609
§ Ring, sliding ...	574616
§ Rubber, lens seating, stop lamp ...	576805
§ Rubber, body seating, stop lamp ...	574607
§ Body, with bulb holder, stop lamp ...	576875
§ Interior, bulb holder, stop lamp ...	573832
§ Grommet, bulb holder, stop lamp ...	573825
§ Screw, lamp fixing ...	186137
§ Sleeve, terminal ...	555910
§ Bulb, tail lamp ...	989
§ Bulb, stop lamp ...	382

STOP TAIL AND FLASHER LAMPS

Model 597

Part No. Model ...	53588E/F 597	53590H 597
§ Rim and plate ...	576873	576873
§ Screw, rim fixing ...	54110190	54110190
§ Washer, screw retaining ...	161385	161385
§ Rubber, rim seating ...	576870	576870
§ Lens, flasher ...	574256	54570779
§ Ring, sliding, flasher ...	574255	574255
§ Rubber, lens seating, flasher ...	575640	575640
§ Rubber, body seating, flasher ...	574231	574231
§ Body, flasher ...	575658	575658
§ Interior, bulb holder, flasher ...	573832	573832
§ Lens, stop tail and reflex ...	574609	574609
§ Ring, sliding, stop tail ...	574616	574616
§ Rubber, lens seating, stop tail ...	576805	576805
§ Rubber, body seating, stop tail ...	574607	574607
§ Body, stop tail ...	576807	576807
§ Interior, bulb holder, stop tail ...	573828	573828
§ Grommet, bulb holder ...	573825	573825
§ Screw, fixing ...	186137	186137
§ Sleeve, terminal ...	555910	555910
§ Bulb, flasher ...	382	382
§ Bulb, stop tail ...	380	380


STOP TAIL AND REFLEX LAMPS

Model 549

Part No. Model ...	53330D 549	53576A 549	53577A 549
§ Rim and bulb holder ...	574636	576725	576724
§ Rubber, lamp seating ...	574637	576731	576730
§ Screw, body fixing ...	126544	—	—
Part No. Model ...	53838A 549	53839A 549	—
§ Rim and bulb holder ...	574654	574655	—
§ Rubber, lamp seating ...	54571147	54571147	—
The following parts are common to lamps shown in appropriate column			
§ Lens and reflex ...	574635	574635	574635
§ Screw, lens fixing ...	572289	572289	572289
§ Rubber, lens seating ...	574634	574634	574634
§ Sleeve, terminal ...	555910	555910	555910
§ Bulb ...	380	380	380

* Rim and lens

 § Recommended spares for stock

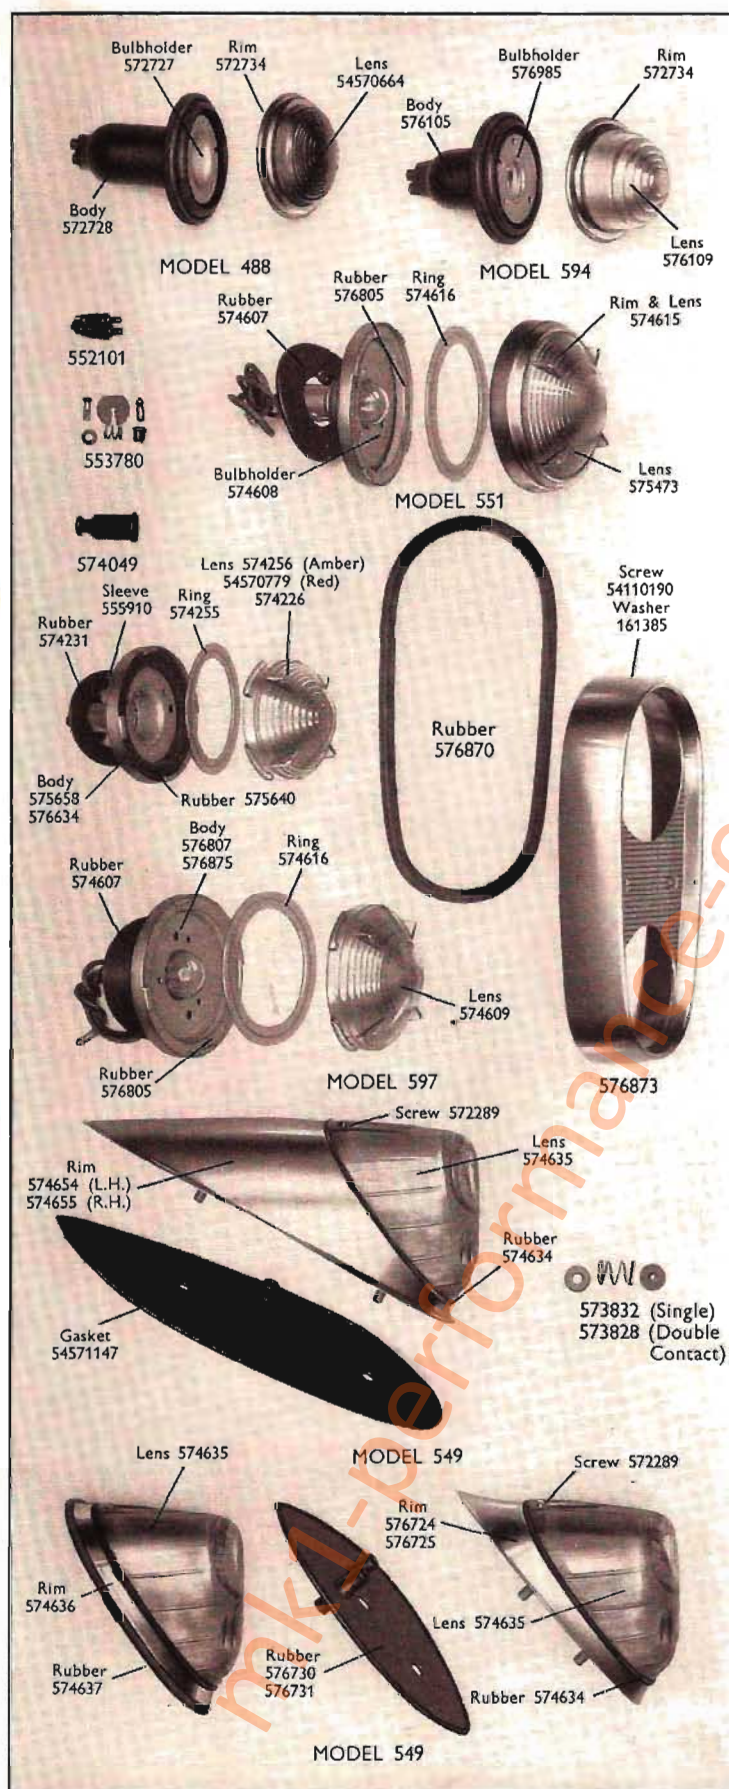

L.H. ... Left Hand

R.H. ... Right Hand

STOP TAIL, FLASHER AND REFLEX LAMPS

Model 551

Part No. Model	53384B 551
§ Rim and lens	574615
§ Lens and reflex	575473
§ Ring, sliding	574616
§ Rubber, lens seating	576805
§ Rubber, body seating	574607
§ Backplate with bulb holder	574608
§ Interior, bulb holder	573828
§ Sleeve, terminal	555910
§ Bulb	380

Models 558 and 523

Part No. Model	53479D 558	53634A 558	53280L 523
§ Rim or bezel	574874	574874	574072
§ Screw, rim or lens fixing	121501	121501	574064
§ Washer, screw retaining	161385	161385	161385
§ Lens	575581	575584	574069
§ Gasket, rubber, lens seating	574884	574884	574065
§ Plate, steel, masking	574889	574889	—
§ Seal, rubber, masking	575580	575580	—
§ Bracket, with bulb holders	574886	574886	—
§ Interior, bulb holder, single contact	552103	552103	573832
§ Interior, bulb holder, double contact	552101	552101	573828
§ Cover, bulb holder	574885	574885	—
§ Base, with bulb holder shell	—	—	574075
§ Grommet	—	—	573825
§ Sleeve, terminal	555910	555910	555910
§ Bulb, flasher	382	382	382
§ Bulb, stop tail	380	380	380

Model 596

Part No. Model	53586B 596	53663A 596	53664A 596
§ Lens	576337	576337	576337

Part No. Model	53587B 596	53665A 596	53666A 596
§ Lens	576338	576338	576338

The following parts are common to Model 596 lamps shown in appropriate column

§ Rim	576342	577601	577116
§ Screw, rim fixing	—	186130	186130
§ Strip, cover, lens joint	576334	576334	576334
§ Plate, retaining	576343	577605	577605
§ Gasket, rubber, lens seating	576335	576335	576335
§ Gasket, rubber, base seating	577103	577602	577118
§ Nut, round, base fixing	575623	575623	575623
§ Nut, locking, top	166014	166014	166014
§ Washer, locking	188327	188327	188327
§ Nut, base fixing	577105	577105	577105
§ Interior, bulb holder, flasher	573832	573832	573832
§ Interior, bulb holder, stop tail	573828	573828	573828
§ Grommet, cable, single	859341	859341	859341
§ Grommet, cable, double	576401	576401	576401
§ Bulb, flasher	382	382	382
§ Bulb, stop tail	380	380	380

Models 640 and 641

Part No. Model	*53774A/B 640	*53775A/B 640	53776A 641	53777A 641
§ Lens, flasher	54570179	54570400	54570751	54570425
§ Lens, stop tail	54570181	54570181	54570787	54570787
§ Shield, light	54570182	54570182	54570750	54570750
§ Screw, lens fixing	198924	198924	198924	198924
§ Gasket, lens seating	54570743	54570743	54570743	54570743
§ Bulb holder, flasher	54570088	54570088	54570088	54570088
§ Interior, bulb holder	573832	573832	573832	573832
§ Bulb holder, stop tail	54570089	54570089	54570089	54570089
§ Interior, bulb holder	573828	573828	573828	573828
§ Grommet, cable entry	573825	573825	573825	573825
§ Gasket, lamp seating	54570742	54570742	54570742	54570742
§ Base	54570360	54570360	54570360	54570360
§ Bulb, flasher	382	382	382	382
§ Bulb, stop tail	380	380	380	380

* No reflex

§ Recommended spares for stock



STOP TAIL, FLASHER AND REFLEX LAMPS

Models 616 and 621

Part No. Model	53703D 616	53704D 616	53712D 621	53713D 621
§Screw, separator fixing...	—	—	198924	198924
Separator, upper	—	—	54570105	54570105
Separator, lower	—	—	54570106	54570106
§Screw, lens fixing	198924	198924	—	—
§Lens, flasher	54570076	54570082	54570099	54570251
§Lens, stop tail	54570081	54570081	54570150	54570150
§Gasket, lens seating	54570079	54570079	54570102	54570102
§Bulb holder, flasher	54570088	54570088	54570088	54570088
§Interior, bulb holder, flasher	573832	573832	573832	573832
§Bulb holder, stop tail	54570089	54570089	54570089	54570089
§Interior, bulb holder, stop tail	573828	573828	573828	573828
§Grommet, bulb holder, cable entry	573825	573825	573825	573825
§Gasket, lamp seating	—	—	54570104	54570104
§Gasket, base seating, upper	54570505	54570505	—	—
§Gasket, base seating, lower	54570506	54570506	—	—
§Sleeve, terminal	555910	555910	—	—
Nut, lamp fixing	—	—	156713	156713
Washer, lamp fixing nut	—	—	188483	188483
Base	54570075	54570075	54570252	54570252
§Bulb, flasher	382	382	382	382
§Bulb, stop tail	380	380	380	380

Models 646 and 647

Part No. Model	53792D 646	53793D 646	53797A/B 647	53798A/B 647
§Lens, flasher	54570495	54570495	54570466	54570451

Part No. Model	53794D 646	53795D 646	53799A/B 647	53800A/B 647
§Lens, flasher	54570810	54570810	54571013	54571012


The following parts are common to Models 646 and 647 lamps shown in appropriate column

§Screw, fixing, flasher lens, short	—	—	54570454	54570454
§Screw, fixing, flasher lens, long	—	—	54570453	54570453
§Lens, stop tail	54570544	54570544	54570749	54570678
§Screw, lens fixing	54120022	54120022	54570455	54570455
Washer, screw retaining	—	—	161385	161385
Separator, light	—	—	54570814	54570815
§Gasket, lens seating	54570604	54570604	54570450	54570450
§Shield, light	54570496	54570496	—	—
§Bulb holder, flasher	54570088	54570088	—	—
§Interior, bulb holder, flasher	573832	573832	573832	573832
§Bulb holder, stop tail	54570089	54570089	—	—
§Interior, bulb holder, stop tail	573828	573828	573828	573828
§Grommet, cable entry	573825	573825	573825	573825
Base	54570616	54570617	54570747	54570446
Reflector	54570605	54570605	—	—
Screw, reflector fixing	54120006	54120006	—	—
§Gasket, lamp seating	54570604	54570604	54571330	54571330
Nut, lamp fixing	156726	156726	—	—
Washer, shakeproof, fixing nut	188330	188330	—	—
§Bulb, flasher	382	382	382	382
§Bulb, stop tail	380	380	380	380

STOP TAIL AND NUMBER PLATE LAMPS

Part No. Model	*53520D 581	53534B 533	53534D 533	53244D 525
§Rim or door	—	†574120	†574120	—
§Lens	54570677	†574108	†574108	573819
§Bead or gasket, seating	576390	†574111	†574111	573814
§Screw, rim or lens fixing	576396	†127301	†127301	572072
Washer, screw retaining	161385	†161385	†161385	161385
Washer, fibre or leatheroid	161732	—	—	161727
Body	—	574104	574342	—
Base, with bulb holder	576391	574122	574122	—
Nut, lens fixing screw	169706	—	—	—
Screw, terminal	—	121610	121610	—
§Interior, bulb holder	552101	—	—	573828
Nut, base fixing	—	166043	166043	—
Washer, spring	—	185040	185040	—
§Window, number plate	—	574105	574105	—
§Bead, window	—	574106	574106	—
§Grommet, cable	†576401	573232	574362	—
Nut, lamp fixing	—	177074	177074	166019
Washer, shakeproof	—	188470	188470	188330
§Sleeve, terminal	555910	188818	—	—
§Bulb, stop tail	380	—	—	380
§Bulb, stop	—	335	335	—
§Bulb, tail and number plate	—	209	209	—

* Stop tail and reflex only † Rim and lens ‡ Part of assembly 574120
§ Recommended spares for stock || Order separately ¶ No reflex

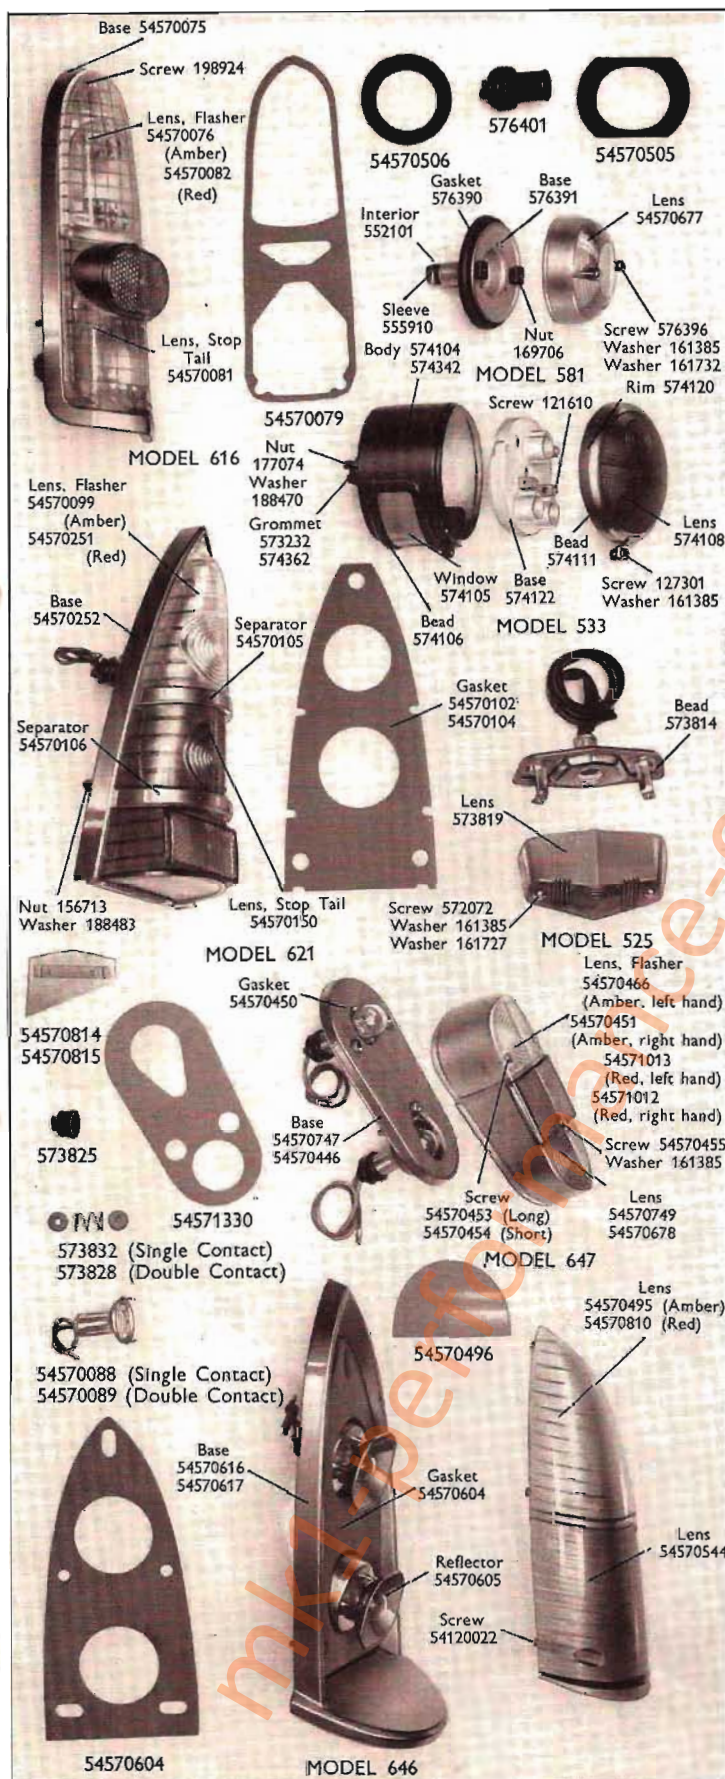 

SCREENJET

Motor, Pump, Jar and Bracket

Part No.	Model	077011A
...	...	2SJ
Detailed Parts		
Motor, with coupling	...	295085
Contact, switch, with adjusting screw	...	295251
Brush set	...	295198
Armature	...	295023
Cover moulding	...	295138
Cap, filler, rubber	...	295043
Gasket, cover, rubber	...	295042
Union, motor to pump fixing	...	295045
Pump assembly	...	295194
Jar, glass	...	295058
Carrier assembly, jar	...	295061
Sundry parts, set	...	295196

Accessories (Single Jet)

Part No.	Model	*295230
...	...	...
Detailed Parts		
Nozzle assembly	...	295112
Nozzle	...	295006
Plate, clamp, upper	...	295067
Plate, clamp, lower	...	295068
Gasket, clamp plate, rubber	...	295268
Washer, nozzle, rubber	...	295098
Tee piece	...	295091
Screw, fixing	...	186147
Tubing, 60" long	...	295229
Switch, 15SA	...	31513
Spanner	...	770652
Screw, jar bracket fixing	...	198865


DRIVING AND FOG LAMPS

Part No.	Model	55215D WLR576	55165D SFT576	55128E SFT576
...	...	...	...	...
Detailed Parts				
Rim or door	...	54520177	—	—
Screw, rim fixing	...	144921	—	—
Light unit	...	554816	554813	554813
Bulb holder	...	54520352	54520352	54520352
Sleeve, terminal	...	555910	555910	555910
Cap, rubber	...	572363	—	—
Clamp, light unit	...	—	535009	535009
Cushion, clamp	...	—	534383	534383
Screw, clamp fixing	...	—	144921	144921
Base, lamp seating	...	—	534386	534386
Washer, lock, fixing	...	188350	188349	188349
Nut, lamp fixing	...	181261	180377	180377
Plate, lamp fixing	...	534732	—	—
Washer, rubber, lamp seating	...	534722	—	—
Bolt	...	—	505122	505122
Bracket, fixing	...	—	—	056117
Bulb	...	185	323	323

TRAFFICATORS

Part No.	Model	54044E SF80	54045E SF80	54049E SF80	54050A SE100
...	...	...	...	...	...
Detailed Parts					
Movement	...	—	—	—	54045
Arm and cover	...	582161	582160	582160	582160
Screw, cover fixing	...	100521	100521	100521	100521
Arm, moulded	...	582026	582026	582026	582026
Cover, arm	...	582027	582046	582046	582046
Screw, arm fixing	...	100521	100521	100521	100521
Spring, arm locking	...	582023	582023	582023	582023
Lead, bulb	...	582021	582021	582021	582021
Insulation, bulb lead	...	857651	857651	857651	857651
Spring, plunger tension	...	582012	582012	582012	582012
Buffer, rubber	...	582090	582090	582090	582090
Sleeve, terminal	...	188818	188818	188818	188818
Cover and motif	...	—	—	—	582110
Motif	...	—	—	—	582106
Screw, cover fixing (counter-sunk)	...	—	—	—	122865
Screw, cover fixing (round)	...	—	—	—	122875
Washer, cover screw	...	—	—	—	188412
Backplate	...	—	—	—	582109
Screw, trafficator fixing	...	—	—	—	100030
Washer, trafficator fixing screw	...	—	—	—	188408
Insulating strip, leatheroid	...	—	—	—	582105
Bulb	...	256	256	256	256

 * For reference only; order individual parts † Supplied separately
§ Recommended spares for stock

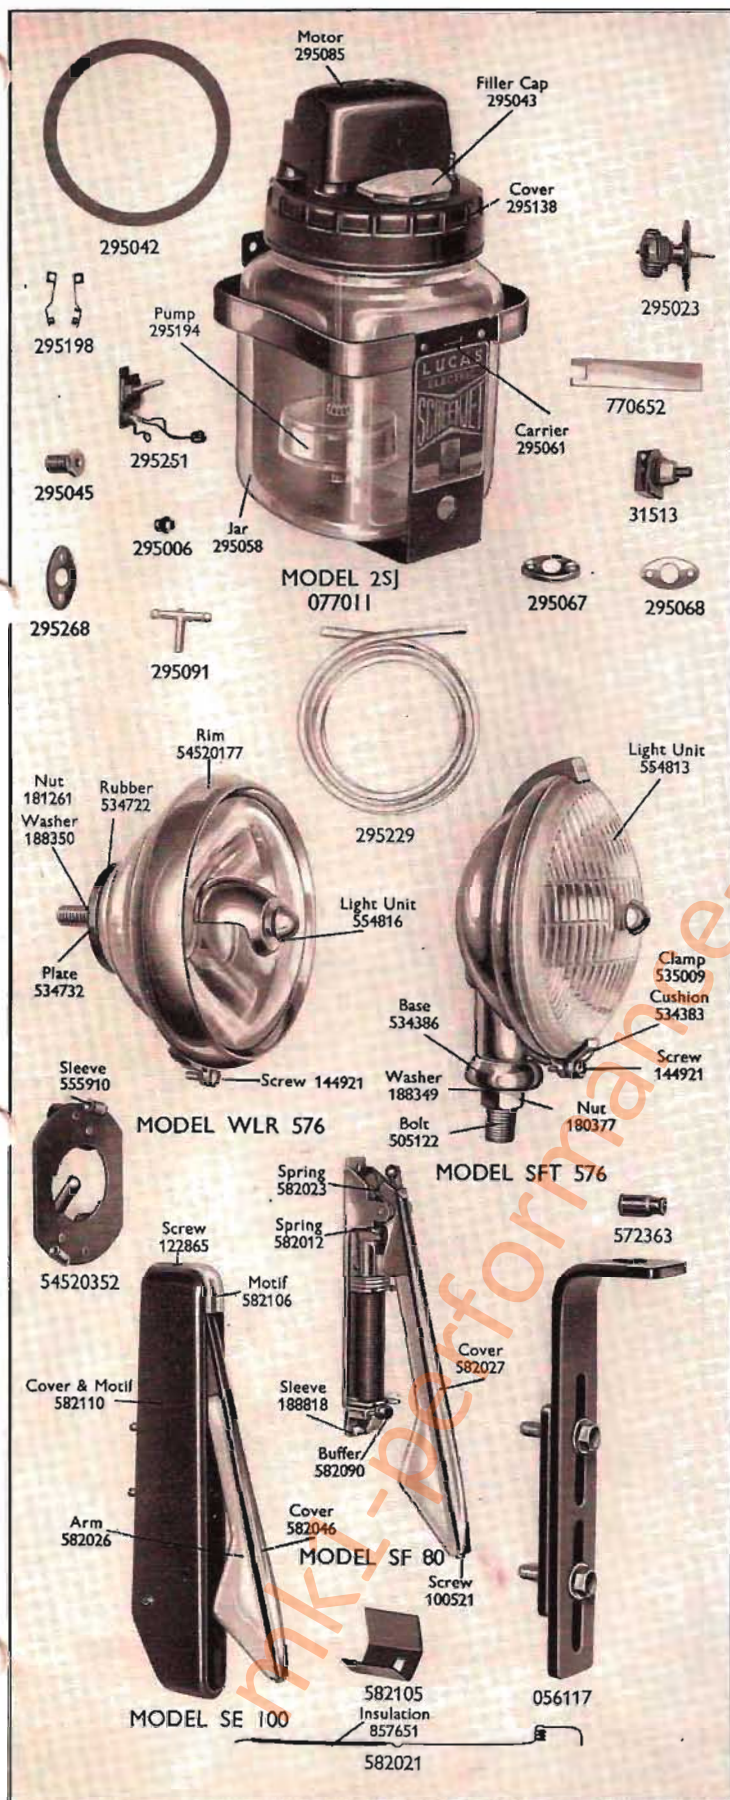

WARNING LIGHTS

Part No. Model	38013B WL3-I	38049A WL3-I	38052B WL12	38067A WL11	38132A WL13
Bezel	—	—	—	319012	305532
Shade	—	—	—	—	305569
§Set of fixing parts	318864	318864	—	—	—
§Cover and window	318896	318896	319106	—	*319217
§Bulb holder	—	—	39007A	39020A	554734
§Washer, terminal nut	185022	185022	—	—	—
Nut, terminal	180170	180170	—	—	—
§Washer, terminal screw	—	185012	—	—	—
§Screw, terminal	—	100521	—	—	—
§Bulb	970	970	987	987	987

Part No. Model	38135B WL13	38155A WL13	38177A WL13	38196A 3WL	38204A WL13
§Cover and window	319257	*319217	319419	*348511	54360477
§Bulb holder	554734	554734	554734	—	—
Shade	—	305569	—	—	319222
Body, bakelite	319204	—	319204	—	—
Nut, body	319203	—	319203	—	—
§Bulb	987	987	987	280	—

WARNING LIGHTS (Sundries)

Part No.	Description	Part No.	Description
987	Bulb	304994	Holder
39007A	Bulb holder	319107	Cover and window (Green)
39020B	Bulb holder	319222	Shade
304084	Bezel and window (Red)	554734	Bulb holder
304085	Bezel and window (Green)	863511	Bulb holder (insulated return)

GEAR INDICATOR LIGHTS

Part No. Model	38202D 38205B 4WL	38213A 38214A 4WL	54360248 3WL
Bulb holder	54360484	54360484	—
§Bulb	281	281	280

REFLEX REFLECTORS

Part No. Model	57031D RER2	57033E RER4	57044A/B RER3	57045A RER3
Reflex reflector	574749	573866	608610	573799
Holder, reflex	—	—	573766	573766

Part No. Model	57047D RER7	57072B RER7	57083A RER14	57098A RER22	57113A RER26
Reflex reflector	574749	574749	575189	575883	575883
§Rim	—	573877	572734	575908	—
Holder, reflex	573868	575518	575194	—	54570514
Cover, reflex	—	574002	—	—	—
Base, rubber	—	—	—	—	54570517
Fixing plate	—	—	—	—	54570516
Screw, fixing	—	—	—	—	54120003
Nut, reflector fixing	—	—	166043	—	—
Washer, fixing nut	—	—	188327	—	—


Part No. Model	57115A RER27	57116A RER25	57120A RER25	57121A RER25
Reflex reflector	54570658	575878	575878	575878
§Rim	—	54570241	54570241	54570241
Holder, reflex	54570657	54570242	54571068	54571066
Screw, fixing	186194	198877	—	—
Gasket or washer, reflector seating	54570662	135120	135120	135120

Part No. Model	57124A RER25	57125A RER25	57131A RER25	57136A RER27
Reflex reflector	575878	575878	575878	54570658
§Rim	54570241	54570241	54570241	—
Holder, reflex	54570242	54571174	54571096	54570657
Screw, fixing	198865	—	—	186194
Gasket or washer, reflector seating	135210	—	—	54570662

PANEL LIGHT BULB HOLDERS

Part No.	Bulb	Part No.	Bulb
39007A	987	554734	987
39010A	987	863511	987
39020B	987	54944812	987

 * Window only § Recommended spares for stock

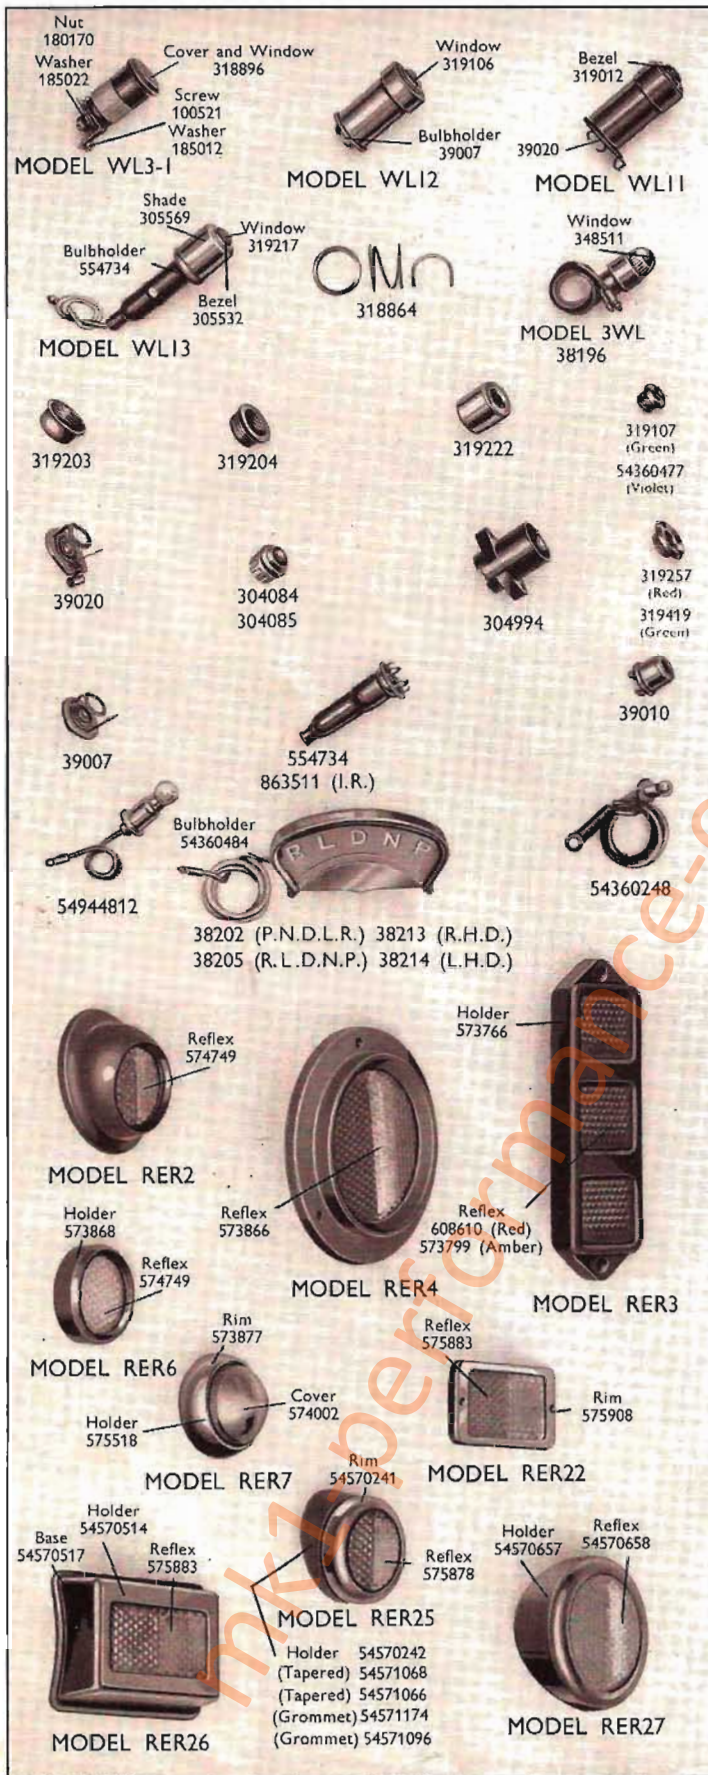

R.H.D. ... Right hand drive L.H.D. ... Left hand drive I.R. ... Insulated return

OVERDRIVE EQUIPMENT

Transmission Gear Solenoid

Part No.	...	...	...	76515A	76525A
Model	...	...	...	IIS	IIS (Lucar)
Detailed Parts					
Cover assembly, contact	...	...	...	765933	765933
Cover, rubber	...	...	...	765063	765063
Boot, rubber, plunger	...	...	...	765046	765046
Plunger	...	...	...	766555	766555

Relay

Part No.	...	...	...	33157D	33177A	33217A
Model	...	...	...	SB40-1	2RA	2RA
Detailed Parts						
Cover...	...	...	...	—	54380028	54380028
§ Fuse, 25 amp.	...	...	...	—	188216	188216
§ Screw, terminal	...	...	...	132464	132464	—
§ Washer, terminal screw	...	...	...	188412	185000	—

Centrifugal Switch

Part No.	...	...	...	...	...	76112D
Model	...	...	...	...	...	76122A
						OCSI

Solenoid

Part No.	...	...	...	...	76508A	76529A
Model	...	...	...	...	SS	SS
Detailed Parts						
Solenoid, less Lucar connector	...	...	...	...	—	76508
Cover assembly	...	...	...	...	765905	765905
Contact carrier plate	...	...	...	...	765908	765908
Plunger assembly	...	...	...	...	765574	765574
Spring, main	...	...	...	...	765582	765582
Contact assembly	...	...	...	...	765907	765907
Connector, Lucar	...	...	...	...	—	54190048

Rotary Throttle Switch

Part No.	...	...	...	...	...	31402B
Model	...	...	...	...	...	RTSI
Detailed Parts						
§ Screw, terminal	...	...	...	...	...	132464
§ Washer, terminal screw	...	...	...	...	...	185000

Interrupter Switch

Part No.	...	...	...	...	...	31849A
Model	...	...	...	...	...	SS10


Kick-down Switch

Part No.	...	...	...	...	31597B	31632B	34261A	54033079
Model	...	...	...	...	34SA	34291A	34SA	34SA
Detailed Parts								
Nut, fixing	...	...	...	...	—	180450	180450	—
Washer, fixing nut	...	...	...	...	—	185171	185171	—
Screw, terminal	...	...	...	...	108084	108084	—	—
Washer, terminal screw	...	...	...	...	188336	188336	—	—


§ Recommended spares for stock



 WINDSHIELD WIPERS

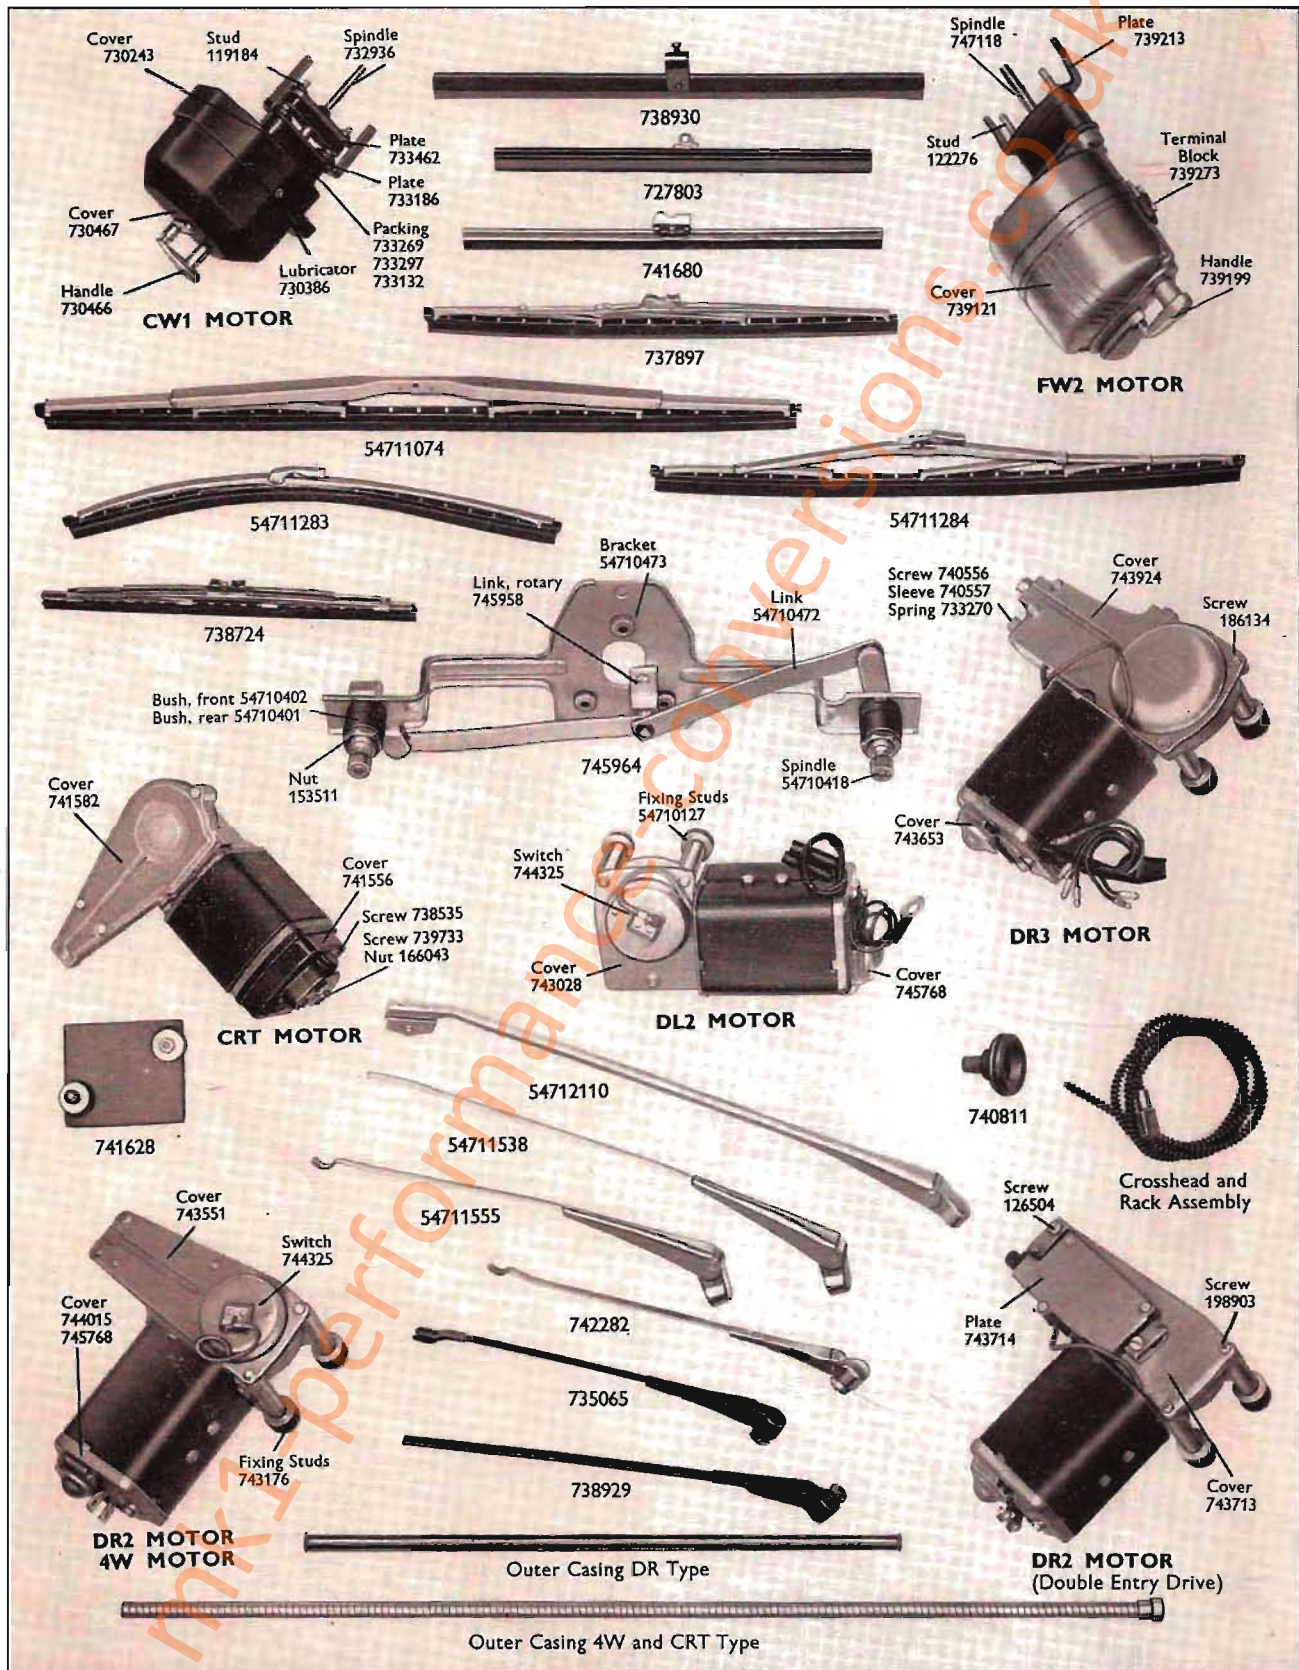

WINDSHIELD WIPERS

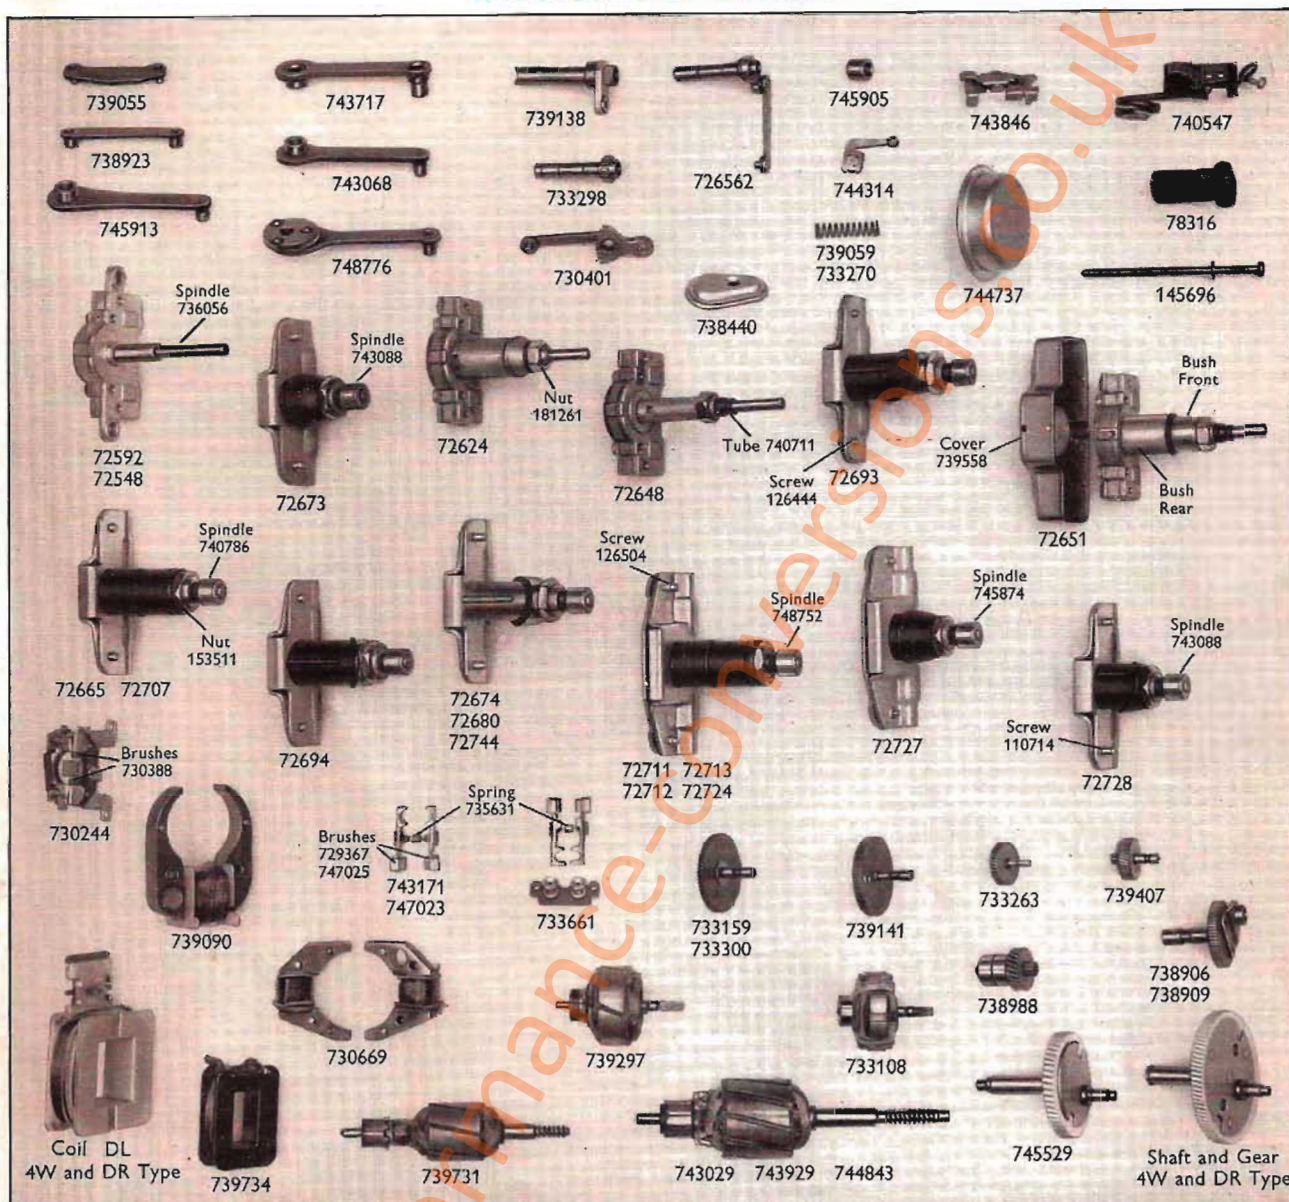 

Wheelboxes

Part No.	72548K	72592K	72624H	72648B	72651A	72665A/B	72673B	72674B	72680D	72693B
§Spindle and gear	736056	736056	736056	736056	736056	740786	743088	740786	740786	740786
Tube, rubber, spindle	740711	740711	740711	740711	740711	740711	740711	740711	740711	740711
Nut, wheelbox fixing	181261	181261	181261	181261	181261	153511	153511	153511	153511	153511
Bush, front	739635	739635	739635	739635	742066	745145	743779	740880	745205	745128
Washer, rubber	163356	163356	163356	163356	163356	—	—	—	745207	744551
Bush, rear	739634	739634	739634	739634	742067	745144	743780	743508	745208	744545
Cover	—	—	—	—	739558	—	—	—	—	—
Screw, cover fixing	126504	126504	126504	126504	126504	126444	110714	126444	126444	126444
Screw, outer casing clamp fixing	126504	126504	110714	126504	126504	—	—	—	—	—
Washer, packing	—	—	—	146303	—	—	—	740882	—	—

Part No.	72694B	72707A	72711A	72712A	72713B	72724A	72727A	72728A	72744A
§Spindle and gear	740786	740786	748752	748752	748752	748752	745874	743088	740786
Tube, rubber, spindle	740711	740711	740711	740711	740711	740711	740711	740711	740711
Nut, wheelbox fixing	153511	153511	153511	153511	153511	153511	153511	153511	153511
Bush, front	740922	744293	745145	54710155	744293	54710463	743779	54711100	740880
Washer, rubber	740925	740925	740925	740820	740820	—	—	—	740882
Bush, rear	744557	744358	745144	54710155	744358	744358	743780	54711101	743508
Cover	—	—	—	—	—	—	—	—	—
Screw, cover fixing	126444	126444	126504	126504	126504	126504	126504	110714	145834
Screw, outer casing clamp fixing	—	—	—	—	—	—	—	—	—
Washer, packing	—	—	—	—	—	—	—	—	—

§ Recommended spares for stock



WINDSHIELD WIPERS

DR2, DR3 and 4W Motors

Part No.	75212F	75295E	75347A	75367A	75377A	75357A	75365A 75366A DR3	75332A	75353A/B
Model	DR2	DR2	DR2	DR2	DR2	DR3	DR3	4W	DL2
§Switch, parking	744325	744325	740547	—	—	743846	743846	—	744325
§Shaft and gear	744740	744741	54710282	54711022	54710348	54710866	748796	744744	745529
Spring, contact, switch	744314	744314	—	—	—	—	—	—	744314
Cover, gear	—	—	—	744737	—	—	—	744737	—
Part No.	75213F	75297E	75349A	75385B	—	75358A	—	—	—
Model	DR2	DR2	DR2	DR2	—	DR3	—	—	—
§Switch, parking	744325	744325	740547	—	—	743846	—	—	—
§Shaft and gear	744742	744743	54710348	744744	—	54710866	—	—	—
Spring, contact, switch	744314	744314	—	—	—	—	—	—	—
Cover, gear	—	—	—	744737	—	—	—	—	—
Part No.	75251H	75380A	75363A	—	—	—	—	—	—
Model	75296E DR2	DR2	DR2	—	—	—	—	—	—
§Switch, parking	744325	—	740547	—	—	—	—	—	—
§Shaft and gear	744744	54711349	54710348	—	—	—	—	—	—
Spring, contact, switch	744314	—	—	—	—	—	—	—	—
Cover, gear	—	744737	—	—	—	—	—	—	—

The following parts are common to motors shown in appropriate column

Bolt, fixing	145696	145696	145696	145696	145696	145696	145696	145696	145696
Cover and bearing, commutator end... ..	744015	744015	744015	745768	744015	743653	743653	744015	745768
Screw, earth lead	—	—	—	—	—	126444	126444	—	—
§Brushgear	743171	743171	743171	743171	743171	743171	743171	743171	743171
§Brushes, set	729367	729367	729367	729367	729367	729367	729367	729367	729367
§Springs, brush	735631	735631	735631	735631	735631	735631	735631	735631	735631
§Armature	743029	743029	743029	743029	743029	743929	743929	744843	743029
§Coil, field	744009	744009	744009	54711057	744009	54710865	744907	745887	54710139
§Fixing studs, set	743176	743176	743176	743176	743176	743176	743176	743176	54710127
Cover, gearbox	743551	743551	743713	743551	743713	743924	743924	743551	743028
Rod, connecting	743068	743068	743717	743068	743717	745913	748776	743068	—
Bush, spacing	—	—	—	—	—	—	—	—	745905
Plate, cable rack cover	—	—	743714	—	743714	—	—	—	—
Screw, gearbox cover	—	—	198903	—	198903	186134	186134	—	—
Screw, clamp retaining	—	—	126504	—	126504	—	—	—	—
Screw, parking switch adjusting	—	—	740556	—	—	740556	740556	—	—
Sleeve, adjusting screw	—	—	740557	—	—	740557	740557	—	—
Spring, adjusting screw	—	—	733270	—	—	733270	733270	—	—
Plate, gear stud locating	—	—	—	—	—	744936	—	—	—
§Sundry parts, set	743049	743049	743049	743049	743049	740899	740899	743049	54710077

CW Motors

CRT Motors

FW2 Motors

Part No.	75097B	75130B	Part No.	75145B	75146B	Part No.	75285F
Model	CW	CW	Model	CRT	CRT	Model	FW2
§Cover	730467	730467	§Cover, end	741556	741556	Handle, parking, with fixing nut	739199
§Brushgear	730244	730244	Screw, cover fixing	738535	738535	§Cover and switch	739121
§Brushes, set	730388	730388	Screw, thrust, armature	739733	739733	Terminal block	739273
§Springs, brush set	730387	730387	Nut, armature thrust screw	166043	166043	Spindle	747118
§Armature	733108	733108	§Screw, terminal	120560	120560	§Armature	739297
§Pole and coil set	730669	730669	§Brushgear	733661	733661	§Pole and coil	739090
Gear, intermediate, with pinion	733263	733263	§Brush set	729367	729367	Rod assembly	739055
§Guide wheel	733159	733300	Spring, brushgear	735631	735631	§Brushgear	747023
Sector	—	730401	Cover, gearbox	741582	741582	§Brush set	747025
Bush, oscillating	726562	733298	§Guide wheel and plate	738909	738906	§Shaft and gear	739141
Handle, parking	—	730466	Worm wheel, pinion and bearing	738988	738988	Pinion and gear	739407
Spindle	732936	732936	Connecting rod	738923	738923	Spring, spindle	739059
Spring, spindle	733270	733270	Cap, end, gear spindle	738440	738440	Bush, oscillating	739138
Cover, rear, with fixing parts	730243	730243	§Coil, wound	739734	739734	Stud, motor fixing, 2 B.A. x 2 3/8"	122276
Stud, motor fixing	119184	119184	§Armature	739731	739731	Packing, langite, 1/8"	739064
Lubricator, with wick	730386	730386	§Set of fixing parts	741628	741628	Block, packing, 1/2"	739421
Protector plate	733462	—	§Sundry parts, set	741596	741596	Block, packing, 3/4"	739420
Packing piece, with bearing	733132	733297				Block, packing, with bearing	739063
Packing, langite	—	733269				Seal, rubber	739206
Plate, stop	—	733186				Plate, stop	739213
§Sundry parts, set	733439	733439				§Sundry parts, set	739154

§ Recommended spares for stock



WINDSHIELD WIPERS

Wiper Arms

Part No.	Length	Finish	Crank	Screw and Collet	Illustration	Part No.	Length	Finish	Crank	Screw and Collet	Illustration
735065	9 1/2"	Black	—	737587	As shown	745082	9 1/2"	C.P.	15° R.H.	—	As 54711555
735072	10 1/2"	Black	—	738621	As 735065	745083	9 1/2"	C.P.	15° L.H.	—	As 54711555
737639	10"	Black	15° L.H.	738621	As 735065	745084	9"	C.P.	15° L.H.	—	As 54711555
737640	10"	Black	15° R.H.	738621	As 735065	54711433	11 1/2"	C.P.	10° R.H.	—	As 54711538
737762	9 1/2"	Black	15° R.H.	738621	As 735065	54711434	11 1/2"	C.P.	10° L.H.	—	As 54711538
737763	9 1/2"	Black	15° L.H.	738621	As 735065	54711450	12 1/2"	C.P.	10° R.H.	—	As 54711555
738929	10 1/2"	Black	—	—	As shown	54711451	12 1/2"	C.P.	10° L.H.	—	As 54711555
741836	11 1/2"	C.P.	10° R.H.	—	As 54711555	54711530	12 1/2"	Silver grey	20° R.H.	—	As 54711538
741837	11 1/2"	C.P.	10° L.H.	—	As 54711555	54711531	12 1/2"	Silver grey	20° L.H.	—	As 54711538
742282	10"	C.P.	20° L.H.	738621	As shown	54711538	13 1/2"	C.P.	10° R.H.	—	As shown
742293	10 1/2"	C.P.	—	738621	As 742282	54711539	13 1/2"	C.P.	10° L.H.	—	As 54711538
742311	9 1/2"	C.P.	—	738621	As 735065	54711540	13 1/2"	Silver grey	10° R.H.	—	As 54711538
742349	10"	C.P.	20° R.H.	738621	As 742282	54711541	13 1/2"	Silver grey	10° L.H.	—	As 54711538
745071	10 1/2"	C.P.	10° R.H.	—	As 54711555	54711544	14"	C.P.	10° R.H.	—	As 54711538
745072	10 1/2"	C.P.	10° L.H.	—	As 54711555	54711545	14"	C.P.	10° L.H.	—	As 54711538
745075	9"	C.P.	15° R.H.	—	As 54711555	54711555	11 1/2"	C.P.	10° R.H.	—	As shown
745076	8 1/2"	C.P.	15° L.H.	—	As 54711555	54711556	11 1/2"	C.P.	10° L.H.	—	As 54711555
745077	8 1/2"	C.P.	15° R.H.	—	As 54711555	54711571	12 1/2"	C.P.	10° R.H.	—	As 54711555
745080	10"	C.P.	10° R.H.	—	As 54711555	54711572	12 1/2"	C.P.	10° L.H.	—	As 54711555
745081	10"	C.P.	10° L.H.	—	As 54711555	54712110	14"	Silver grey	20° R.H.	—	As shown
						54712111	14"	Silver grey	20° L.H.	—	As 54712110

Crosshead and Rack Assemblies

Part No.	Cut to	Vehicles
736307	44 1/2"	LDI, LDIA, LDO1, LDO1A, LD2, LD2A, LDO2 and LDO2A.
736364	—	'Metropolitan'.
738223	55 1/2"	'JB' Van (G.P.O.).
738499	—	'301' Range, LCS and LCO5 (left hand drive).
738987	—	'301' Range, LCS and LCO5 (right hand drive).
743209	23 1/2"	'Mini-minor 850' and 'Seven 850'.
743221	—	MGA.
743221	32 1/2"	Hire Car (FL2D), Taxi (FX4D) and Austin-Healey 'Sprite'.
743221	35 1/2"	Riley 'One-Point-Five' and Wolseley 'Fifteen Hundred'.
743221	31 1/2"	Austin-Healey '3000' (BN7 and BT7).
743225	41 1/2"	A40.
743235	41 1/2"	Morris Half Ton Van, 'Oxford Traveller' and 'Hindustan'.
743235	41 1/2"	A55 Pick-up Truck and Van.
743235	44 1/2"	'Princess' (DM4, DS6), DA2, DA3, DH2 and DH3.
743251	—	'Minor' and Quarter Ton Van.
743950	39 1/2"	I52 and 'J2' Models.
743950	—	5 and 7 ton Series IVFF.
744254	—	A55 'Cambridge', M.G. 'Magnetite' Mk. III, Morris 'Oxford' Series V, Riley 'Four Sixty-Eight' and Wolseley 'Fifteen Sixty'.
744254	33 1/2"	A99, 3 litre 'Princess' and Wolseley 'Six Ninety-Nine' (right hand drive).
744256	39 1/2"	A99, 3 litre 'Princess' and Wolseley 'Six Ninety-Nine' (left hand drive).
744833	—	A35.

Wiper Blades

Part No.	Length	Finish	Detailed Parts	Illustration
727802	8"	Black	\$Stop 730185	As 727803
727803	9"	Black	\$Stop 730185	As shown
732642	10"	C.P.	\$Stop 730185	As 727803
737799	10"	Black	\$Stop 730185	As 727803
737886	12"	C.P.	—	As 741680
737897	11"	C.P.	\$Rubber 737918. Cap 737916 ...	As shown
737910	8"	C.P.	\$Rubber 737919. Peg 737675 ...	As 738724
738724	9"	C.P.	\$Rubber 738736. Peg 737675 ...	As shown
738734	10"	C.P.	\$Rubber 737783. Peg 737675 ...	As 738724
738930	11 1/2"	Black	—	As shown
741543	9"	C.P.	—	As 741680
741680	10"	C.P.	—	As shown
54711074	18"	Silver grey	\$Rubber 54712384. Cap 54712385	As shown
54711282	11"	C.P.	\$Rubber 54711780. Cap 737916	As 54711283
54711283	12"	C.P.	\$Rubber 54711781. Cap 737916	As shown
54711284	14"	Silver grey	\$Rubber 54712205. Cap 737916	As shown
54711614	10"	C.P.	\$Rubber 54713149. Cap 737916	As 737897

Outer Casings

Motor to wheelbox	Wheelbox to wheelbox	Wheelbox, short	Ferrule	Vehicles
739844	739937	740031	738410	'Metropolitan'.
739844	739972	740031	738410	LDI, LDIA, LDO1, LDO1A, LD2, LD2A, LDO2 and LDO2A.
739870	739974	740031	738410	'301' Range, LCS and LCO5.
739907	739973	740031	738410	'JB' Van (G.P.O.).
743664	743665	740746	740715	MGA.
743880	743881	740746	740715	Austin-Healey '3000' (BN7 and BT7).
744463	744462	740746	740715	Riley 'One-Point-Five' and Wolseley 'Fifteen Hundred'.
744546	744547	740746	740715	'Minor' and Quarter Ton Van.
744550	745039	740746	740715	'Princess' (DM4, DS6), DA2, DA3, DH2 and DH3.
744838	739937	740031	740715	A35.
745118	54711027	740746	740715	A55 Pick-up Truck and Van.
745150	745151	740746	740715	Morris Half Ton Van, 'Oxford Traveller' and 'Hindustan'.
748867	748868	740746	—	A40.
748794	748795	740746	740715	Austin-Healey 'Sprite'.
54710142 (L.H.)	54710143 (R.H.)	740746	740715	5 and 7 ton Series IVFF.
54710207	54710208	740746	740715	M.G. 'Magnetite' Mk. III, Morris 'Oxford' Series V, A55 'Cambridge', Riley 'Four Sixty-Eight' and Wolseley 'Fifteen Sixty'.
54710280 (2 off)	—	740746	—	'I52' and 'J2' Models.
54710619	54710620	740746	—	Hire Car (FL2D) and Taxi (FX4D).
54710837	54710839	740746	740715	A99, 3 litre 'Princess' and Wolseley 'Six Ninety-Nine' (right hand drive).
54710838	54710839	740746	740715	A99, 3 litre 'Princess' and Wolseley 'Six Ninety-Nine' (left hand drive).
54711059	54711060	740746	—	'Mini-minor 850' and 'Seveh 850'.

DL2 Link Set

Part No.	745964
Link, primary	54710472
Spindle assembly with bearing bush, arm boss and oscillating link... ..	54710418
Bracket, mounting	54710473
Link, rotary, gear shaft	745958
Nut, fixing	153511
Bush, front	54710402
Bush, rear... ..	54710401
Sundry parts, set... ..	54710077

Circuit Breaker

Part No.	78316A
Model	2CB

Grommet (outer casing)

Part No. 740811	1 1/2" O.D. x 1/8" I.D.
-----------------	-------------------------

L.H. ... Left hand R.H. ... Right Hand O.D. ... Outside diameter I.D. ... Inside diameter C.P. ... Chromium plated § Recommended spares for stock

SWITCHES

Flasher or Trafficator

Part No. Model ...	31367/D SD84	31476D SD84	31635B SD84
Cover and window	310738	310738	310738
Screw, terminal	120560	120560	120560
Bulb	987	987	987

Part No. Model ...	31250H TPSI-I	31904B TPSI-I	031296 TPSI-I
Switch	—	—	31250H
Nut, fixing	311145	311145	311145
Washer, fixing nut	188303	154606	188303
Screw, cover fixing	136410	136410	136410
Nut, cover fixing screw	166160	166160	166160
Washer, terminal screw	185012	185012	185012
Nut, terminal screw	—	54130176	—
Blade, Lucas connector	—	199218	—
Screw, terminal	121610	—	121610
Spindle and contacts	311314	311314	311314
Plunger	311144	311144	311144
Spring	311102	311102	311102
Felt, valve	—	311143	—
Lever	—	—	311156
Screw	—	—	107461
Washer	—	—	185012

Part No. Model ...	31609A 37SA	31760A 37SA	31883A 37SA
Window, bulb	347573	347573	54331222
Bulb holder, with cable	347769	347769	347769
Spring, earthing	347929	347929	347929
Contact, switch	348443	348443	348443
Clip, fixing	348320	348442	348442
Spring, pawl centering	348323	348323	348323
Contact, horn	—	348613	348613
Bulb	280	280	280

Part No. Model ...	31885A 37SA	31924A 37SA	31945B 37SA
Window, bulb	54331222	54331222	54331222
Bulb holder, with cable	348640	347769	347769
Spring, earthing	—	—	347929
Contact, switch	348443	348443	348443
Clip, fixing	348442	348442	348442
Spring, pawl centering	348323	348323	348323
Contact, horn	—	348613	348613
Bulb	280	280	280

Ignition and/or Lighting, or Main

Part No. Model ...	31403H S45	31449E S45	31899A S45	31187E S55	31484B S55
Lock, with keys	—	—	—	345070	—
Screw, terminal	120560	120560	—	120560	120560
Nut, fixing	184011	312188	54130041	—	—
Washer, fixing	164018	164018	164018	—	—

Part No. Model ...	34018B PLC6	*34092D CRS3	*34103D CRS3
Lever	—	347527	54330363
Lock, with keys	345070	—	—
Spring, fixing	344197	—	—
Screw, terminal	120560	—	—
Rotor	—	347526	347526

Master Battery

Part No. Model ...	76602B ST350	76604B ST330	76605B ST330
Lug and conductor arm (positive)	768045	—	—


Solenoid, Starting Motor

Part No. Model ...	76411E 76422D ST950	76443A ST950	76464A 76469A 2ST	76465A ST950	76466A ST950
Switch, less Lucas connectors	—	—	—	76411	76443
Nut, terminal, 2 BA	166043	166043	166019	166043	166043
Washer, terminal	185022	185022	185022	185022	185022
Nut, contact screw, 3/8" BSF	170570	170570	170574	170570	170570
Washer, contact screw	185062	185062	185062	185062	185062
Cap, rubber	760130	—	1763119	760130	—
Connector, Lucas (starter push)	—	—	54190015	54190015	54190015
Connector, Lucas (fuse box)	—	—	54190013	54190013	54190013
Connector, Lucas (control box or ammeter)	—	—	54190014	54190014	54190014

* Lighting and dipper

† Fitted to 76464A only

 § Recommended spares for stock

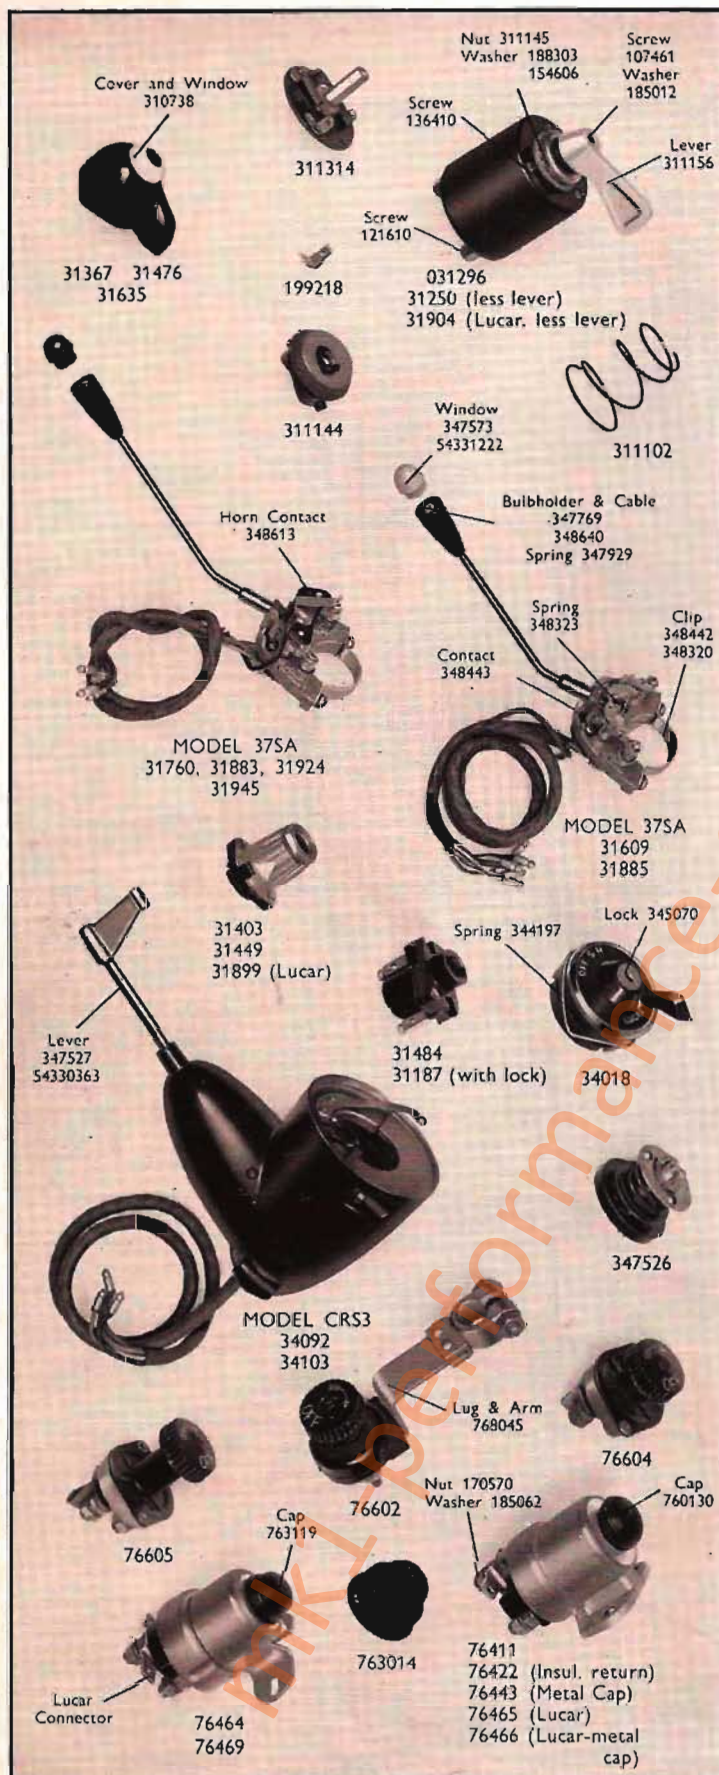

SWITCHES

Starting Motor

Part No. Model	...	...	...	...	76423A ST19-2	76438A ST18
Nut, fixing	...	...	...	...	182524	182524
Washer, fixing nut	...	...	...	...	188472	188472
Nut, terminal	...	...	...	...	170570	170570
Washer, terminal nut	...	...	...	...	185061	185062
Nut, knob locking	...	...	...	...	—	167544
*Coupling	...	...	...	...	764428	—

Starter and Heater

Part No. Model	...	...	...	...	31629J S60	31829A/B 70SA	34299A 70SA
§Nut, terminal	...	...	...	...	166043	—	—
§Washer, terminal	...	...	...	...	188330	—	—
§Key	...	...	...	...	312305	—	—
Nut, front, switch fixing	...	...	...	...	156570	153591	54130471
Washer, fixing nut	...	...	...	...	—	185188	185188
Nut, rear, switch fixing	...	...	...	...	—	156570	156570

Horn Push and Lighting

Part No. Model	...	...	...	...	†31791B 66SA	31792B 66SA	31936A 66SA
Bezel, horn push knob	...	...	...	...	54330310	54330310	54330310
Knob, horn push	...	...	...	...	54330335	54330335	54330335
§Contact set, horn push	...	...	...	...	54330890	54330890	54330890
Lever, lighting	...	...	...	...	54330331	54330331	54330331
Plate, switch action	...	...	...	...	347738	347738	54331625
Rotor, tube and base	...	...	...	...	54330889	54330889	54330889
§Switch, direction indicator	...	...	...	...	31812	—	—
Screw, switch fixing	...	...	...	...	102346	—	—
Washer, fixing screw	...	...	...	...	188412	—	—
Cowl and windows, warning lights	...	...	...	...	54330891	54330891	54330891
Bracket, fixing	...	...	...	...	54330288	54330288	54330288
§Sundry parts, set	...	...	...	...	54330892	54330892	54330892
§Bulb	...	...	...	...	280	280	280

Interior Light

Part No. Model	...	...	...	...	...	31544B 18SA
Nut, fixing	...	...	...	...	...	315081
§Screw, terminal	...	...	...	...	...	132564
§Washer, terminal screw	...	...	...	...	...	185009
§Nut, terminal screw	...	...	...	...	...	166103


Heater

Part No. Model	...	...	...	...	...	78305E 2R	78328A/B 2R
Knob	...	...	...	...	...	769016	769016
Body	...	...	...	...	...	769021	769021
Wire and cable	...	...	...	...	...	769019	769024

Rubber Boot (Starting Switch)

Part No.	...	...	...	...	...	...	860556
----------	-----	-----	-----	-----	-----	-----	--------

 * Order separately † Horn push, lighting and flasher
§ Recommended spares for stock

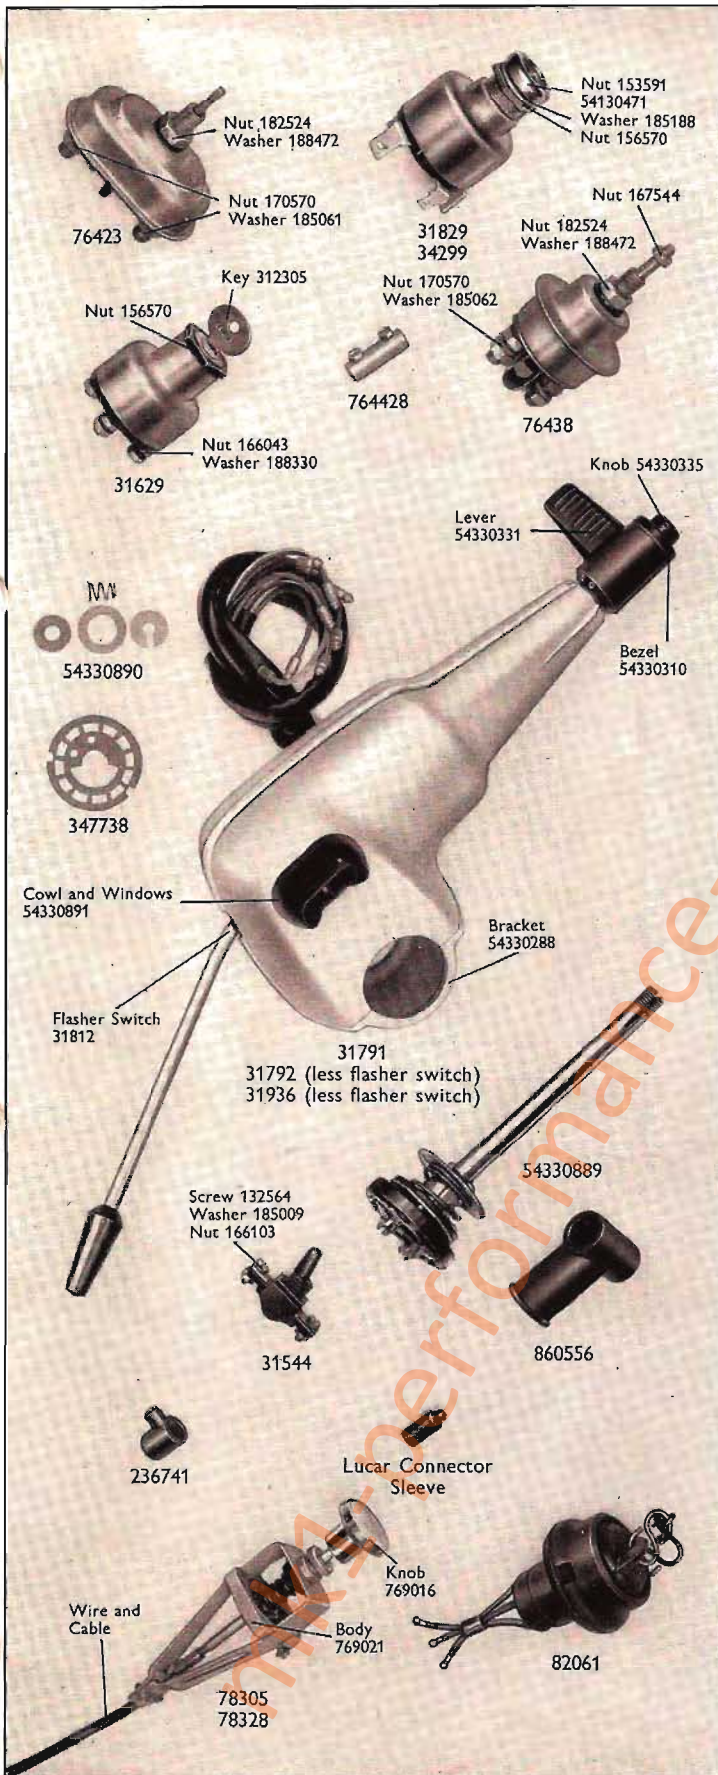

SWITCH DETAILS

Terminal Screws

Part No.	Size	Fitted to Switches
\$120560	2 B.A. $\times \frac{1}{16}$ " (grub) ...	31077E, 31082J, 31113D, 31114E, 31115E, 31120B, 31126E, 31140B, 31183H, 31194D, 31201D, 31251D, 31253E, 31281B, 31287F, 31419A, 31431A, 31432E, 31440F, 31446D, 31479A, 31498A, 31515A, 31554A, 31557A, 31607A, 31719B, 31786A/B and 34065B.
\$120584	4 B.A. $\times \frac{1}{8}$ " ...	31071B, 31294B and 31318A.
\$121610	$\frac{1}{2}$ " B.S.F. $\times \frac{1}{8}$ " (grub) ...	31276B, 31342B and 31345B.
\$132464	4 B.A. $\times \frac{1}{16}$ " ...	31270F, 31284D, 31416F, 31516E, 31655E, 31693E, 31759B, 78339A, 78346A, 78356A, 78369A and 78370A.
135481	5 B.A. $\times \frac{3}{8}$ " (cheesehead) ...	78203B and 78260A.

Terminal Washers

Part No.	Size	Fitted to Switches
\$188412	4 B.A. ...	78203B and 78260A.
\$185000	3 B.A. ...	31270F, 31284D, 31416F, 31655E, 31693E, 31759B and 78370A.

Fixing Washers

Part No.	Size	Fitted to Switches
149220	$\frac{3}{16}$ " i.d. $\times \frac{1}{16}$ " o.d. $\times \frac{1}{8}$ " thick	31898A, 31973A/B.
154606	$\frac{3}{16}$ " i.d. $\times \frac{1}{8}$ " o.d. (spring type)	31071B, 31276B, 31294B, 31318A, 31342B and 31345B.
158350	$\frac{1}{2}$ " i.d. $\times \frac{1}{8}$ " o.d. $\times \frac{1}{8}$ " thick ...	31201D, 31419A, 31431A, 31479A, 31498A, 31515A, 31554A and 31557A.
185081	$\frac{3}{8}$ " i.d. $\times \frac{3}{16}$ " o.d. (spring type)	31759B, 78203B, 78260A, 78339A, 78346A, 78356A and 78369A.
185106	$\frac{3}{16}$ " i.d. (spring type) ...	31071B, 31276B, 31294B, 31318A, 31342B and 31345B.
185188	$\frac{3}{16}$ " i.d. $\times \frac{1}{16}$ " o.d. $\times \frac{1}{8}$ " thick	31743D, 31780D, 31788B, 31828A, 31836B, 31837A/D, 31850A/B, 31851A, 31956A and 31975A.
54148517	$\frac{1}{8}$ " i.d. $\times \frac{1}{16}$ " o.d. (crinkle type)	


Fixing Nuts

Part No.	Size	Fitted to Switches
153591	1" o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ...	31973B.
153601	$\frac{3}{4}$ " o.d. $\times \frac{1}{8}$ " i.d. unified thread ...	31743D, 31780D, 31788B, 31828A, 31836B, 31837A/D, 31850A/B, 31851A, 31898A and 31956A.
156570	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	31973B.
170381	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	31432E.
175327	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	78370A.
175328	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	78203B.
180091	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	31498A.
180093	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	31201D, 31419A, 31431A, 31479A, 31498A, 31515A, 31554A and 31557A.
180670	Hex. $\frac{1}{4}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	31071B, 31276B, 31294B, 31318A, 31342B and 31345B.
182660	Hex. $\frac{3}{16}$ " a.f. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick	31759B, 31975A, 31997A, 78260A, 78339A, 78346A, 78356A and 78369A.
183891	$\frac{3}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ...	31253E, 31446D, 31719B, 31759B, 78339A, 78346A, 78356A and 78369A.
183897	$\frac{3}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ...	78260A.
314017	$\frac{3}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ...	31201D, 31419A, 31431A, 31479A, 31515A, 31554A and 31557A.
315043	$\frac{7}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ... (bezel type)	31183H.
315307	$\frac{7}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ... (bezel type)	31120B.
316101	$\frac{7}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ... (bezel type)	31126E and 31251D.
54130081	$\frac{7}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ... (bezel type)	31838B, 31839D, 31840A/D, 31841A/D and 31918A/B.
54130311	$\frac{7}{8}$ " o.d. $\times \frac{1}{8}$ " i.d. $\times \frac{1}{2}$ " thick ...	31975A.

Fixing Spring

Part No.	Fitted to Switches
312068	31270B/E, 31416D/E, 31516D, 31693E and 31655E.

 a.f. ... across flats i.d. ... inside diameter o.d. ... outside diameter
 § Recommended spares for stock

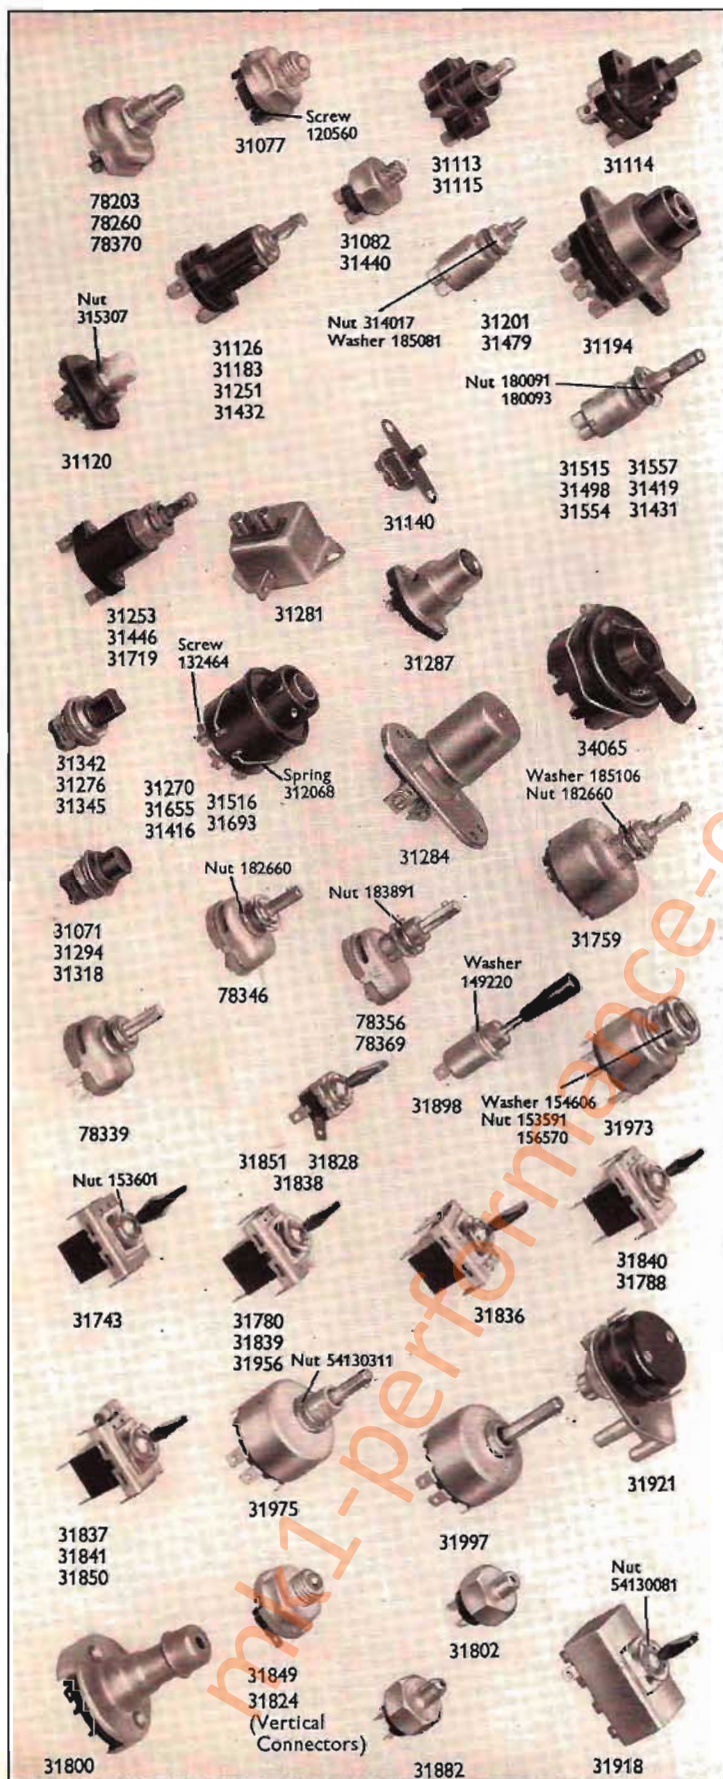

SWITCH KNOBS

Part No.	Finish and Marking	Illustration
084550	Black; 'CHOKE' in white	As 316520
311097	Black; no marking	As shown
311156	Cream; no marking	As shown
312644	Black; 'H-N-P WIPER' in white	As 316133
312813	Brown; 'H-S-OFF' in cream	As 316285
312856	Black; no marking	As shown
312857	Brown; 'P' in cream	As shown
312865	Black; 'W' in white	As 316117
312866	Black; 'F' in white	As 316117
312871	Black; 'P' in white	As 312857
312872	Black; 'W' in white	As 312857
313622	Black; 'HEATER' in white	As 316520
313626	Black; 'MAP LIGHT' in white	As 316520
313628	Black; 'PANEL' and an arrow in white	As 316520
313630	Black; stainless steel bezel; 'L' in white	As shown
313632	Black; stainless steel bezel; 'P' in white	As 316330
313633	Black; stainless steel bezel; 'W' in white	As 316330
313634	Black; stainless steel bezel; 'S' in white	As 316330
313690	Black; 'W' in white	As 316133
315042	Brown; no marking	As 316117
316102	Black; no marking	As 316117
316117	Brown; 'L' in cream	As shown
316129	Black; 'SIDE-HEAD' in white	As 312857
316132	Brown; 'P' in cream	As 316117
316133	Black; 'L' in white	As shown
316134	Black; 'F' in white	As 316133
316135	Black; 'P' in white	As 316133
316144	Cream; 'L' in black	As 316117
316154	Black; 'L' in white	As 316117
316162	Cream; 'B' in black	As 316117
316276	Mottled cream; 'H-S-OFF' in black	As 316285
316285	Black; 'H-S-OFF' in white	As shown
316388	Brown; 'W' in cream	As 316117
316393	Cream; 'W' in black	As 316117
316449	Black; 'H-S-OFF' in white	As 316285
316518	Black; an arrow in white	As 316520
316520	Black; no marking	As shown
317371	Black; 'S' in white	As 316133
317376	Black; 'S' in white	As 312857
317378	Brown; 'S' in cream	As 312857
317530	Black; 'WIPER' in white	As 312857
318350	Chromium plated; no marking	As shown
318368	Black; 'P' in clear diakon	As shown
318369	Black; 'W' in clear diakon	As 318368
318370	Black; 'H' in clear diakon	As 318368
325882	Black; 'C' in white	As 312857
325883	Black; 'S' in white	As 312857
326728	Black; 'C' in clear diakon	As 318368
326729	Black; 'S' in clear diakon	As 318368
327617	Black; 'AIR' in white	As 316520
764469	Cream; 'S' in black	As shown
768473	Black; 'FAST-SLOW-HEATER' in white	As shown
768945	Black; 'P' and an arrow in white	As 316117
54331278	Black; 'H' in white	As 316117
54331875	Black; no marking	As 311156
54332086	Black; 'FAST-SLOW-HEATER' in white	As 54333487
54332711	Cream; no marking	As 316117
54333487	Brown; 'FAST-SLOW-HEATER' in white	As shown

BULBS

Part No.	Volts	Watts	Contact	Cap	Filament
185	12	48	Single	British pre-focus	Axial.
207	12	6	Single	Single centre contact	Coil.
209	12	6	Double	Small bayonet	Coil.
222	12	4	Single	Miniature centre contact	Coil.
256	12	3	Double	Festo, 7.5 x 35.5 mm.	Coil.
280	12	1.5	Single	Lilliput Edison cap	Coil.
281	12	2	Single	Miniature bayonet	Coil.
319	6	18	Double	Small bayonet	Transverse.
323	12	48	Single	British pre-focus	Transverse.
335	12	21	Double	Small bayonet	Transverse.
354	12	42/36	Double	British pre-focus	Transverse, R.H.D., dip left.
355	12	42/36	Double	British pre-focus	Transverse, L.H.D., dip right.
370	12	45/40	Double	British pre-focus	Transverse and hooded axial, duplo, vertical dip.
380	12	6/21	Double	Small bayonet, offset pin	Transverse.
382	12	21	Single	Single pin contact	Transverse.
404	12	60/36	Double	British pre-focus	Transverse, R.H.D., dip left.
410	12	45/40	—	Unified European	Duplo, clear.
411	12	45/40	—	Unified European	Duplo, yellow.
414	12	50/40	Double	British pre-focus	Transverse shielded filaments, R.H.D., dip left.
416	12	60/40	—	Unified European	Transverse shielded filaments, R.H.D.
970	2.5	.2 amps.	Single	Miniature Edison screw cap	Coil.
987	12	2.2	Single	Miniature Edison screw cap	Coil.
989	12	6	Single	Miniature centre contact	Coil.

STARTING MOTORS


Model	CA45C12-2	CA45C12-3
Part No.	1320023	1320033
Sleeve, pinion spring	5933-350	5933-350
Key, set	5933-268	5933-268
Clip, sleeve	5933-375	5933-375
Spring, pinion return	5933-125	5933-125
Pinion	5933-332A	5933-332A
Ball, steel	NC7-3	NC7-3
Collar, locking	5933-295	5933-295
Spring, lock	5933-508	5933-508
Collar, trip	5933-345	5933-345
Circlip, trip collar	5876-51	5876-51
Armature	A579	A579
Washer, shim, .008"	5936-17	5936-17
Bolt, through	5933-147	5933-147
Washer, spring, through bolt	5001-31A	5001-31A
Cover band	5933-235	5933-235
Screw, cover band	NS37-47Z1	NS37-47Z1
Washer, cover band screw	NW1-10Z1	NW1-10Z1
Nut, cover band screw	5462-127	5462-127
Screw, pole	5933-160	5933-160
Coils, field	F453	F409
Bearing, drive end	5933-44	5933-44
Plug, oil	5933-450	5933-450
Spring, oiler	5933-447	5933-447
Washer, plain, large terminal	NW1-22Z1	NW1-22Z1
Washer, spring, large terminal	5001-31A	5001-31A
Nut, large terminal	5330-262C	5330-262C
Washer, plain, small terminal	NW1-10Z1	NW1-10Z1
Washer, spring, small terminal	5244-22	5244-22
Nut, small terminal	5330-345C	5330-345C
Resistor	5933-361	5933-361
Solenoid assembly	5933-326	5933-326A
Coil and plate	5933-569	5933-323
Plate and contact	5933-311	5933-311
Trigger and guide	5933-320	5933-320
Spring, trigger	5933-33	5933-33
Stop, moving contact	5933-317	5933-317
Rivet, trigger and stop	5336-255	5336-255
Spring, contact return	5933-325	5933-325
Contact, moving	5933-316	5933-316
Screw, moving contact	5335-699	5335-699
Washer, spring, moving contact screw	5244-22	5244-22
Spring, main contact	5933-108	5933-108
Commutator end shield assembly	5933-359	5933-358
Spring, brush	5933-336	5933-336
Bush, bearing	5846-54A	5846-54A
Washer, spring, terminal	5001-31A	5001-31A
Nut, terminal	5330-262C	5330-262C
Screw, brush fixing	NS37-10Z1	NS37-10Z1
Washer, spring, screw	5244-22	5244-22
Brush	5933-337	5933-337
Spring, shaft	5933-509	5933-509
Ball, steel	NC7-7	NC7-7
Washer, thrust, tab	5933-510	5933-510
Washer, thrust, plain	5936-163	5936-163
Clip, end cap	5933-64C	5933-64C
Washer, shim, .008"	5936-17	5936-17
End cap	5933-284	5933-284

HEATER SWITCH


Model	108-2
Part No.	1823420
Base, with contacts	5597-40
Knob, with contacts	5597-14A
Screw, cover and base	NS100-4Z1
Nut, terminal, thick	5330-19A
Nut, terminal, thin	5068-9

FUSE BOX

Model	5ML
Part No.	1800700
Carrier, fuse	5551-38
Screw, grub, terminal	5548-43
Cover	5604-7
Screw, cover	5604-11

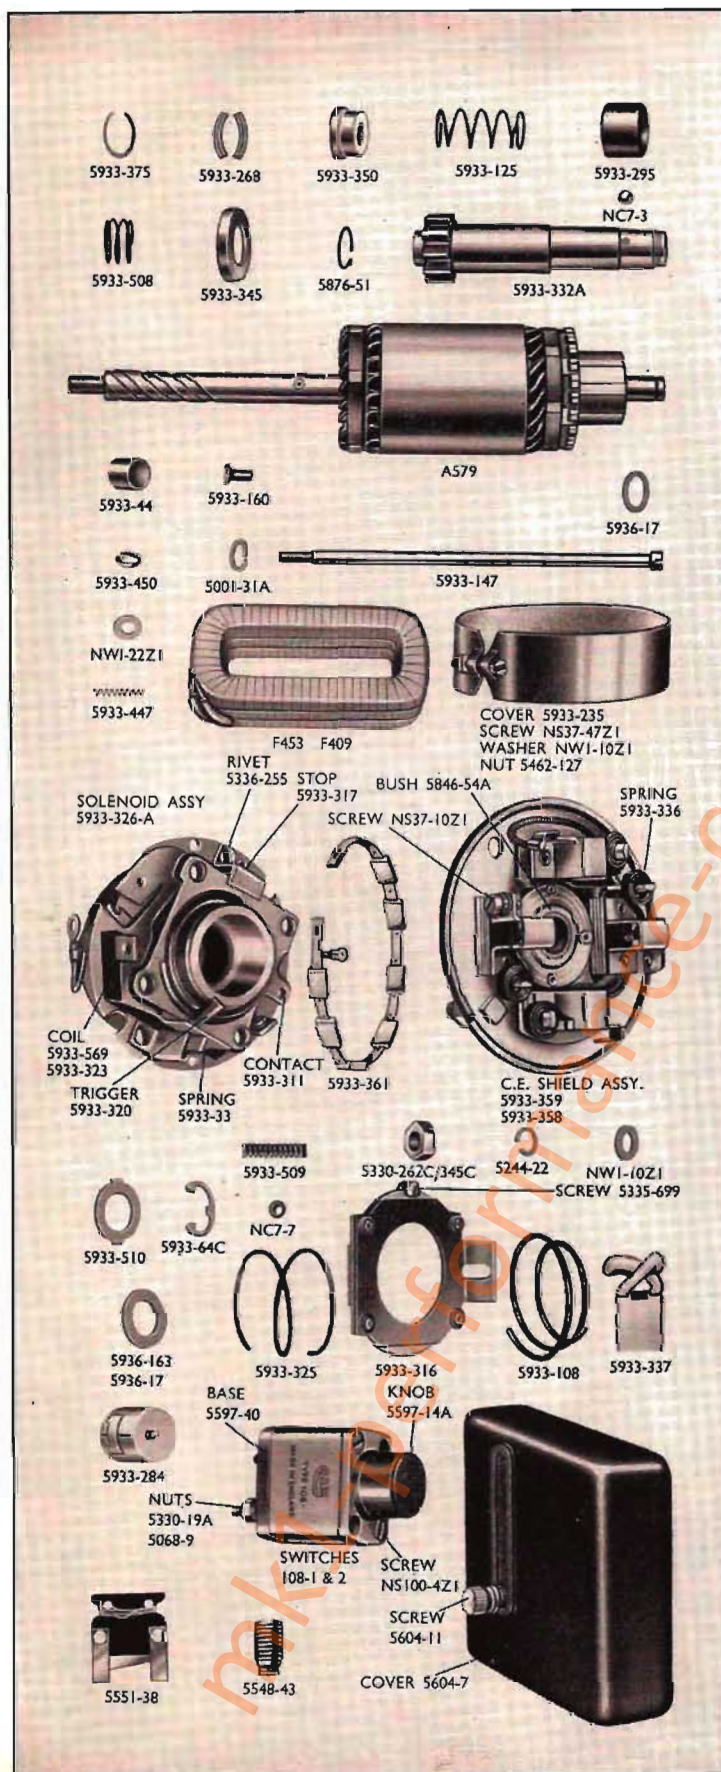 

INJECTION PUMPS

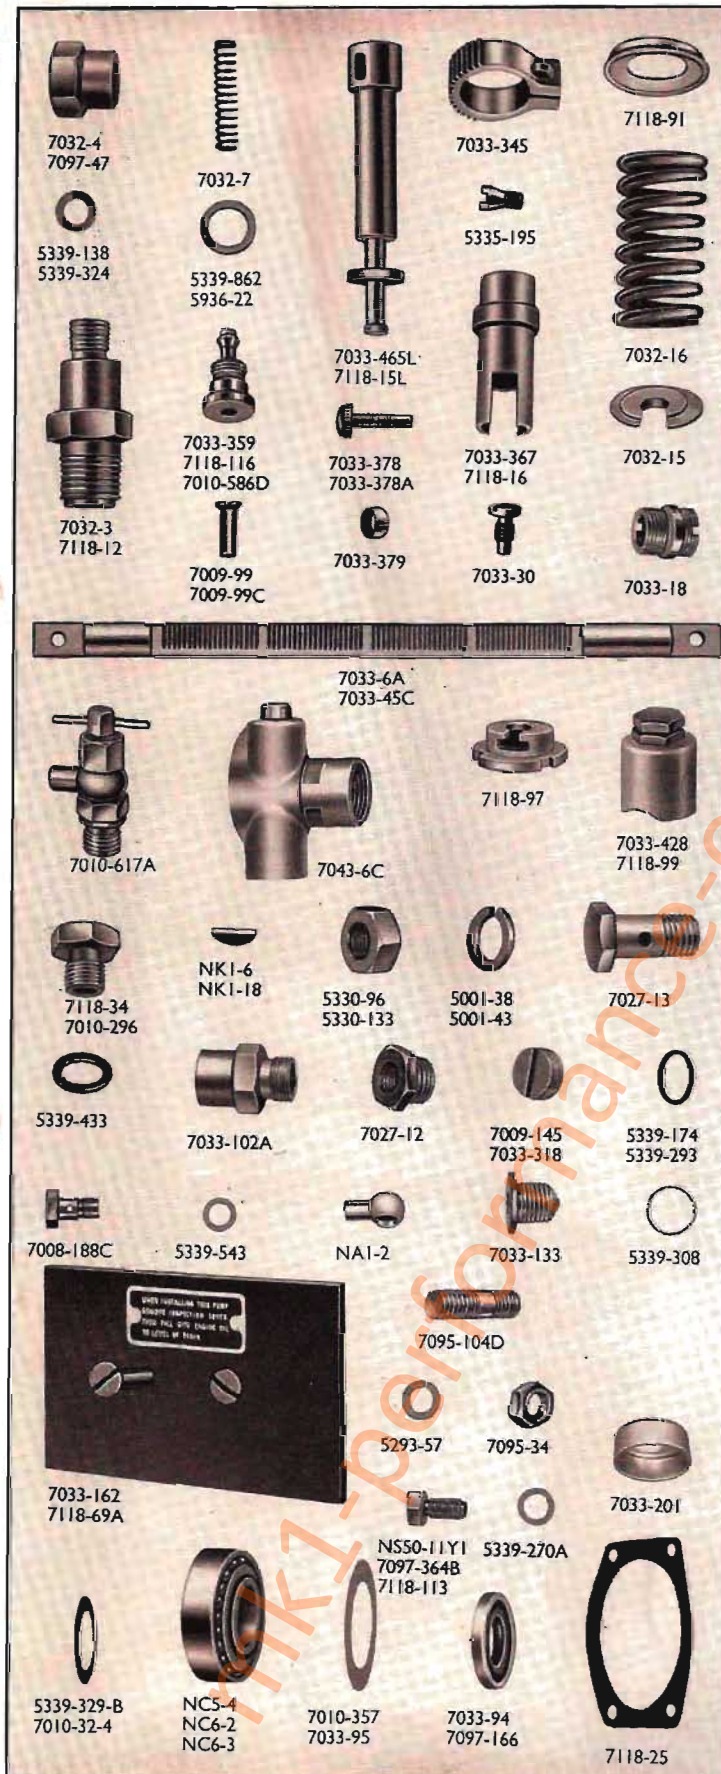 

Model	...	...	...	...	...	BPE4A65U 210S635SEL	AAR6B75/72
Detailed Parts							
Nut, delivery union	...	...	...	...	...	7032-4	7097-47
Washer, delivery union	...	...	...	...	...	5339-324	5339-138
Holder, delivery valve	...	...	...	...	...	7032-3	7118-12
Peg, valve spring	...	...	...	...	...	7009-99	7009-99C
Spring, delivery valve	...	...	...	...	...	7032-7	7032-7
Joint, delivery valve	...	...	...	...	...	5936-22	5339-862
Delivery valve	...	...	...	...	...	7033-359	7010-586D
Element	...	...	...	...	...	7033-465L	7118-15L
Pin, barrel locking	...	...	...	...	...	7033-378	7033-378A
Cup, sealing, barrel pin	...	...	...	...	...	7033-379	7033-379
Quadrant	...	...	...	...	...	7033-345	7033-345
Screw, quadrant	...	...	...	...	...	5335-195	5335-195
Sleeve, control	...	...	...	...	...	7033-367	7118-16
Plate, spring, upper	...	...	...	...	...	7118-91	7118-91
Spring, plunger	...	...	...	...	...	7032-16	7032-16
Plate, spring, lower	...	...	...	...	...	7032-15	—
Rod, control	...	...	...	...	...	7033-6A	7033-45C
Bush, control rod	...	...	...	...	...	7033-18	7033-18
Screw, control rod locating	...	...	...	...	...	7033-30	—
Cock, air vent	...	...	...	...	...	7010-617A	—
Screw, air vent	...	...	...	...	...	7010-296	7118-34
Joint, air vent	...	...	...	...	...	5339-433	5339-543
Excess fuel device	...	...	...	...	...	7043-6C	—
Key, camshaft	...	...	...	...	...	NK1-18	NK1-6
Nut, camshaft	...	...	...	...	...	5330-133	5330-96
Washer, spring, camshaft	...	...	...	...	...	5001-43	5001-38
Adjuster, tappet	...	...	...	...	...	—	7118-97
Tappet assembly	...	...	...	...	...	7033-428	7118-99
Cover, inspection	...	...	...	...	...	7033-162	7118-69A
Stud, inlet connection	...	...	...	...	...	7027-13	—
Adaptor, inlet	...	...	...	...	...	7033-102A	7027-12
Joint, inlet adaptor	...	...	...	...	...	5339-433	5339-174
Plug, closing	...	...	...	...	...	7033-318	7009-145
Joint, closing plug	...	...	...	...	...	5339-174	5339-293
Stud, oil drain	...	...	...	...	...	7008-188C	7008-188C
Joint, banjo, oil drain	...	...	...	...	...	5339-543	5339-543
Banjo, oil drain	...	...	...	...	...	NA1-2	NA1-2
Body, oil drain	...	...	...	...	...	7033-133	—
Joint, oil drain body	...	...	...	...	...	5339-308	—
Stud or bolt, end plate	...	...	...	...	...	7097-364B	7095-104D
Washer, spring	...	...	...	...	...	5293-57	5293-57
Nut, end plate stud	...	...	...	...	...	—	7095-34
Shim, camshaft	...	...	...	...	...	5339-329-B	7010-32-4
Bearing, ball	...	...	...	...	...	NC6-2	NC6-3
Bearing, roller	...	...	...	...	...	NC5-4	—
Shim, oil seal	...	...	...	...	...	7033-95	7010-357
Seal, oil	...	...	...	...	...	7033-94	7097-166
Plug, base	...	...	...	...	...	7033-201	7033-201
Screw, plugging, housing	...	...	...	...	...	—	NS50-11Y1
Joint, plugging screw	...	...	...	...	...	—	5339-270A
Gasket, end plate	...	...	...	...	...	—	7118-25
Camshaft	...	...	...	...	...	7033-33A	7118-43

Model	...	...	...	...	...	AAR6B75/93
Detailed Parts						
Delivery valve	...	...	...	...	...	7118-116
Bolt, end plate	...	...	...	...	...	7118-113
Camshaft	...	...	...	...	...	7118-48A


Less closing plug and joint, end plate stud and nut
Other details as AAR6B75/72

GOVERNORS


Model	...	...	BEPBMZ80A131	LPE14
Detailed Parts				
Nut, locking, idling sleeve	...	...	7008-150A	—
Sleeve, idling	...	...	7034-614	—
Spring, idling	...	...	7034-599	—
Pin, control	...	...	7034-37A	—
Union, pipe	...	...	7034-66C	7034-160
Bush, housing fixing	...	...	7034-9	—
Screw, housing fixing	...	...	NS52-20Y1	NS19-16Y1
Washer, housing screw	...	...	5001-31	5936-77
Screw, breather cap	...	...	NS50-11Y1	5334-85B
Washer, spring, breather	...	...	5293-57	5293-57
Cap, breather	...	...	7034-465	7034-465
Pad, breather	...	...	7034-464A	7034-464A
Gauge, breather	...	...	7034-463A	7034-463A
Screw, maximum fuel	...	...	—	7097-132A
Nut, maximum fuel screw	...	...	—	7095-34A
Gasket, housing	...	...	7076-60	7118-22
Screw, cover fixing	...	...	NS73-17Y1	NS43-22Y1
Washer, spring, coverscrew	...	...	—	5244-22
Diaphragm	...	...	7034-19A	7034-19D
Spring, main	...	...	7034-253	7034-523
Idling stop	...	...	—	7034-484A
Pin, diaphragm	...	...	7034-10	—
Pin, split	...	...	NJ1-21	—
Nut, diaphragm pin	...	...	5330-108	—
Washer, plain, pin	...	...	5339-270	—
Washer, spring, pin	...	...	5001-5	—
Clip, spring, spindle	...	...	7023-706	7023-706
Collar or washer, spindle	...	...	7034-287	5339-846B
Collar, recessed, spindle	...	...	7034-287A	—
Ring, spindle seal	...	...	5855-30AL	7034-559
Pawl	...	...	7034-602	7034-827
Pin, grooved, pawl	...	...	7115-114A	7115-114A
Spring, pawl	...	...	7034-6C	7034-828
Spindle	...	...	7034-610	7034-740
Cap, spindle, lever end	...	...	—	7034-560
Cap, spindle, blank	...	...	—	7034-560A
Lever, operating	...	...	7034-752	7034-752D
Bolt, housing fixing	...	...	7097-364	7097-364
Washer, spring, fixing bolt	...	...	5293-57	5293-57
Screw, guide block	...	...	—	NS50-13Y1
Washer, plain, guide block	...	...	—	5339-253
Washer, tab, guide block	...	...	—	7118-107
Bolt, guide	...	...	—	7118-38
Washer, spring, guide bolt	...	...	—	5293-57
Block, guide	...	...	—	7034-809A

VENTURI UNITS

Model	...	...	BEP/K42/42/111S 6231900	BEP/K50/50/120 6232100
Detailed Parts				
Butterfly valve	...	...	7034-89C	7034-593
Spindle	...	...	7034-262	7034-710A
Washer, plain, spindle	...	...	5339-236	5339-236
Washer, shim, spindle	...	...	5339-345	—
Ring, seal, spindle	...	...	—	5855-30AL
Collar, spindle	...	...	7034-52	—
Pin, locating	...	...	7034-53	—
Cup, spindle seal	...	...	—	7034-594
Screw, stop	...	...	5335-229	5335-299
Washer, plain, stop screw	...	...	5339-270	5339-270
Washer, spring, stop screw	...	...	5293-57	5293-57
Nut, stop screw	...	...	5330-99B	5330-99B
Banjo, connection	...	...	7034-65	7034-584
Tube, pitot	...	...	7034-88K	—
Venturi, auxiliary	...	...	7034-244	—
Rivet, butterfly valve	...	...	—	5336-242
Plug	...	...	7034-334	—
Stud, connection	...	...	7034-86	7034-767
Joint, connection stud	...	...	5339-333	5936-58G
Union, pipe	...	...	—	7034-766
Lever, operating	...	...	7034-28	7034-427C

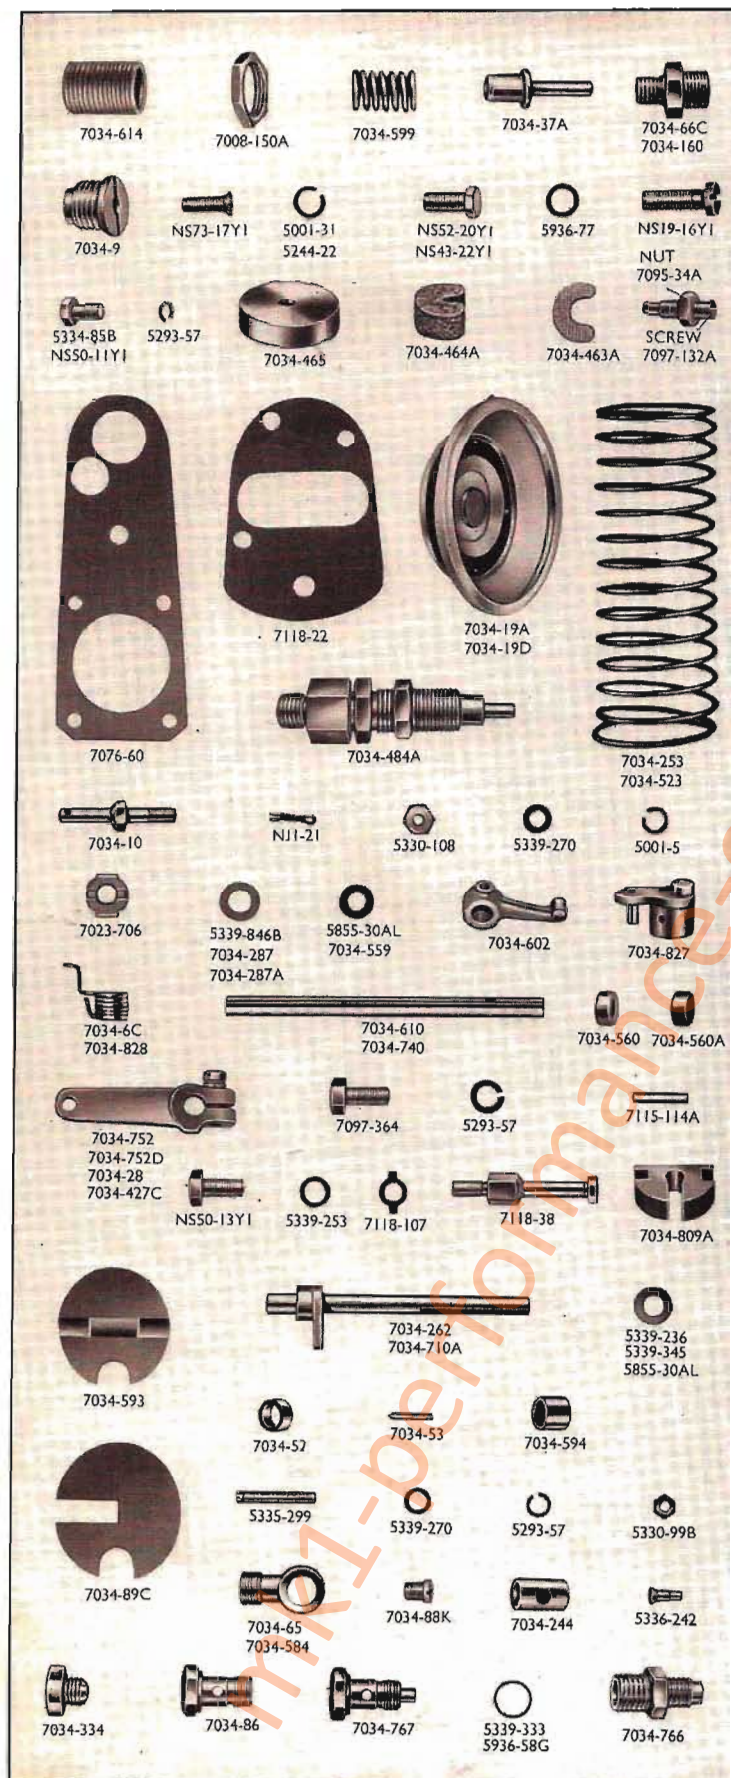 

GOVERNORS

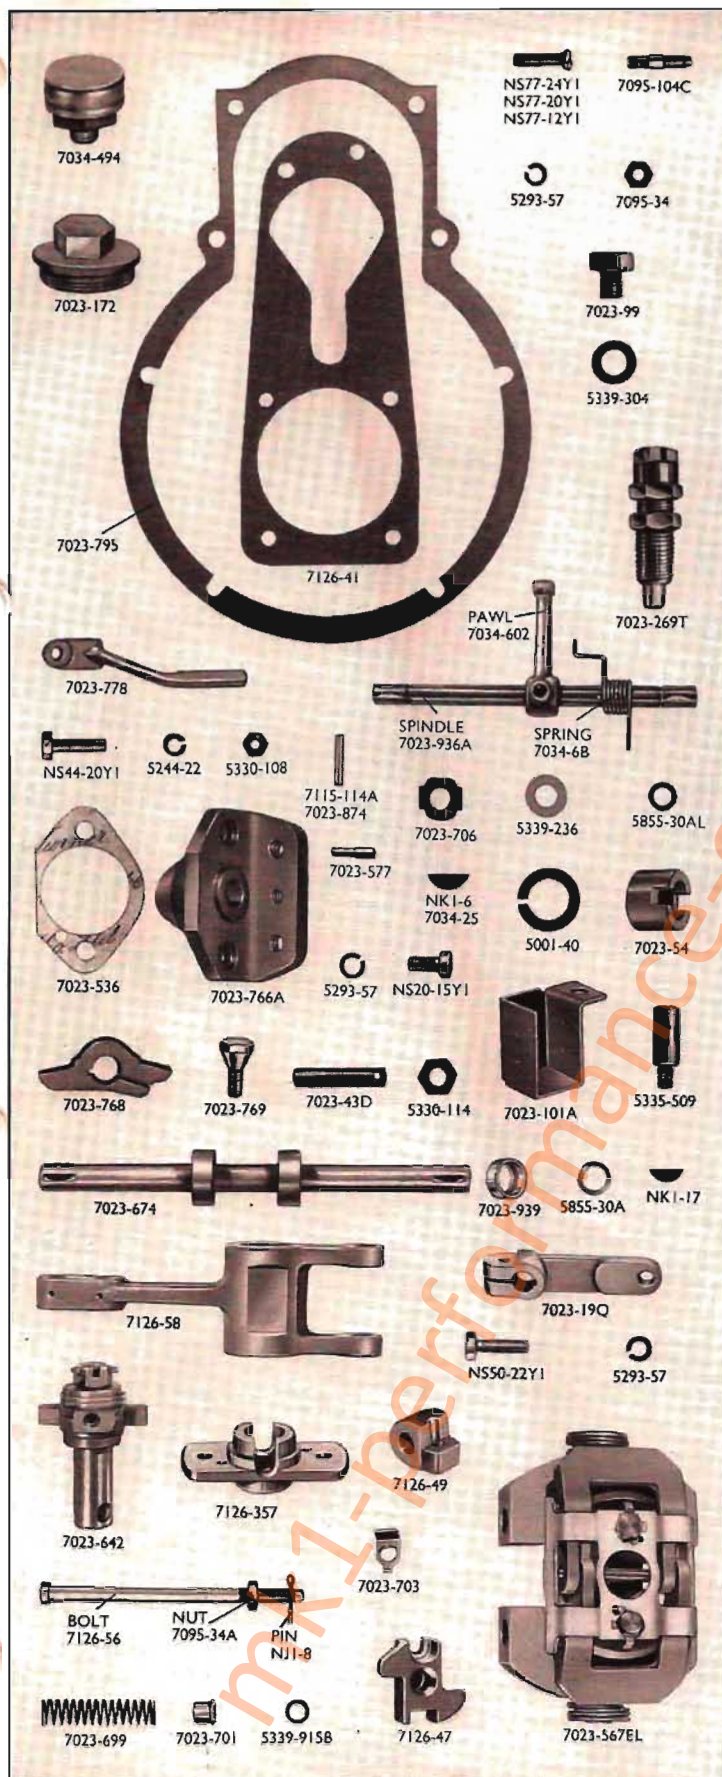 


Model	...	...	...	...	LWB22/250/1230
Detailed Parts					
Breather	...	...	...	...	7034-494
Plug, inspection	...	...	...	...	7023-172
Gasket, cover	...	...	...	...	7023-795
Gasket, housing	...	...	...	...	7126-41
Screw, cover fixing, long	...	...	...	...	NS77-24Y1
Screw, cover fixing, short	...	...	...	...	NS77-20Y1
Screw, housing fixing	...	...	...	...	NS77-12Y1
Stud, housing fixing	...	...	...	...	7095-104C
Washer, spring, housing stud	...	...	...	...	5293-57
Nut, housing stud	...	...	...	...	7095-34
Plug, oil drain	...	...	...	...	7023-99
Joint, oil drain plug	...	...	...	...	5339-304
Idling stop	...	...	...	...	7023-269T
Spindle, manual stop	...	...	...	...	7023-936A
Clip, spring, spindle	...	...	...	...	7023-706
Washer, plain, spindle	...	...	...	...	5339-236
Seal, spindle	...	...	...	...	5855-30AL
Pawl, manual stop	...	...	...	...	7034-602
Spring, stop pawl	...	...	...	...	7034-6B
Pin, stop pawl fixing	...	...	...	...	7115-114A
Key, stop spindle	...	...	...	...	7034-25
Lever, manual stop	...	...	...	...	7023-778
Screw, manual stop lever	...	...	...	...	NS44-20Y1
Washer, spring, lever screw	...	...	...	...	5244-22
Nut, stop lever screw	...	...	...	...	5330-108
Key, camshaft	...	...	...	...	NK1-6
Washer, spring, camshaft	...	...	...	...	5001-40
Nut, camshaft	...	...	...	...	7023-54
Gasket, bearing flange	...	...	...	...	7023-536
Flange, bearing	...	...	...	...	7023-766A
Dowel, bearing flange	...	...	...	...	7023-577
Screw, bearing flange fixing	...	...	...	...	NS20-15Y1
Washer, spring, flange screw	...	...	...	...	5293-57
Pawl, stop	...	...	...	...	7023-768
Screw, stop pawl	...	...	...	...	7023-769
Cover, pawl sealing	...	...	...	...	7023-101A
Screw, pawl cover	...	...	...	...	5335-509
Stud, adjusting	...	...	...	...	7023-43D
Nut, adjusting stud	...	...	...	...	5330-114
Shaft, eccentric	...	...	...	...	7023-764
Ring, seal, shaft	...	...	...	...	5855-30A
Collar, shaft retaining	...	...	...	...	7023-939
Key, eccentric shaft	...	...	...	...	NK1-17
Lever, control	...	...	...	...	7023-19Q
Screw, control lever	...	...	...	...	NS50-22Y1
Washer, spring, control lever screw	...	...	...	...	5293-57
Lever, forked	...	...	...	...	7126-58
Pin, forked lever	...	...	...	...	7023-874
Link pin and crosshead	...	...	...	...	7023-642
Bush, guide	...	...	...	...	7126-357
Link, forked lever	...	...	...	...	7126-49
Bolt, link	...	...	...	...	7126-56
Nut, link bolt	...	...	...	...	7095-34A
Pin, split, link bolt	...	...	...	...	NJ1-8
Washer, tab, link bolt	...	...	...	...	7023-703
Spring, linkage	...	...	...	...	7023-699
Seat, linkage spring	...	...	...	...	7023-701
Washer, plain, linkage	...	...	...	...	5339-915B
Block, guide	...	...	...	...	7126-47
Element assembly	...	...	...	...	7023-567EL

NOZZLE HOLDERS


Model	BKB35S668	BKBL67S668
Part No.	5324001	5215402
Detailed Parts		
Stud, leak-off	7008-188	7008-188
Joint, leak-off stud	5339-543	5339-543
Banjo, leak-off, single	NA1-2	NA1-2
Banjo, leak-off, double	7008-315	7008-315
Nut, nozzle holder cap	7008-226	7008-226
Joint, holder cap nut	5339-542	5339-542
Nut, locking	5330-183	5330-183
Nut, spring cap	7008-599A	7008-599A
Shim, spring cap nut	5339-593	5339-593
Spring	7008-7	7008-7
Spindle	7008-49E	7008-49F
Nut, nozzle cap	7008-198	7008-187
Dowel	7008-428A-C	7008-428A-C
Nut, fuel inlet	7032-4	7032-4
Washer, fuel inlet... ..	5339-324	5339-324
Connection, fuel inlet	7008-185	7008-185
Joint, fuel inlet connection	5339-161	5339-161

FILTER

Model	F2B9
Part No.	5830122
Detailed Parts	
Ring, cover seal	5339-256
Element	7111-44
Bolt, filter	7111-258
Plug, vent and drain	7111-257
Washer, plug	5936-58R
Washer, filter bolt	5936-58U
Bolt, centre	7111-250
Sleeve, locating	7111-255
Washer, flat	NW2-153Z1
Ring, seal, lower	7111-243
Spring	7111-301
Ring, seal, base cap	7111-256
Cup, base	7111-190
Circlip	7126-173
Plug, closing	7097-81C
Stud, connection	7027-13C

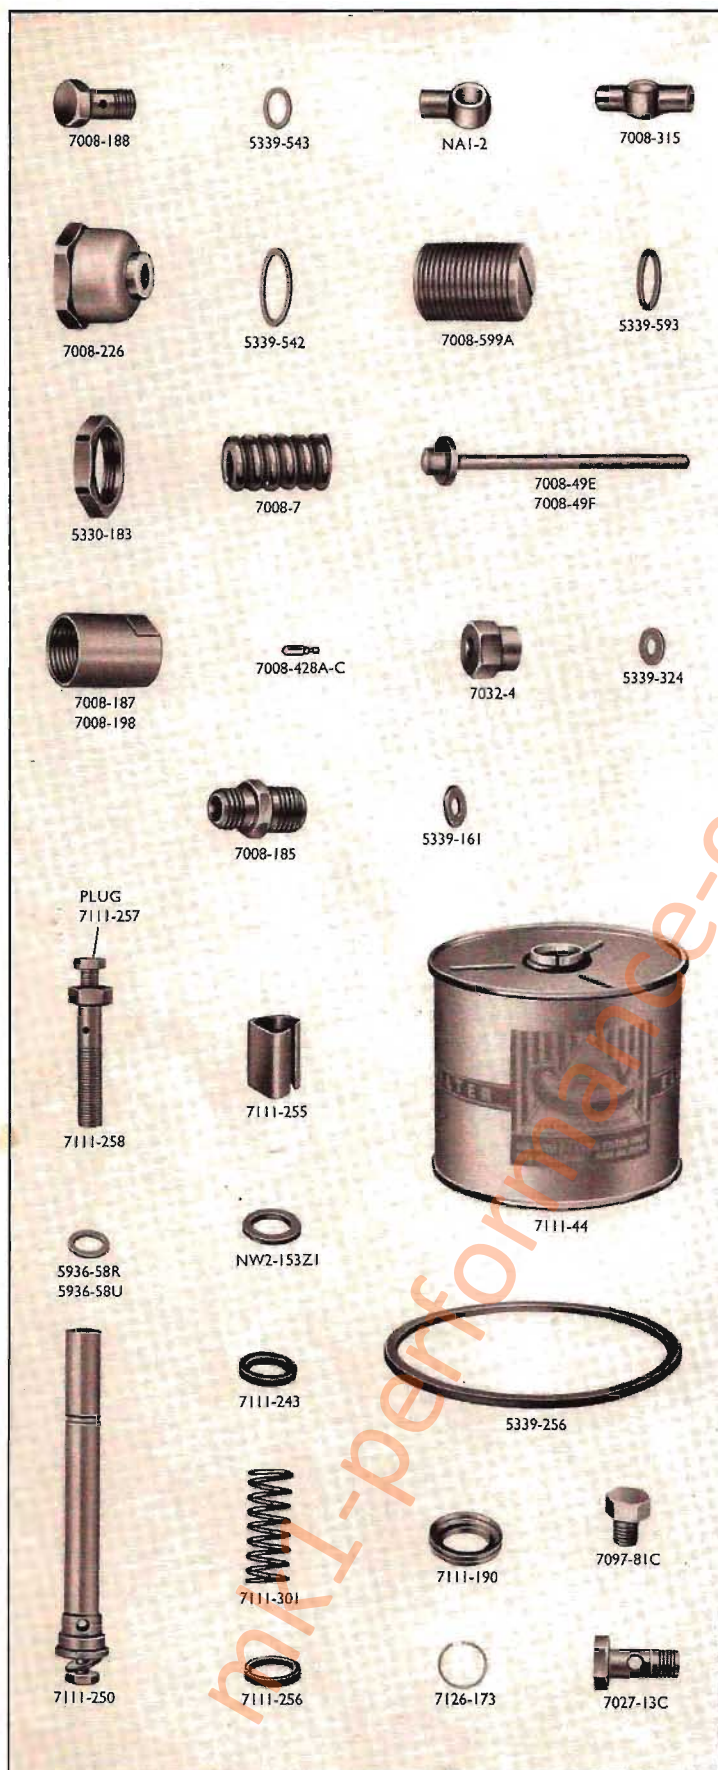 

ISOLATION SWITCH

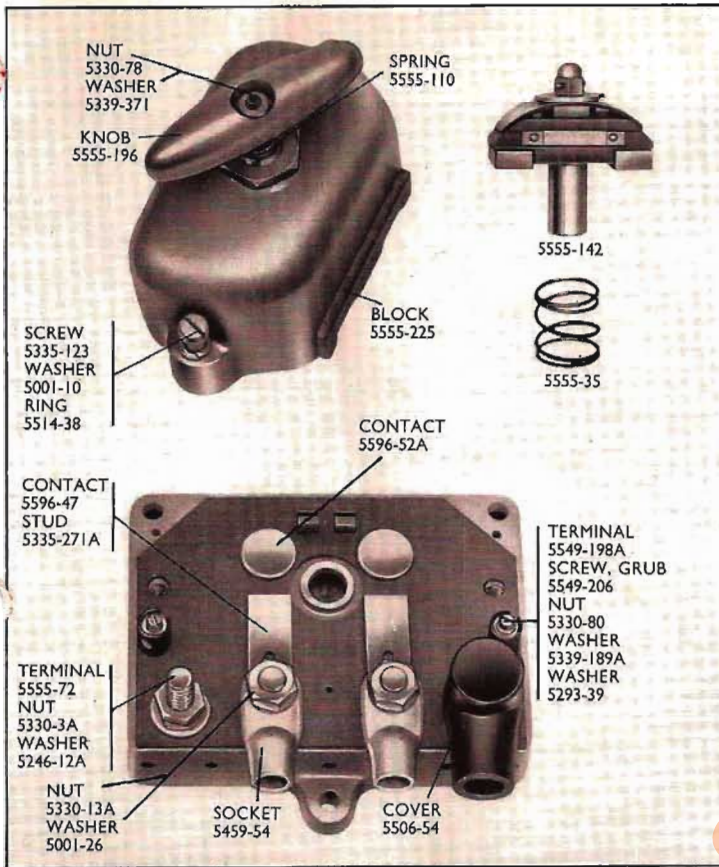 

Model	...	...	...	...	134-19
Part No.	...	...	...	...	1824890
Detailed Parts					
Knob	...	...	...	...	5555-196
Nut, knob fixing	...	...	...	...	5330-78
Washer, plain, knob	...	...	...	...	5339-371
Spring, plunger	...	...	...	...	5555-110
Block, insulator	...	...	...	...	5555-225
Screw, cover fixing	...	...	...	...	5335-123
Washer, spring, cover screw	...	...	...	...	5001-10
Ring, retaining, cover screw	...	...	...	...	5514-38
Terminal, small	...	...	...	...	5549-198A
Screw, grub, terminal	...	...	...	...	5549-206
Nut, small terminal	...	...	...	...	5330-80
Washer, plain, small terminal	...	...	...	...	5339-189A
Washer, spring, small terminal	...	...	...	...	5293-39
Strip, contact	...	...	...	...	5596-47
Stud, contact strip fixing	...	...	...	...	5335-271A
Contact stud	...	...	...	...	5596-52A
Terminal, large	...	...	...	...	5555-72
Nut, large terminal and contact stud	...	...	...	...	5330-3A
Washer, plain, large terminal	...	...	...	...	5246-12A
Nut, thick, large terminal	...	...	...	...	5330-13A
Washer, spring, large terminal	...	...	...	...	5001-26
Socket, cable	...	...	...	...	5459-54
Cover, rubber, cable socket	...	...	...	...	5506-54
Contact holder assembly	...	...	...	...	5555-142
Spring, contact	...	...	...	...	5555-35